

ABB-Welcome

DE

EN

FR

NL

RU

PL

NO

SW

FI

IT

ES

CN

83325/2-5..

Videoverteiler Außen

Outdoor video distributor

Distributeur vidéo extérieur

Videoverdeler buiten

Внешний

видеораспределитель

Rozdzielacz wideo

Videofordeler utendørs

Videofördelare, yttre

Videopakaja, ulko

Splitter video esterno

Distribuidor de video

室外视频分配器



1	Safety.....	3
2	Intended use.....	3
3	Environment.....	3
3.1	ABB devices.....	3
4	User Manual.....	3
5	Technical data.....	4
6	Mounting/Installation.....	5
6.1	Requirements for the electrician.....	5
6.2	General installation instructions.....	5
6.3	Mounting.....	6
6.4	Connection.....	6

1 Safety



Warning

Electric voltage!

Dangerous currents flow through the body when coming into direct or indirect contact with live components.

This can result in electric shock, burns or even death.

- Disconnect the mains power supply prior to installation and/or disassembly!
- Permit work on the 110-240 V supply system to be performed only by specialist staff!

2 Intended use

The 83325/2-500 video distributor is an integral part of the ABB-Welcome door entry system and operates exclusively with components from this system. The device must only be installed on mounting rails according to DIN EN 500022.

3 Environment



Consider the protection of the environment!

Used electric and electronic devices must not be disposed of with household waste.

- The device contains valuable raw materials that can be recycled. Therefore, dispose of the device at the appropriate collecting facility.

3.1 ABB devices

All packaging materials and devices from ABB bear the markings and test seals for proper disposal. Always dispose of the packaging material and electric devices and their components via authorized collecting facilities and disposal companies.

ABB products meet the legal requirements, in particular the laws governing electronic and electrical devices and the REACH ordinance.

(EU-Directive 2002/96/EG WEEE and 2002/95/EG RoHS)

(EU-REACH ordinance and law for the implementation of the ordinance (EG) No.1907/2006)

4 User manual

Detailed information for planning ABB-Welcome systems is contained in the user manual. Download at www.Busch-Jaeger.com.

5 Technical data

Designation	Value
Operating temperature (EN 50486)	-5 °C - +45 °C
Storage temperature	-20 °C - +70 °C
Protection	IP 20
Single-wire clamps	2 x 0.28 mm ² - 2 x 0.75 mm ²
Fine-wire clamps	2 x 0.28 mm ² - 2 x 0.75 mm ²
Volume	Max. 80 dB
Bus voltage	28±2 V
Size	2 TE

6 Mounting/installation



Warning

Electric voltage!

Dangerous currents flow through the body when coming into direct or indirect contact with live components.

This can result in electric shock, burns or even death.

- Disconnect the mains power supply prior to installation and/or disassembly!
- Permit work on the 110-240 V supply system to be performed only by specialist staff!

6.1 Requirements for the electrician



Warning

Electric voltage!

Install the device only if you have the necessary electrical engineering knowledge and experience.

- Incorrect installation endangers your life and that of the user of the electrical system.
- Incorrect installation can cause serious damage to property, such as a fire.

The minimum necessary expert knowledge and requirements for the installation are as follows:

- Apply the "five safety rules" (DIN VDE 0105, EN 50110):
 1. Disconnect from power.
 2. Secure against being re-connected.
 3. Ensure there is no voltage.
 4. Connect to earth.
 5. Cover or barricade adjacent live parts.
- Use suitable personal protective clothing.
- Use only suitable tools and measuring devices.
- Check the type supply network (TN system, IT system, TT system) to secure the following power supply conditions (classic connection to ground, protective earthing, necessary additional measures, etc.).

6.2 General installation instructions

- Terminate all branches of the wiring system via a connected bus device (e.g., indoor station, outdoor station, system device).
- Do not install the system controller directly next to the bell transformer and other power supplies (to avoid interference).
- Do not install the wires of the system bus together with 230 V wires.
- Do not use common cables for the connecting wires of the door openers and wires of the system bus.
- Avoid bridges between different cable types.
- Use only two wires for the system bus in a four-core or multi-core cable.
- When looping, never install the incoming and outgoing bus inside the same cable.
- Never install the internal and external bus inside the same cable.

6.3 Mounting

The device 83325/2-5.. must only be installed on mounting rails according to DIN EN 500022.

6.4 Connection

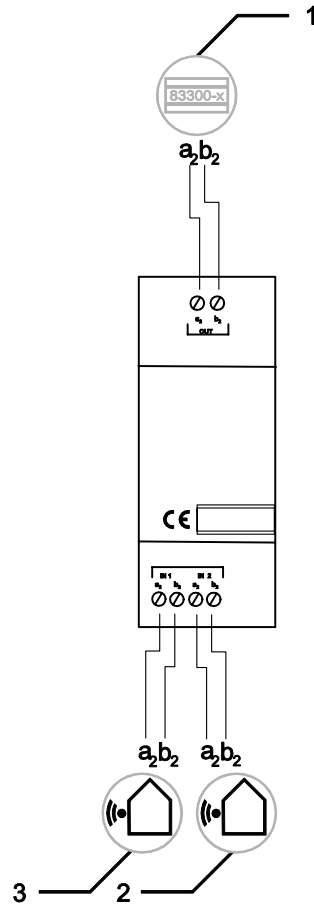


Fig. 1:

No.	Function
1	Systemzentrale/Außenbus System controller/outdoor bus Centrale système/bus extérieur Systeemcentrale/buitenbus Системный контроллер/внешняя шина Centrala systemu/magistrala zewnętrzna Systemsentral/utendørs-bus Systemcentral/ytterbuss Järjestelmäkeskus/ulkoväylä Centralina/bus esterno Central del sistema/Bus exterior 系统控制器/室外总线
2 / 3	Außenstationen/Außenbus Outdoor stations/outdoor bus Interphones extérieurs/bus extérieur

	Buitenposten/buitenbus Внешние переговорные пункты/внешняя шина Stacje zewnętrzne/magistrala zewnętrzna Utendørsstasjoner/utendørs-bus Ytterstationer/ytterbuss Ulkoasemat/ulkoväylä Stazioni esterne/bus esterno Estaciones exteriores/Bus exterior 门口机/室外总线
--	---

Notice

We reserve the right to at all times make technical changes as well as changes in the contents of this document without prior notice.

The detailed specifications agreed to at the time of ordering apply to all orders. ABB accepts no responsibility for possible errors or incompleteness in this document.

We reserve all rights to this document and the topics and illustrations contained therein. The document and its contents, or extracts thereof, must not be reproduced, transmitted or reused by third parties without prior written consent by ABB.