



AMPERO SWITCH+

Momentary Footswitch

Operating Guide

For Ampero II Stomp & Ampero II Stage



HOTONE
DESIGN INSPIRATION


※In the interest of product improvement, the specifications and/or the content of products (including but not limited to appearances, packaging design, manual content, accessories, size, parameters and display screen), are subject to change without prior notice. Please check with local supplier for exact offers. Specifications and features (including but not limited to appearances, colors and size) may vary by model owing to environmental factors, and all images are illustrative.

Preface

This operating guide is for how to set the Ampero Switch+ on Ampero II Stomp or Ampero II Stage. On both units, Ampero Switch+ is connected and set in the same way, so the following steps will take Ampero II Stomp as an example. If you want to set the Ampero Switch+ to control other device, please refer to the related contents of your device manual.


How to connect

Connect one end of the TRS jack to Ampero Switch+ and the other end to the **EXP/CTRL(FS 4/5)** jack of Ampero II Stomp with the provided TRS cable

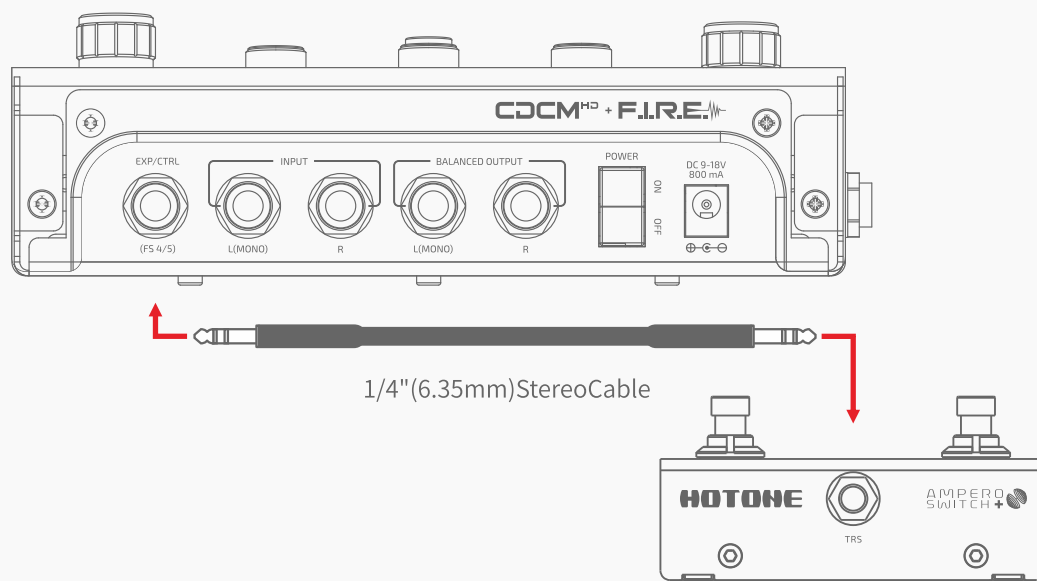

How to set up

1. In the main menu, click **"GLOBAL"** and then **"EXP2/FS"**. Set **"MODE"** to **"Dual FS"** in the selection panel

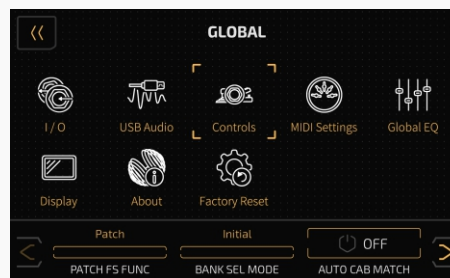

How to set up

2. "FS4 TAP" and "FS5 TAP" in the selection panel will become editable. The default is set to bank-/+.



3. "FS4 TAP" corresponds to Ampero Switch Footswitch A and "FS5 TAP" corresponds to Ampero Switch Footswitch B.

They can be set up as Follows:

Looper Rec/Play: Record/play loop phrases

Looper Stop: Stops looper playback

Looper: Enter/exit looper menu

Drum On/Off: Drum rhythm play/stop

Drum: Enter/exit drum menu

Tuner: Enter/exit tuner

Bank+/-: Change banks by toggling up or down

Tap Tempo: Tap tempo function

Patch+/-: Change patches by toggling up or down

EXP On/Off: Switching built-in expression pedal on/off

FX1, FX2, AMP, NR, CAB, EQ, FX3, DLY, RVB On/Off: Turn on/off each effect block

Plus:

When set EXP/CTRL FUNC to Single FS, the FS4 TAP defaults to Tap Tempo;

When set EXP/CTRL FUNC to Dual FS, the FS4 TAP defaults to Bank- and FS5 TAP defaults to Bank+.