


PRODUCT MANUAL

# ABB i-bus® KNX

## SA/S x.16.6.2

### Switch Actuator

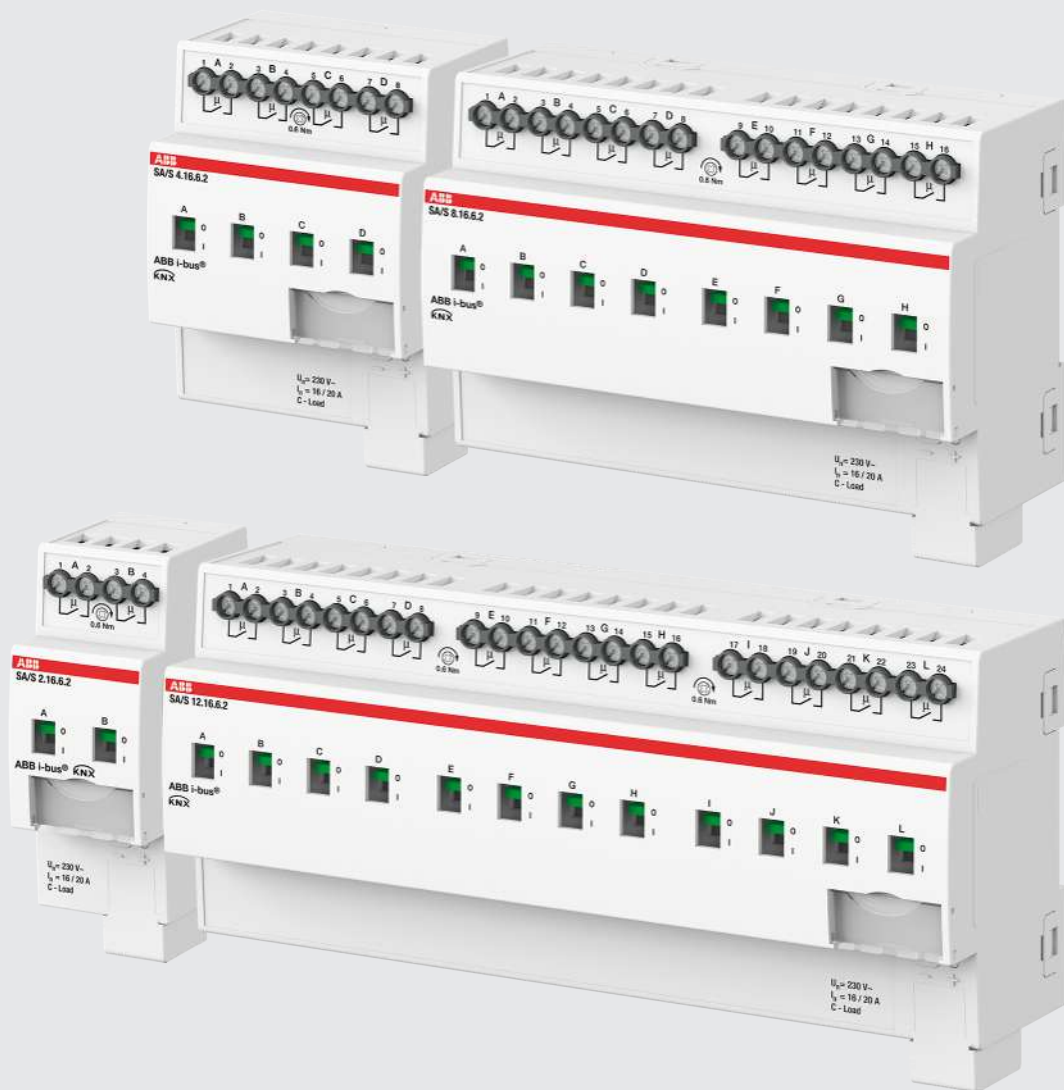

# Table of contents

<b>1</b>	<b>About this document .....</b>	<b>8</b>
1.1	Using the product manual .....	8
1.2	Legal disclaimer .....	8
1.3	Explanation of symbols .....	8
<b>2</b>	<b>Safety .....</b>	<b>10</b>
2.1	General safety instructions.....	10
2.2	Qualification of the specialist personnel.....	10
2.3	Proper use .....	10
<b>3</b>	<b>Product overview .....</b>	<b>11</b>
3.1	Device description .....	11
3.1.1	Toggle switches.....	11
3.2	Product name description .....	11
3.3	Ordering details .....	11
3.4	Connections .....	12
3.4.1	Inputs.....	12
3.4.2	Outputs .....	12
3.5	Switch Actuator SA/S 2.16.6.2, 2-fold, 16 A, C load with energy function, MDRC .....	13
3.5.1	Dimension drawing .....	14
3.5.2	Connection diagram .....	15
3.5.3	Operating and display elements .....	16
3.5.4	Technical data .....	17
3.6	Switch Actuator SA/S 4.16.6.2, 4-fold, 16 A, C load with energy function, MDRC.....	20
3.6.1	Dimension drawing .....	21
3.6.2	Connection diagram .....	22
3.6.3	Operating and display elements .....	23
3.6.4	Technical data .....	24
3.7	Switch Actuator SA/S 8.16.6.2, 8-fold, 16 A, C load with energy function, MDRC.....	27
3.7.1	Dimension drawing .....	28
3.7.2	Connection diagram .....	29
3.7.3	Operating and display elements .....	30
3.7.4	Technical data .....	31
3.8	Switch Actuator SA/S 12.16.6.2, 12-fold, 16 A, C load with energy function, MDRC.....	34
3.8.1	Dimension drawing .....	35
3.8.2	Connection diagram .....	36
3.8.3	Operating and display elements .....	37
3.8.4	Technical data .....	38
<b>4</b>	<b>Function.....</b>	<b>41</b>
4.1	Device functions.....	41
4.2	Software functions.....	41
4.2.1	Functional overview .....	41
4.2.2	Function diagram Switch Actuator.....	42
4.2.3	Safety functions.....	43
4.2.4	Function Logic .....	44
4.2.5	Function Threshold .....	45
4.2.6	Function Load shedding .....	47
4.2.7	Function Current measurement .....	52
4.2.8	Function Power calculation .....	53
4.2.9	Function Energy consumption .....	54
4.2.10	Function Load monitoring.....	56
4.2.11	Function Contact supervision.....	58
4.2.12	Function Scenes.....	59
4.2.13	Time functions .....	60

4.3	Integration into i-bus® Tool.....	64
4.4	Special operating states .....	64
4.4.1	Reaction on bus voltage failure .....	64
4.4.2	Reaction after bus voltage recovery.....	65
4.4.3	Reaction on ETS reset.....	65
4.4.4	Reaction during download .....	65
<b>5</b>	<b>Mounting and installation.....</b>	<b>66</b>
5.1	Information about mounting .....	66
5.2	Mounting on mounting rail .....	66
<b>6</b>	<b>Commissioning.....</b>	<b>67</b>
6.1	Prerequisites for commissioning .....	67
6.2	Commissioning overview .....	67
6.3	Putting device into operation .....	67
6.4	Assignment of the physical address.....	67
6.5	Software/application .....	68
6.5.1	Download reaction .....	68
6.5.2	Copying, exchanging and converting.....	68
<b>7</b>	<b>Parameters.....</b>	<b>69</b>
7.1	General .....	69
7.2	Parameter windows .....	70
7.2.1	Configuration .....	70
7.2.2	Device settings .....	72
7.2.3	Safety .....	73
7.2.4	Energy group X.....	74
7.2.5	Logic/Threshold .....	81
7.2.6	Switch Actuator template.....	84
7.2.7	Energy functions template.....	85
7.2.8	Switch Actuator X.....	86
7.3	Overview of parameters .....	106
7.4	Parameter descriptions.....	110
7.4.1	Reset alarm via Group Object .....	110
7.4.2	Number of Off/On changes .....	110
7.4.3	Number of flashing cycles .....	110
7.4.4	Recall Scene x also via 1-bit Group Object.....	111
7.4.5	Output reacts to .....	111
7.4.6	Enable output X .....	111
7.4.7	Delay for switching off.....	112
7.4.8	Monitor range between thresholds.....	112
7.4.9	Description .....	112
7.4.10	Flashing if Group Object "Flashing" is.....	113
7.4.11	Data point type of Group Object "Threshold input".....	113
7.4.12	Data point type timestamp [group] .....	114
7.4.13	Data point type timestamp [channel] .....	114
7.4.14	Request Date/Time via Group Object.....	115
7.4.15	Block delay for switching on and off after bus voltage recovery .....	115
7.4.16	Block delay for switching on and off via Group Object .....	115
7.4.17	Read input Group Objects after bus voltage recovery and download .....	116
7.4.18	Energy displaying unit [group] .....	117
7.4.19	Energy displaying unit [channel] .....	117
7.4.20	Power displaying unit [group] .....	118
7.4.21	Power displaying unit [channel] .....	118
7.4.22	Current displaying unit [group].....	118
7.4.23	Current displaying unit [channel].....	119
7.4.24	Delay for switching on.....	119
7.4.25	Enable energy function x.....	119

7.4.26	Enable energy group x.....	120
7.4.27	Invert result.....	120
7.4.28	Result if upper threshold is exceeded.....	120
7.4.29	Result if lower threshold is dropped below .....	121
7.4.30	Function of the logic gate.....	121
7.4.31	Enable function Energy consumption [group] .....	123
7.4.32	Enable function Energy consumption [channel] .....	123
7.4.33	Enable function Contact supervision .....	124
7.4.34	Enable function Load shedding.....	124
7.4.35	Enable function Load monitoring [group].....	124
7.4.36	Enable function Load monitoring [channel] .....	125
7.4.37	Enable function Power calculation [group].....	125
7.4.38	Enable function Power calculation [channel].....	125
7.4.39	Enable function Safety .....	126
7.4.40	Enable function Scenes [Switch Actuator] .....	126
7.4.41	Enable function Time.....	127
7.4.42	Activate total meter [group] .....	127
7.4.43	Activate total meter [channel] .....	128
7.4.44	Reset total meter via i-bus® Tool .....	128
7.4.45	Reset total meter via Group Object [Group].....	129
7.4.46	Reset total meter via Group Object [channel] .....	130
7.4.47	In period (0 = deactivated) .....	130
7.4.48	Enable Group Object "In operation" .....	131
7.4.49	Enable Group Object "Safety priority x".....	131
7.4.50	Enable Group Object "Status Result" .....	131
7.4.51	Enable group object "Status Load shedding" .....	132
7.4.52	Enable Group Object "Request status values".....	132
7.4.53	Enable Group Objects "Status Result" and "Status Input value between thresholds" .....	133
7.4.54	Enable Group Objects "Status byte" [Switch Actuator].....	133
7.4.55	Enable Time Group Objects for setting of device time .....	134
7.4.56	Load shedding stage .....	134
7.4.57	Overwrite load shedding stage at download .....	135
7.4.58	Change load shedding stage via i-bus® Tool.....	135
7.4.59	Change load shedding stage via Group Object.....	136
7.4.60	Overwrite load threshold at download .....	136
7.4.61	Change load thresholds via i-bus® Tool.....	137
7.4.62	Change load thresholds via Group Objects [group].....	138
7.4.63	Change load thresholds via Group Objects [channel].....	139
7.4.64	Power factor (cos phi) .....	139
7.4.65	Enable Logic/Threshold x-y.....	140
7.4.66	Maximum number of sent telegrams .....	140
7.4.67	Maximum threshold (IV) [group] .....	140
7.4.68	Maximum threshold (IV) [channel] .....	141
7.4.69	Measurement unit .....	142
7.4.70	Measurement delay after contact position change .....	143
7.4.71	Min. duration of the overshoot.....	143
7.4.72	Min. duration of the undershoot .....	143
7.4.73	Minimum dwell time between the thresholds .....	144
7.4.74	Upper threshold.....	144
7.4.75	Parameter setting .....	144
7.4.76	Feedback of contact position via Group Object "Status Switch".....	145
7.4.77	Switch output reacts to central Switch Group Object.....	145
7.4.78	Switching reaction on active load shedding stage .....	146
7.4.79	Switching reaction on bus voltage failure.....	146
7.4.80	Switching reaction on revoke of load shedding stage .....	147
7.4.81	Switching reaction on cancellation of block, forced operation and safety priority .....	147
7.4.82	Switching reaction on safety priority x.....	148
7.4.83	Switching reaction on block.....	149

7.4.84	Switching reaction on forced operation.....	150
7.4.85	Threshold operation/overload (III) [group] .....	150
7.4.86	Threshold operation/overload (III) [channel] .....	150
7.4.87	Threshold Standby/Underload (I) [group] .....	151
7.4.88	Threshold Standby/Underload (I) [channel] .....	151
7.4.89	Threshold Underload/Operation (II) [group].....	152
7.4.90	Threshold Underload/Operation (II) [channel].....	152
7.4.91	Overwrite thresholds on download .....	153
7.4.92	Change thresholds via i-bus® Tool.....	153
7.4.93	Change thresholds via Group Objects .....	154
7.4.94	Sending and switching delay after bus voltage recovery .....	154
7.4.95	Sending cycle.....	155
7.4.96	Read safety Group Objects after bus voltage recovery and download.....	155
7.4.97	Voltage.....	155
7.4.98	Send Status Load .....	156
7.4.99	Status Send load as [group].....	157
7.4.100	Status Send load as [channel].....	158
7.4.101	Overwrite Scenes on download .....	158
7.4.102	Scene number.....	159
7.4.103	Enable Scene assignment x [Switch Actuator].....	159
7.4.104	GATE blocks if Group Object "Connection A" equals .....	159
7.4.105	Block staircase lighting after bus voltage recovery .....	160
7.4.106	Switching reaction of staircase lighting on telegram value 0/1.....	160
7.4.107	Block staircase lighting via Group Object .....	161
7.4.108	Staircase lighting time .....	161
7.4.109	Overwrite staircase lighting time on download.....	161
7.4.110	Restart staircase lighting time after permanent on .....	162
7.4.111	Staircase lighting time can be started again.....	162
7.4.112	Change staircase lighting time via i-bus® Tool .....	163
7.4.113	Change staircase lighting time via Group Object.....	163
7.4.114	Staircase lighting time extendable (pumping) .....	164
7.4.115	Type of monitoring [group].....	164
7.4.116	Type of monitoring [channel].....	165
7.4.117	Lower threshold.....	166
7.4.118	Reaction on result "0" [Switch Actuator] .....	167
7.4.119	Reaction on result "1" [Switch Actuator].....	168
7.4.120	Reaction on Scene recall .....	168
7.4.121	Reaction of output .....	169
7.4.122	Reaction after flashing.....	169
7.4.123	Reaction after bus voltage recovery [Switch Actuator].....	169
7.4.124	Reaction after ETS download [Switch Actuator].....	170
7.4.125	Delay.....	172
7.4.126	Warning before switching off the staircase lighting .....	172
7.4.127	Warning time .....	173
7.4.128	Send value of Group Object "Contact closed and no current flows" .....	173
7.4.129	Send value of Group Object "Contact open and current flows".....	174
7.4.130	Send value of Group Object "Status Result" .....	174
7.4.131	Send value of Group Object "Status Total meter energy consumption" .....	175
7.4.132	Send value of Group Object "Status Load shedding" .....	177
7.4.133	Send value of Group Object "Status Power" .....	177
7.4.134	Value of Group Object "Status Switch" .....	179
7.4.135	Send value of Group Object "Status Switch" .....	179
7.4.136	Send value of Group Object "Status Current".....	180
7.4.137	Value of Group Object "Connection A" after bus voltage recovery .....	181
7.4.138	Value of Group Object "Connection B" after bus voltage recovery .....	181
7.4.139	Value of Group Object when contact closed and no current flows.....	181
7.4.140	Value of Group Object when contact open and current flows .....	182
7.4.141	Value of Group Object when load On/Off [group] .....	182

7.4.142	Value of Group Object when load On/Off [channel] .....	183
7.4.143	Value of Group Object when load in operation [group].....	183
7.4.144	Value of Group Object when load in operation [channel].....	184
7.4.145	Value of Group Object when load in standby [group].....	184
7.4.146	Value of Group Object when load in standby [channel].....	185
7.4.147	Value of Group Object when load in overload [group].....	185
7.4.148	Value of Group Object when load in overload [channel].....	186
7.4.149	Value of Group Object when load in underload [group] .....	186
7.4.150	Value of Group Object when load in underload [channel].....	187
7.4.151	Value of Group Object when maximum threshold exceeded [group].....	187
7.4.152	Value of Group Object when maximum threshold exceeded [channel] .....	188
7.4.153	Send value of Group Objects "Status byte" [Switch Actuator] .....	188
7.4.154	Value after sending and switching delay has expired.....	189
7.4.155	Value is sent from a change of.....	189
7.4.156	Evaluate change of value as .....	189
7.4.157	Send values of Group Objects "Status Result" and "Status Input value between thresholds" .....	190
7.4.158	Overwrite values Voltage/Power factor on download .....	190
7.4.159	Change values Voltage/Power factor via i-bus® Tool.....	191
7.4.160	Change values Voltage/Power factor via Group Objects.....	191
7.4.161	Time for off.....	192
7.4.162	Time for on.....	192
7.4.163	Send timestamp of total meter start [group] .....	192
7.4.164	Send timestamp of total meter start [channel] .....	193
7.4.165	Enable central Group Object "Receive load shedding stage" .....	193
7.4.166	Enable central Group Object "Switch".....	194
7.4.167	Enable central Group Object "Scene 1 ... 64" .....	194
7.4.168	i-bus® Tool access .....	194
7.4.169	Assign to energy group x.....	195
7.4.170	Forced operation (1 bit / 2 bit) [Switch Actuator] .....	195
7.4.171	Activate intermediate meter .....	196
7.4.172	Send cyclically every .....	196
7.4.173	Cyclical monitoring .....	197
<b>8</b>	<b>Group Objects.....</b>	<b>198</b>
8.1	Overview of Group Objects.....	198
8.2	Group Objects "Central" .....	200
8.3	Group Objects "Safety".....	201
8.4	Group Objects Logic/Threshold X .....	202
8.5	Group Objects Energy group X .....	209
8.6	Group Objects "Channel X": Switch.....	214
8.7	Group Objects "Channel X": Load shedding .....	217
8.8	Group Objects "Channel X": Current measurement.....	218
8.9	Group Objects "Channel X": Power calculation.....	218
8.10	Group Objects "Channel X": Energy consumption .....	219
8.11	Group Objects "Channel X": Load monitoring.....	222
8.12	Group Objects "Channel X": Contact supervision .....	225
<b>9</b>	<b>Operation .....</b>	<b>227</b>
9.1	Manual operation.....	227
<b>10</b>	<b>Maintenance and cleaning.....</b>	<b>228</b>
10.1	Maintenance .....	228
10.2	Cleaning .....	228
<b>11</b>	<b>Removal and disposal .....</b>	<b>229</b>
11.1	Removal .....	229
11.2	Environment.....	229

<b>12</b>	<b>Planning and application .....</b>	<b>230</b>
12.1	Priorities .....	230
12.1.1	Priorities for Switch Actuator .....	230
12.2	Basic knowledge .....	230
12.2.1	AC-1, AC-3, AC-5, AX and C load .....	230
12.2.2	Coding, Group Object "Receive load shedding stage" .....	231
12.2.3	Coding, Group Object "Set load shedding stage" .....	232
12.2.4	Coding, Group Object "Status Load" .....	232
12.2.5	Ballast calculation .....	232
12.2.6	Refreshed KNX state .....	233
12.2.7	Sending and switching delay .....	233
12.2.8	Telegram rate limit .....	234
12.2.9	Telegram values 1-bit Group Objects "Status Load" .....	234
12.2.10	Value Read .....	235
12.2.11	Central Group Objects .....	235
12.2.12	Cyclical monitoring .....	235
<b>13</b>	<b>Appendix .....</b>	<b>236</b>
13.1	Scope of delivery .....	236
13.2	Table of values, Group Object "Status byte all active priorities" .....	237
13.3	Table of values, Group Object "Scene 1 ... 64" .....	239



# 1 About this document

## 1.1 Using the product manual

This manual provides detailed technical information on the function, installation and programming of the ABB i-bus® KNX device.

## 1.2 Legal disclaimer

ABB AG reserves the right to make changes to the product or modify the contents of this document without prior notice.

The agreed properties are definitive for any orders placed. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

ABB AG reserves all rights in this document and in the subject matter and illustrations contained therein. Reproduction, transfer to third parties or processing of the content – including sections thereof – is not permitted without the prior written consent of ABB AG.

Copyright © 2022 ABB AG  
All rights reserved

## 1.3 Explanation of symbols

1.	Instructions in specified sequence and result
2.	
⇒	
▶	Individual actions
a)	Priorities
1)	Processes run by the device in a specific sequence
•	List level 1
–	List level 2

Tab. 1: Explanation of symbols



Notes and warnings are represented as follows in this manual:



**DANGER**

This symbol is a warning about electrical voltage and indicates high-risk hazards that will definitely result in death or serious injury unless avoided.



**DANGER**

Indicates high-risk hazards that will definitely result in death or serious injury unless avoided.



**WARNING**

Indicates medium-risk hazards that could result in death or serious injury unless avoided.



**CAUTION**

Indicates low-risk hazards that could result in slight or moderate injury unless avoided.



**CAUTION**

Indicates a risk of malfunctions or damage to property and equipment, but with no risk to life and limb.

**Example**

For use in application, installation and programming examples

**i Note**

For use in tips on use and operation

## 2 Safety

### 2.1 General safety instructions

- ▶ Protect the device from moisture, dirt and damage during transport, storage and operation.
- ▶ Operate the device only in a closed housing (distribution board).
- ▶ Operate the device only within the specified technical data.
- ▶ Mounting, installation, commissioning and maintenance must be carried out only by qualified electricians.
- ▶ Disconnect device from the supply of electrical power before mounting.

### 2.2 Qualification of the specialist personnel

Programming the device requires detailed specialist knowledge – particularly about the ETS commissioning software – through KNX training courses.

### 2.3 Proper use

The SA/S Switch Actuators are intended to be used to switch electrical loads in single- or multi-phase electrical networks in a KNX environment.

## 3 Product overview

### 3.1 Device description

The devices are modular installation devices (MDRC) in proM design. They are designed for installation in electrical distribution boards and small housings with a 35 mm mounting rail (to EN 60715).

The devices are KNX-certified and can be used as products in a KNX system → EU declaration of conformity.

The devices are powered via the bus (ABB i-bus® KNX) and require no additional auxiliary voltage. The connection to the bus is made via a bus connection terminal on the front of the housing. The loads are connected to the outputs using screw terminals → terminal designation on the housing.

The software application Engineering Tool Software (ETS) is used for physical address assignment and parameterization.

#### 3.1.1 Toggle switches

The toggle switches indicate the positions of the relay contacts:

- closed (I)
- open (O)

The relays for the outputs can be switched On (I) and Off (O) manually using the toggle switches. The relays can also be switched if there is a bus voltage failure and by active safety functions.

#### **i** Note

If the relays are switched manually using the toggle switches, KNX operation is overridden. Manually set contact positions are not detected by the device and are not set again automatically after bus voltage recovery or after ETS download.

### 3.2 Product name description

Abbreviation	Description
SA	Switch Actuator
/S	MDRC
x.	2 = 2-fold
	4 = 4-fold
	8 = 8-fold
	12 = 12-fold
x.	16 = 16 A / 20 A
x.	6 = C load (200 µF) + energy functions
x	x = Version number (x = 1, 2, etc.)

Tab. 2: Product name description

### 3.3 Ordering details

Description	MW	Type	Order no.	Packaging unit [pcs.]	Weight (incl. packaging) [kg]
Switch	2	SA/S 2.16.6.2	2CDG110269R0011	1	0.24
Switch	4	SA/S 4.16.6.2	2CDG110270R0011	1	0.37
Switch	8	SA/S 8.16.6.2	2CDG110271R0011	1	0.66
Switch	12	SA/S 12.16.6.2	2CDG110272R0011	1	0.96

Tab. 3: Ordering details

## 3.4 Connections

The devices possess the following connections:

- Depending on the device type, 2, 4, 8 or 12 relay outputs for switching electrical loads
- 1 bus connection

### 3.4.1 Inputs

This section is not relevant for these devices.

### 3.4.2 Outputs

#### **i** Note

A device with 12 channels (A ... L) is described below.

The outputs can be used individually to switch electrical loads.

Function	A	B	C	D	E	F	G	H	I	J	K	L
Switch	x	x	x	x	x	x	x	x	x	x	x	x

Tab. 4: Functions of the outputs

### 3.5 Switch Actuator SA/S 2.16.6.2, 2-fold, 16 A, C load with energy function, MDRC



Fig. 1: Device illustration SA/S 2.16.6.2

9PAA00000031070

### 3.5.1 Dimension drawing

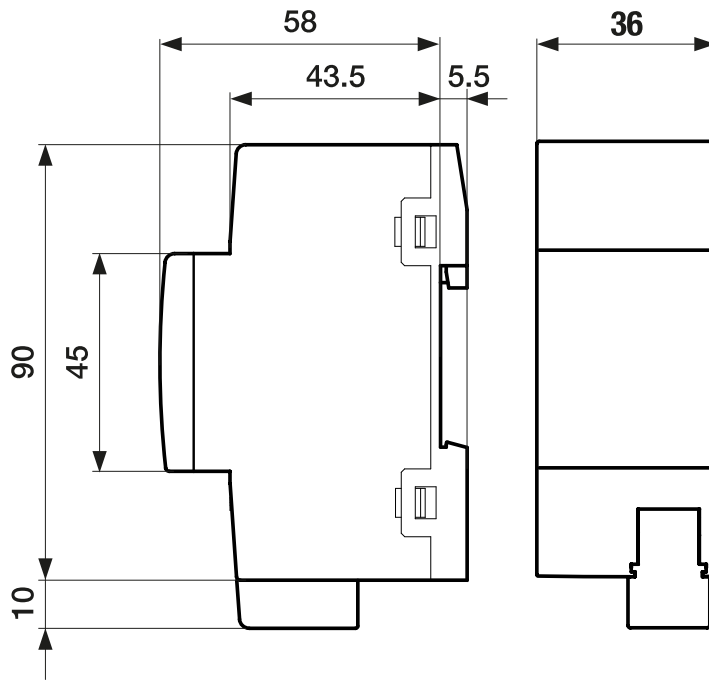


Fig. 2: Dimension drawing

2CDC072025F0017

### 3.5.2 Connection diagram

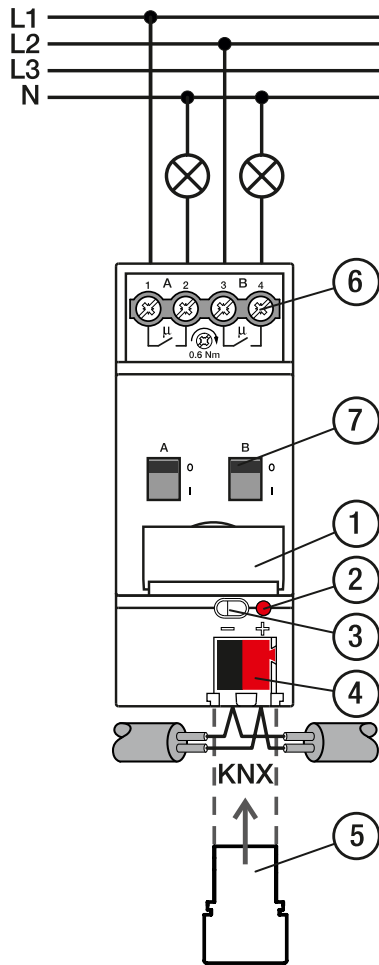


Fig. 3: Connection diagram SA/S 2.x.x.2



—  
**Legend**

- |                             |  |
|-----------------------------|--|
| 1 label carrier             | 5 Cover cap                              |
| 2 <i>Programming</i> LED    | 6 Load circuit, two screw terminals each |
| 3 <i>Programming</i> button | 7 Toggle switches                        |
| 4 Bus connection terminal   |  |

2CDC072002F0019



### 3.5.3 Operating and display elements

Operating control/LED	Description/function	Display
	Assignment of the physical address	LED On: Device in programming mode
<i>Programming button/LED</i>		
	Switching of the output: <ul style="list-style-type: none"> <li>• 1 = Switch on</li> <li>• 0 = Switch off</li> </ul>	Indication of the contact position: <ul style="list-style-type: none"> <li>• 1 = Closed</li> <li>• 0 = Open</li> </ul>
Toggle switches		

Tab. 5: Operating and display elements

## 3.5.4 Technical data

### 3.5.4.1 General technical data

<b>Device</b>	Dimensions	90 × 36 × 63.5 mm (H × W × D)
	Mounting width in space units	2 modules, 17.5 mm each
	Weight	0.17 kg
	Mounting position	Any
	Mounting variant	35 mm mounting rail
	Design	proM
	Degree of protection	IP 54
	Protection class	II
	Overvoltage category	III
	Pollution degree	2
<b>Materials</b>	Housing	Polycarbonate, Makrolon FR6002, halogen free
<b>Material note</b>	Fire classification	Flammability V-0
<b>Electronics</b>	Rated voltage, bus	30 V DC
	Voltage range, bus	21 ... 31 V DC
	Current consumption, bus	< 12 mA
	Maximum current, device	2 × 20 A
	Power loss, device	≤ 2 W (16 A)/3 W (20 A)
	Power loss, bus	≤ 0.25 W
	KNX safety extra low voltage	SELV
<b>Connections</b>	Connection type, KNX bus	Plug-in terminal
	Cable diameter, KNX bus	0.6 ... 0.8 mm, solid
	Connection type, load circuit	Screw terminal with universal head (PZ 1)
	Pitch	7.62 mm
	Tightening torque, screw terminals	0.5 ... 0.6 Nm
	Conductor cross-section, flexible	1 × (0.2 ... 4 mm <sup>2</sup> ) / 2 × (0.2 ... 2.5 mm <sup>2</sup> )
	Conductor cross section, rigid	1 × (0.2 ... 6 mm <sup>2</sup> ) / 2 × (0.2 ... 4 mm <sup>2</sup> )
	Conductor cross section with wire end ferrule without plastic sleeve	1 × (0.25 ... 2.5 mm <sup>2</sup> )
	Conductor cross section with wire end ferrule with plastic sleeve	1 × (0.25 ... 4 mm <sup>2</sup> )
	Conductor cross section with TWIN wire end ferrule	1 × (0.5 ... 2.5 mm <sup>2</sup> )
Length, wire end ferrule contact pin	≥ 10 mm	
<b>Certificates and declarations</b>	Declaration of conformity CE	→ <a href="#">2CDK505253D2701</a>
<b>Ambient conditions</b>	Operation	-5 ... +45 °C
	Transport	-25 ... +70 °C
	Storage	-25 ... +55 °C
	Humidity	≤ 95 %
	Condensation allowed	No
	Atmospheric pressure	≥ 80 kPa (corresponds to air pressure at 2,000 m above sea level)

Tab. 6: General technical data

### 3.5.4.2 Outputs – relays 16 A - 20 A (C load)







<b>Rated values</b>	Number of outputs	2
	Rated voltage $U_n$	230 V AC
	Rated current $I_n$ (per output)	16/20 A
	Rated frequency	50/60 Hz
	Relay type	Bi-stable
<b>Switching currents</b>	AC-1 operation ( $\cos \varphi = 0.8$ )	$\leq 20$ A
	AC-3 operation ( $\cos \varphi = 0.45$ )	$\leq 16$ A
	Fluorescent lighting load AX	$\leq 20$ AX
	Switching current at 12 V AC	$\geq 0.1$ A
	Switching current at 24 V AC	$\geq 0.1$ A
<b>Service life</b>	Switching current at 24 V DC (resistive load)	$\leq 20$ A
	Mechanical service life	$\geq 10^6$ switching operations
	AC-1 operation ( $\cos \varphi = 0.8$ )	$\geq 10^5$ switching operations
	AC-3 operation ( $\cos \varphi = 0.45$ )	$\geq 3 \times 10^4$ switching operations
	AC-5a operation ( $\cos \varphi = 0.45$ )	$\geq 3 \times 10^4$ switching operations
<b>Switching operations</b>	Switching operations per minute when one relay switches	$\leq 60$
	Switching operations per minute when all relays switch	$\leq 30$
<b>Starting current</b>	Starting current $I_{peak}$ (150 $\mu$ s)	$\leq 600$ A
	Starting current $I_{peak}$ (250 $\mu$ s)	$\leq 480$ A
	Starting current $I_{peak}$ (600 $\mu$ s)	$\leq 300$ A

Tab. 7: Outputs – relays 16 A – 20 A (C load)

#### **i** Note

The starting current  $I_{peak}$  is the typical ballast load current that results during switching. Using the starting current  $I_{peak}$ , it is possible to calculate the maximum number of switchable ballasts at the Switch Actuator output → [Ballast calculation, Page 232](#).

#### 3.5.4.2.1 Load table

Load type	Symbol	Max. load
Incandescent bulbs		3680 W
Fluorescent lamps uncompensated		3680 W
Fluorescent lamps parallel compensated		2500 W
Fluorescent lamps duo circuit		3680 W
Low-voltage halogen lamps inductive transformer		2000 W
Low-voltage halogen lamps electronic transformer		2500 W
Low-voltage halogen lamps 230 V		3680 W
Dulux lamps uncompensated		3680 W
Dulux lamps parallel compensated		3000 W
Mercury-vapor lamps uncompensated		3680 W
Mercury-vapor lamps parallel compensated		3000 W
LED lamps		650 W
Rated motor power		3680 W

Tab. 8: Load table

### 3.5.4.2.2 Energy function

Energy function	Detection range	0.02 ... 20 A
	Accuracy	±2 % of the actual current ±0.02 A
	Measurement delay	2 s
	Load current I <sub>load</sub> AC	0 ... 20 A, sinusoidal
	Load current I <sub>load</sub> DC	Is not acquired

Tab. 8: Energy function

### 3.5.4.3 Device type

Device type	Switch Actuator	SA/S 2.16.6.2
	Application	Switch energy function 2-fold 16 A / ... ... = current version number of the application
	Maximum number of Group Objects	273
	Maximum number of group addresses	1000
	Maximum number of assignments	1000

Tab. 9: Device type

**i Note**

Observe software information on the website → [www.abb.com/knx](http://www.abb.com/knx).

**i Note**

The device may be protected with a BCU key in ETS. If a BCU key was assigned, the device cannot be read or programmed without it.

### 3.6 Switch Actuator SA/S 4.16.6.2, 4-fold, 16 A, C load with energy function, MDRC



Fig. 4: Device illustration SA/S 4.16.6.2

9PAA0000031074

### 3.6.1 Dimension drawing

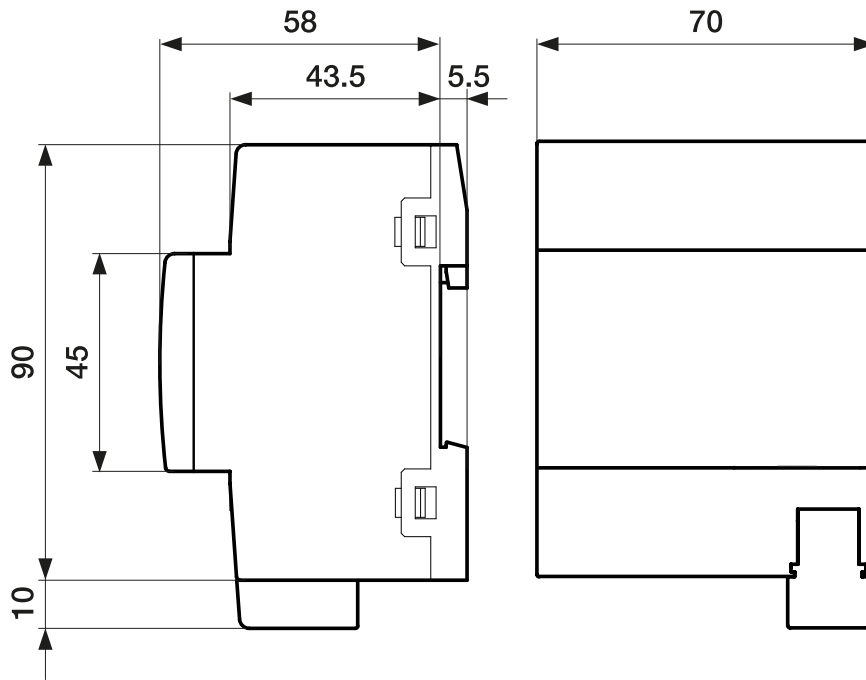


Fig. 5: Dimension drawing

2CDC072033F0015

### 3.6.2 Connection diagram

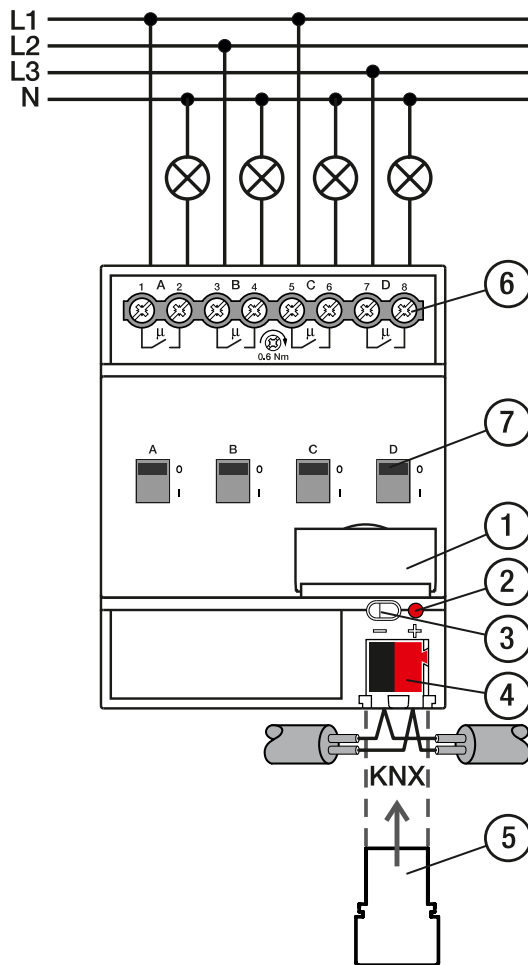


Fig. 6: Connection diagram SA/S 4.x.x.2



—  
**Legend**

- |                             |  |
|-----------------------------|--|
| 1 label carrier             | 5 Cover cap                              |
| 2 <i>Programming</i> LED    | 6 Load circuit, two screw terminals each |
| 3 <i>Programming</i> button | 7 Toggle switches                        |
| 4 Bus connection terminal   |  |

2CDC072003F0019



### 3.6.3 Operating and display elements

Operating control/LED	Description/function	Display
	Assignment of the physical address	LED On: Device in programming mode
<i>Programming button/LED</i>		
	Switching of the output: <ul style="list-style-type: none"> <li>• 1 = Switch on</li> <li>• 0 = Switch off</li> </ul>	Indication of the contact position: <ul style="list-style-type: none"> <li>• 1 = Closed</li> <li>• 0 = Open</li> </ul>
<i>Toggle switches</i>		

Tab. 10: Operating and display elements

## 3.6.4 Technical data

### 3.6.4.1 General technical data

<b>Device</b>	Dimensions	90 × 70 × 63.5 mm (H × W × D)
	Mounting width in space units	4 modules, 17.5 mm each
	Weight	0.30 kg
	Mounting position	Any
	Mounting variant	35 mm mounting rail
	Design	proM
	Degree of protection	IP 54
	Protection class	II
	Overvoltage category	III
	Pollution degree	2
<b>Materials</b>	Housing	Polycarbonate, Makrolon FR6002, halogen free
<b>Material note</b>	Fire classification	Flammability V-0
<b>Electronics</b>	Rated voltage, bus	30 V DC
	Voltage range, bus	21 ... 31 V DC
	Current consumption, bus	< 12 mA
	Maximum current, device	4 × 20 A
	Power loss, device	≤ 4 W (16 A)/5.5 W (20 A)
	Power loss, bus	≤ 0.25 W
	KNX safety extra low voltage	SELV
<b>Connections</b>	Connection type, KNX bus	Plug-in terminal
	Cable diameter, KNX bus	0.6 ... 0.8 mm, solid
	Connection type, load circuit	Screw terminal with universal head (PZ 1)
	Pitch	7.62 mm
	Tightening torque, screw terminals	0.5 ... 0.6 Nm
	Conductor cross-section, flexible	1 × (0.2 ... 4 mm <sup>2</sup> ) / 2 × (0.2 ... 2.5 mm <sup>2</sup> )
	Conductor cross section, rigid	1 × (0.2 ... 6 mm <sup>2</sup> ) / 2 × (0.2 ... 4 mm <sup>2</sup> )
	Conductor cross section with wire end ferrule without plastic sleeve	1 × (0.25 ... 2.5 mm <sup>2</sup> )
	Conductor cross section with wire end ferrule with plastic sleeve	1 × (0.25 ... 4 mm <sup>2</sup> )
	Conductor cross section with TWIN wire end ferrule	1 × (0.5 ... 2.5 mm <sup>2</sup> )
Length, wire end ferrule contact pin	≥ 10 mm	
<b>Certificates and declarations</b>	Declaration of conformity CE	→ <a href="#">2CDK505247D2701</a>
<b>Ambient conditions</b>	Operation	-5 ... +45 °C
	Transport	-25 ... +70 °C
	Storage	-25 ... +55 °C
	Humidity	≤ 95 %
	Condensation allowed	No
	Atmospheric pressure	≥ 80 kPa (corresponds to air pressure at 2,000 m above sea level)

Tab. 11: General technical data

### 3.6.4.2 Outputs – relays 16 A - 20 A (C load)







<b>Rated values</b>	Number of outputs	4
	Rated voltage $U_n$	230 V AC
	Rated current $I_n$ (per output)	16/20 A
	Rated frequency	50/60 Hz
	Relay type	Bi-stable
<b>Switching currents</b>	AC-1 operation ( $\cos \varphi = 0.8$ )	$\leq 20$ A
	AC-3 operation ( $\cos \varphi = 0.45$ )	$\leq 16$ A
	Fluorescent lighting load AX	$\leq 20$ AX
	Switching current at 12 V AC	$\geq 0.1$ A
	Switching current at 24 V AC	$\geq 0.1$ A
<b>Service life</b>	Switching current at 24 V DC (resistive load)	$\leq 20$ A
	Mechanical service life	$\geq 10^6$ switching operations
	AC-1 operation ( $\cos \varphi = 0.8$ )	$\geq 10^5$ switching operations
	AC-3 operation ( $\cos \varphi = 0.45$ )	$\geq 3 \times 10^4$ switching operations
	AC-5a operation ( $\cos \varphi = 0.45$ )	$\geq 3 \times 10^4$ switching operations
<b>Switching operations</b>	Switching operations per minute when one relay switches	$\leq 60$
	Switching operations per minute when all relays switch	$\leq 15$
<b>Starting current</b>	Starting current $I_{peak}$ (150 $\mu$ s)	$\leq 600$ A
	Starting current $I_{peak}$ (250 $\mu$ s)	$\leq 480$ A
	Starting current $I_{peak}$ (600 $\mu$ s)	$\leq 300$ A

Tab. 12: Outputs – relays 16 A – 20 A (C load)

#### **i** Note

The starting current  $I_{peak}$  is the typical ballast load current that results during switching. Using the starting current  $I_{peak}$ , it is possible to calculate the maximum number of switchable ballasts at the Switch Actuator output → [Ballast calculation, Page 232](#).

#### 3.6.4.2.1 Load table

Load type	Symbol	Max. load
Incandescent bulbs		3680 W
Fluorescent lamps uncompensated		3680 W
Fluorescent lamps parallel compensated		2500 W
Fluorescent lamps duo circuit		3680 W
Low-voltage halogen lamps inductive transformer		2000 W
Low-voltage halogen lamps electronic transformer		2500 W
Low-voltage halogen lamps 230 V		3680 W
Dulux lamps uncompensated		3680 W
Dulux lamps parallel compensated		3000 W
Mercury-vapor lamps uncompensated		3680 W
Mercury-vapor lamps parallel compensated		3000 W
LED lamps		650 W
Rated motor power		3680 W

Tab. 14: Load table

### 3.6.4.2.2 Energy function

Energy function	Detection range	0.02 ... 20 A
	Accuracy	±2 % of the actual current ±0.02 A
	Measurement delay	2 s
	Load current I <sub>load</sub> AC	0 ... 20 A, sinusoidal
	Load current I <sub>load</sub> DC	Is not acquired

Tab. 13: Energy function

### 3.6.4.3 Device type

Device type	Switch Actuator	SA/S 4.16.6.2
	Application	Switch energy function 4-fold 16 A / ... ... = current version number of the application
	Maximum number of Group Objects	351
	Maximum number of group addresses	1000
	Maximum number of assignments	1000

Tab. 14: Device type

**i Note**

Observe software information on the website → [www.abb.com/knx](http://www.abb.com/knx).

**i Note**

The device may be protected with a BCU key in ETS. If a BCU key was assigned, the device cannot be read or programmed without it.

### 3.7 Switch Actuator SA/S 8.16.6.2, 8-fold, 16 A, C load with energy function, MDRC

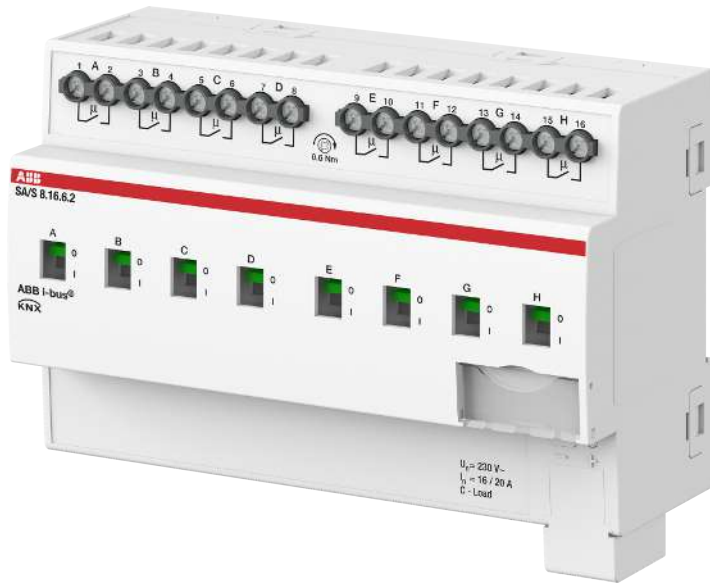


Fig. 7: Device illustration SA/S 8.16.6.2

9PAA00000031076

### 3.7.1 Dimension drawing

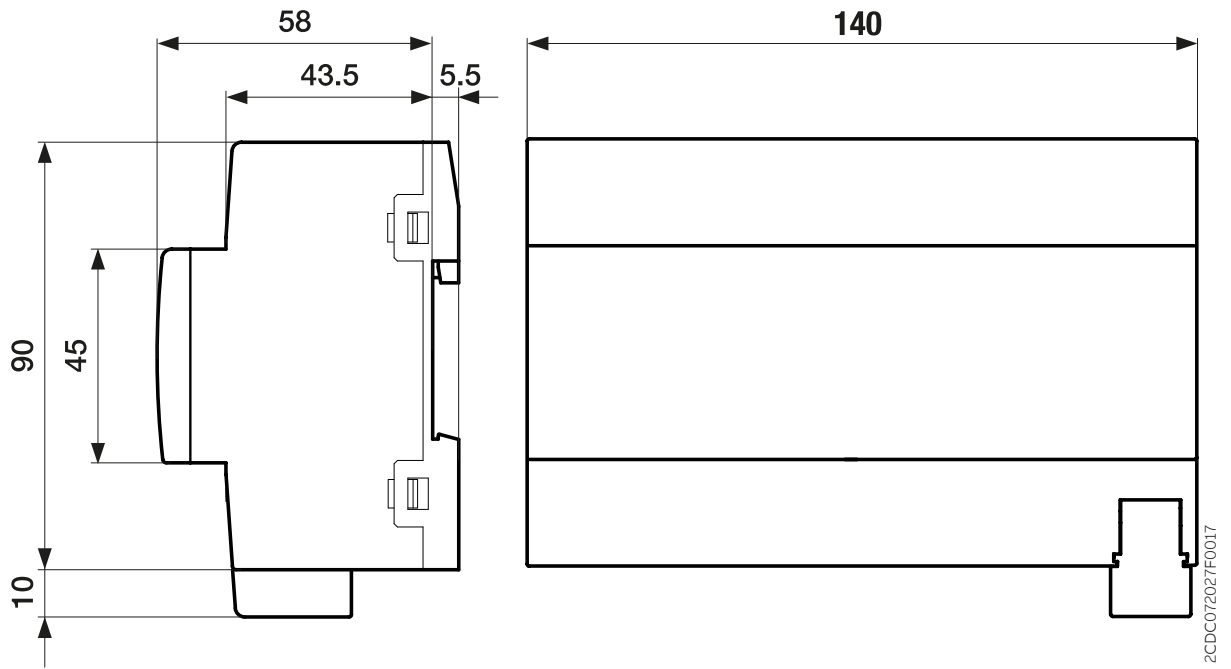


Fig. 8: Dimension drawing

### 3.7.2 Connection diagram

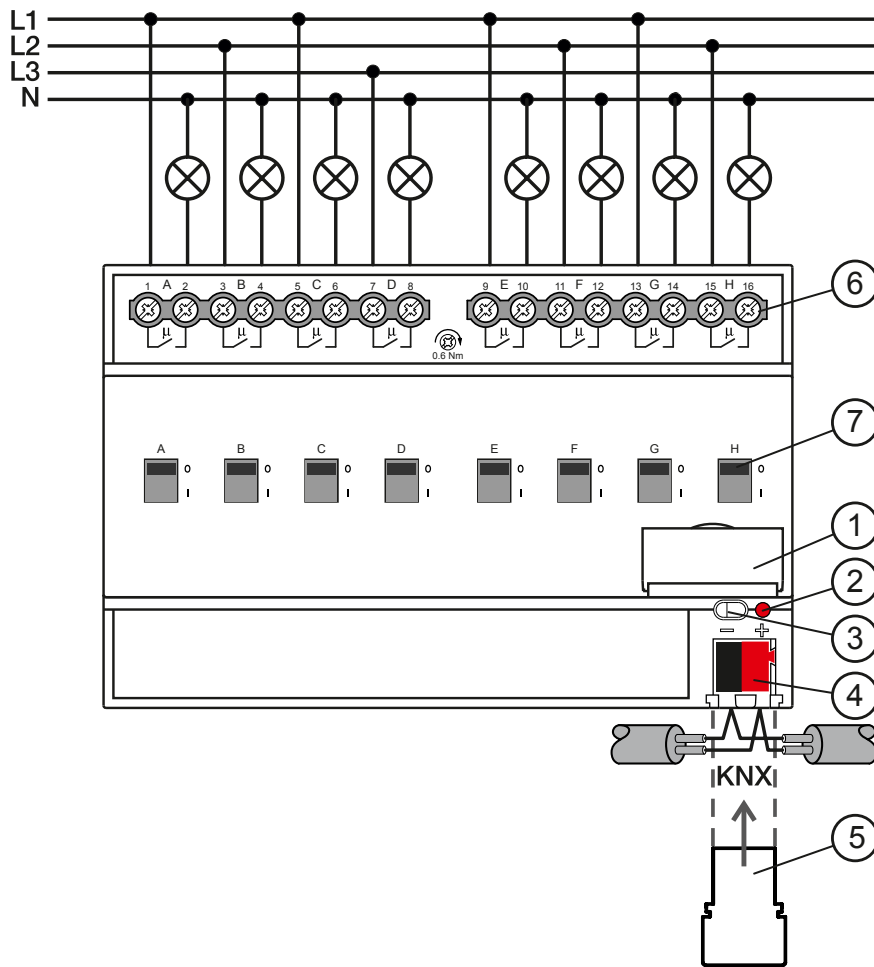




Fig. 9: Connection diagram SA/S 8.x.x.2

—  
**Legend**

- |                             |  |
|-----------------------------|--|
| 1 label carrier             | 5 Cover cap                              |
| 2 <i>Programming</i> LED    | 6 Load circuit, two screw terminals each |
| 3 <i>Programming</i> button | 7 Toggle switches                        |
| 4 Bus connection terminal   |  |



### 3.7.3 Operating and display elements

Operating control/LED	Description/function	Display
	Assignment of the physical address	LED On: Device in programming mode
<i>Programming button/LED</i>		
	Switching of the output: <ul style="list-style-type: none"> <li>• 1 = Switch on</li> <li>• 0 = Switch off</li> </ul>	Indication of the contact position: <ul style="list-style-type: none"> <li>• 1 = Closed</li> <li>• 0 = Open</li> </ul>
<i>Toggle switches</i>		

Tab. 15: Operating and display elements

## 3.7.4 Technical data

### 3.7.4.1 General technical data

<b>Device</b>	Dimensions	90 × 140 × 63.5 mm (H x W x D)
	Mounting width in space units	8 modules, 17.5 mm each
	Weight	0.56 kg
	Mounting position	Any
	Mounting variant	35 mm mounting rail
	Design	proM
	Degree of protection	IP 54
	Protection class	II
	Overvoltage category	III
	Pollution degree	2
<b>Materials</b>	Housing	Polycarbonate, Makrolon FR6002, halogen free
<b>Material note</b>	Fire classification	Flammability V-0
<b>Electronics</b>	Rated voltage, bus	30 V DC
	Voltage range, bus	21 ... 31 V DC
	Current consumption, bus	< 12 mA
	Maximum current, device	8 × 20 A
	Power loss, device	≤ 8 W (16 A)/11 W (20 A)
	Power loss, bus	≤ 0.25 W
	KNX safety extra low voltage	SELV
<b>Connections</b>	Connection type, KNX bus	Plug-in terminal
	Cable diameter, KNX bus	0.6 ... 0.8 mm, solid
	Connection type, load circuit	Screw terminal with universal head (PZ 1)
	Pitch	7.62 mm
	Tightening torque, screw terminals	0.5 ... 0.6 Nm
	Conductor cross-section, flexible	1 × (0.2 ... 4 mm <sup>2</sup> ) / 2 × (0.2 ... 2.5 mm <sup>2</sup> )
	Conductor cross section, rigid	1 × (0.2 ... 6 mm <sup>2</sup> ) / 2 × (0.2 ... 4 mm <sup>2</sup> )
	Conductor cross section with wire end ferrule without plastic sleeve	1 × (0.25 ... 2.5 mm <sup>2</sup> )
	Conductor cross section with wire end ferrule with plastic sleeve	1 × (0.25 ... 4 mm <sup>2</sup> )
	Conductor cross section with TWIN wire end ferrule	1 × (0.5 ... 2.5 mm <sup>2</sup> )
Length, wire end ferrule contact pin	≥ 10 mm	
<b>Certificates and declarations</b>	Declaration of conformity CE	→ <a href="#">2CDK505248D2701</a>
<b>Ambient conditions</b>	Operation	-5 ... +45 °C
	Transport	-25 ... +70 °C
	Storage	-25 ... +55 °C
	Humidity	≤ 95 %
	Condensation allowed	No
	Atmospheric pressure	≥ 80 kPa (corresponds to air pressure at 2,000 m above sea level)

Tab. 16: General technical data

### 3.7.4.2 Outputs – relays 16 A - 20 A (C load)







<b>Rated values</b>	Number of outputs	8
	Rated voltage $U_n$	230 V AC
	Rated current $I_n$ (per output)	16/20 A
	Rated frequency	50/60 Hz
	Relay type	Bi-stable
<b>Switching currents</b>	AC-1 operation ( $\cos \varphi = 0.8$ )	$\leq 20$ A
	AC-3 operation ( $\cos \varphi = 0.45$ )	$\leq 16$ A
	Fluorescent lighting load AX	$\leq 20$ AX
	Switching current at 12 V AC	$\geq 0.1$ A
	Switching current at 24 V AC	$\geq 0.1$ A
<b>Service life</b>	Switching current at 24 V DC (resistive load)	$\leq 20$ A
	Mechanical service life	$\geq 10^6$ switching operations
	AC-1 operation ( $\cos \varphi = 0.8$ )	$\geq 10^5$ switching operations
	AC-3 operation ( $\cos \varphi = 0.45$ )	$\geq 3 \times 10^4$ switching operations
	AC-5a operation ( $\cos \varphi = 0.45$ )	$\geq 3 \times 10^4$ switching operations
<b>Switching operations</b>	Switching operations per minute when one relay switches	$\leq 60$
	Switching operations per minute when all relays switch	$\leq 7$
<b>Starting current</b>	Starting current $I_{peak}$ (150 $\mu$ s)	$\leq 600$ A
	Starting current $I_{peak}$ (250 $\mu$ s)	$\leq 480$ A
	Starting current $I_{peak}$ (600 $\mu$ s)	$\leq 300$ A

Tab. 17: Outputs – relays 16 A – 20 A (C load)

#### **i** Note

The starting current  $I_{peak}$  is the typical ballast load current that results during switching. Using the starting current  $I_{peak}$ , it is possible to calculate the maximum number of switchable ballasts at the Switch Actuator output → [Ballast calculation, Page 232](#).

#### 3.7.4.2.1 Load table

Load type	Symbol	Max. load
Incandescent bulbs		3680 W
Fluorescent lamps uncompensated		3680 W
Fluorescent lamps parallel compensated		2500 W
Fluorescent lamps duo circuit		3680 W
Low-voltage halogen lamps inductive transformer		2000 W
Low-voltage halogen lamps electronic transformer		2500 W
Low-voltage halogen lamps 230 V		3680 W
Dulux lamps uncompensated		3680 W
Dulux lamps parallel compensated		3000 W
Mercury-vapor lamps uncompensated		3680 W
Mercury-vapor lamps parallel compensated		3000 W
LED lamps		650 W
Rated motor power		3680 W

Tab. 20: Load table

### 3.7.4.2.2 Energy function

Energy function	Detection range	0.02 ... 20 A
	Accuracy	±2 % of the actual current ±0.02 A
	Measurement delay	2 s
	Load current I <sub>load</sub> AC	0 ... 20 A, sinusoidal
	Load current I <sub>load</sub> DC	Is not acquired

Tab. 18: Energy function

### 3.7.4.3 Device type

Device type	Switch Actuator	SA/S 8.16.6.2
	Application	Switch energy function 8-fold 16 A / ... ... = current version number of the application
	Maximum number of Group Objects	507
	Maximum number of group addresses	1000
	Maximum number of assignments	1000

Tab. 19: Device type

**i Note**

Observe software information on the website → [www.abb.com/knx](http://www.abb.com/knx).

**i Note**

The device may be protected with a BCU key in ETS. If a BCU key was assigned, the device cannot be read or programmed without it.

### 3.8 Switch Actuator SA/S 12.16.6.2, 12-fold, 16 A, C load with energy function, MDRC

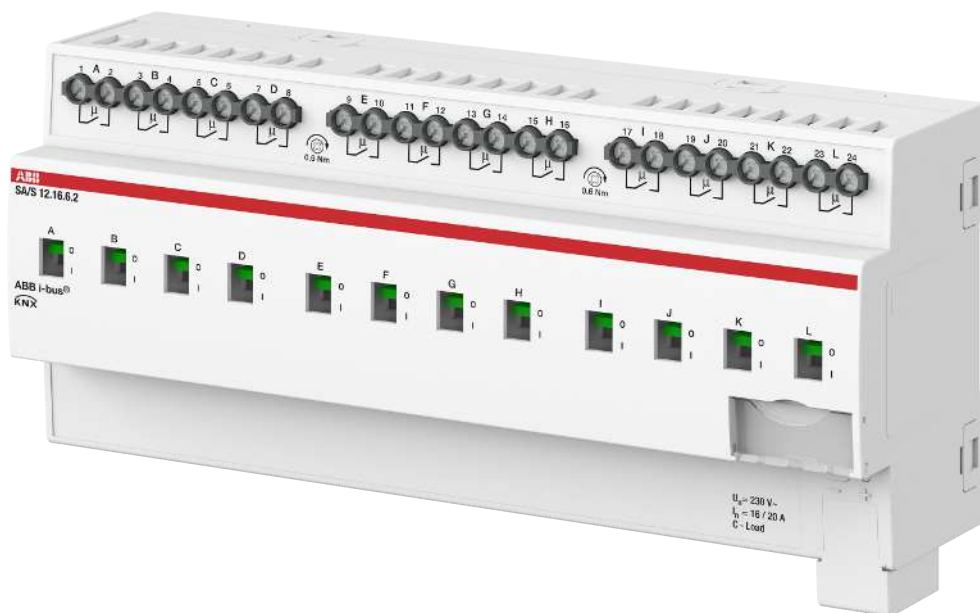


Fig. 10: Device illustration SA/S 12.16.6.2

9PAA00000031080

### 3.8.1 Dimension drawing

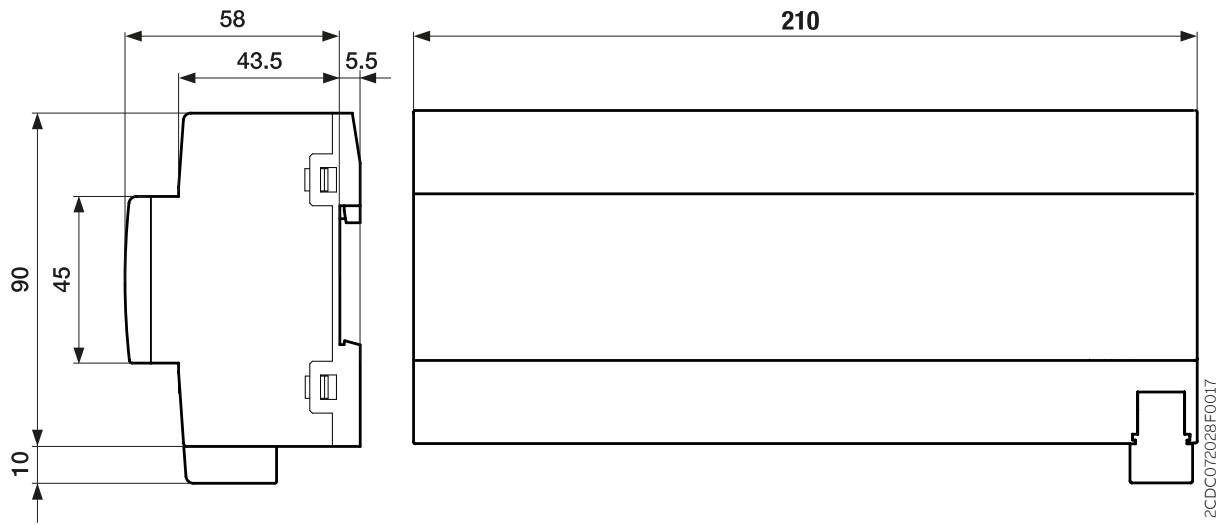


Fig. 11: Dimension drawing

### 3.8.2 Connection diagram

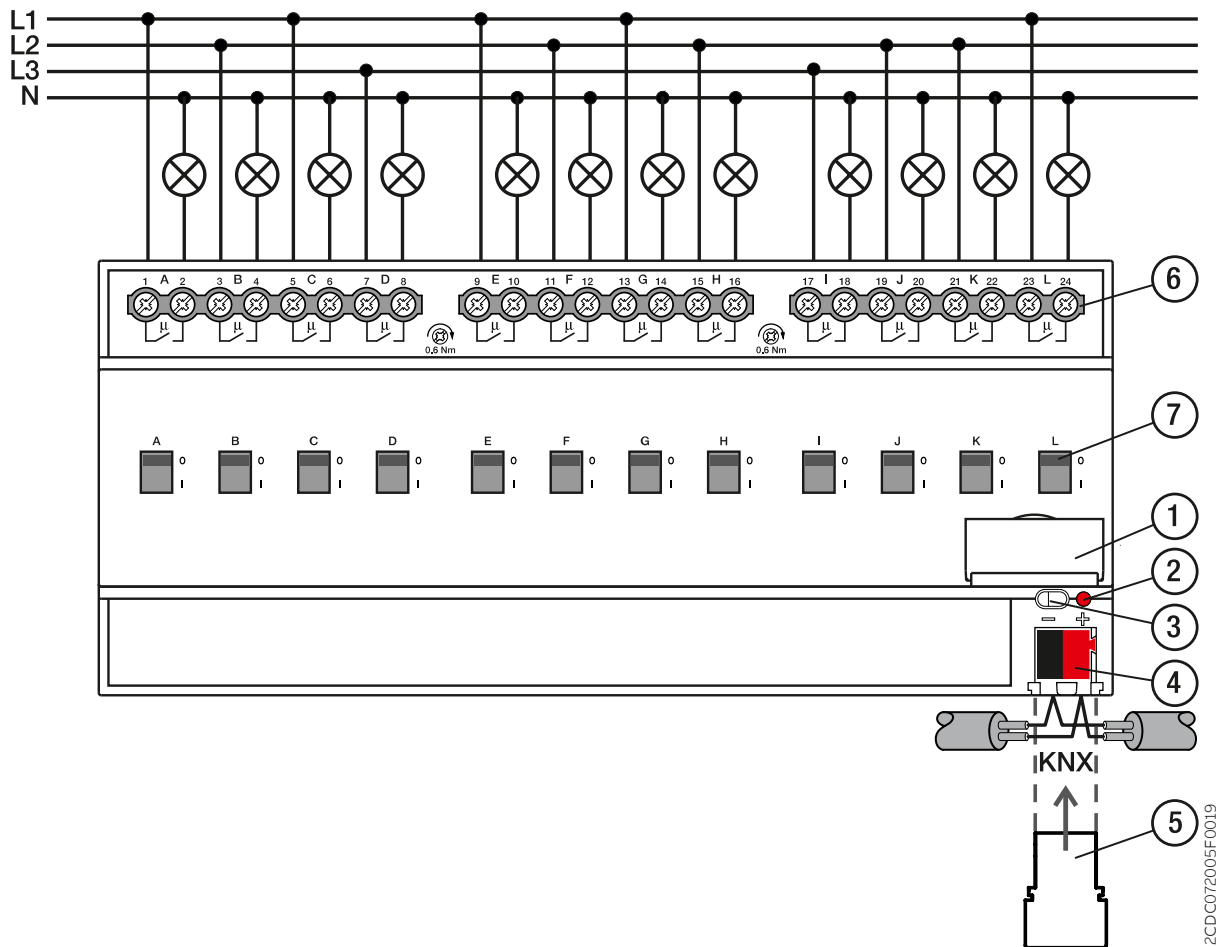




Fig. 12: Connection diagram SA/S 12.x.x.2

**Legend**

- 1 label carrier
- 2 *Programming* LED
- 3 *Programming* button
- 4 Bus connection terminal
- 5 Cover cap
- 6 Load circuit, two screw terminals each
- 7 Toggle switches



### 3.8.3 Operating and display elements

Operating control/LED	Description/function	Display
	Assignment of the physical address	LED On: Device in programming mode
<i>Programming button/LED</i>		
	Switching of the output: <ul style="list-style-type: none"> <li>• 1 = Switch on</li> <li>• 0 = Switch off</li> </ul>	Indication of the contact position: <ul style="list-style-type: none"> <li>• 1 = Closed</li> <li>• 0 = Open</li> </ul>
Toggle switches		

Tab. 20: Operating and display elements

## 3.8.4 Technical data

### 3.8.4.1 General technical data

<b>Device</b>	Dimensions	90 × 210 × 63.5 mm (H x W x D)
	Mounting width in space units	12 modules, 17.5 mm each
	Weight	0.85 kg
	Mounting position	Any
	Mounting variant	35 mm mounting rail
	Design	proM
	Degree of protection	IP 54
	Protection class	II
	Overvoltage category	III
<b>Materials</b>	Pollution degree	2
	Housing	Polycarbonate, Makrolon FR6002, halogen free
<b>Material note</b>	Fire classification	Flammability V-0
<b>Electronics</b>	Rated voltage, bus	30 V DC
	Voltage range, bus	21 ... 31 V DC
	Current consumption, bus	< 12 mA
	Maximum current, device	12 × 20 A
	Power loss, device	≤ 12 W (16 A)/16 W (20 A)
	Power loss, bus	≤ 0.25 W
	KNX safety extra low voltage	SELV
<b>Connections</b>	Connection type, KNX bus	Plug-in terminal
	Cable diameter, KNX bus	0.6 ... 0.8 mm, solid
	Connection type, load circuit	Screw terminal with universal head (PZ 1)
	Pitch	7.62 mm
	Tightening torque, screw terminals	0.5 ... 0.6 Nm
	Conductor cross-section, flexible	1 × (0.2 ... 4 mm <sup>2</sup> ) / 2 × (0.2 ... 2.5 mm <sup>2</sup> )
	Conductor cross section, rigid	1 × (0.2 ... 6 mm <sup>2</sup> ) / 2 × (0.2 ... 4 mm <sup>2</sup> )
	Conductor cross section with wire end ferrule without plastic sleeve	1 × (0.25 ... 2.5 mm <sup>2</sup> )
	Conductor cross section with wire end ferrule with plastic sleeve	1 × (0.25 ... 4 mm <sup>2</sup> )
<b>Certificates and declarations</b>	Conductor cross section with TWIN wire end ferrule	1 × (0.5 ... 2.5 mm <sup>2</sup> )
	Declaration of conformity CE	→ <a href="#">2CDK505249D2701</a>
<b>Ambient conditions</b>	Length, wire end ferrule contact pin	≥ 10 mm
	Operation	-5 ... +45 °C
	Transport	-25 ... +70 °C
	Storage	-25 ... +55 °C
	Humidity	≤ 95 %
	Condensation allowed	No
Atmospheric pressure	≥ 80 kPa (corresponds to air pressure at 2,000 m above sea level)	

Tab. 21: General technical data

### 3.8.4.2 Outputs – relays 16 A - 20 A (C load)







<b>Rated values</b>	Number of outputs	12
	Rated voltage $U_n$	230 V AC
	Rated current $I_n$ (per output)	16/20 A
	Rated frequency	50/60 Hz
	Relay type	Bi-stable
<b>Switching currents</b>	AC-1 operation ( $\cos \varphi = 0.8$ )	$\leq 20$ A
	AC-3 operation ( $\cos \varphi = 0.45$ )	$\leq 16$ A
	Fluorescent lighting load AX	$\leq 20$ AX
	Switching current at 12 V AC	$\geq 0.1$ A
	Switching current at 24 V AC	$\geq 0.1$ A
<b>Service life</b>	Switching current at 24 V DC (resistive load)	$\leq 20$ A
	Mechanical service life	$\geq 10^6$ switching operations
	AC-1 operation ( $\cos \varphi = 0.8$ )	$\geq 10^5$ switching operations
	AC-3 operation ( $\cos \varphi = 0.45$ )	$\geq 3 \times 10^4$ switching operations
	AC-5a operation ( $\cos \varphi = 0.45$ )	$\geq 3 \times 10^4$ switching operations
<b>Switching operations</b>	Switching operations per minute when one relay switches	$\leq 60$
	Switching operations per minute when all relays switch	$\leq 5$
<b>Starting current</b>	Starting current $I_{peak}$ (150 $\mu$ s)	$\leq 600$ A
	Starting current $I_{peak}$ (250 $\mu$ s)	$\leq 480$ A
	Starting current $I_{peak}$ (600 $\mu$ s)	$\leq 300$ A

Tab. 22: Outputs – relays 16 A – 20 A (C load)

#### Note

The starting current  $I_{peak}$  is the typical ballast load current that results during switching. Using the starting current  $I_{peak}$ , it is possible to calculate the maximum number of switchable ballasts at the Switch Actuator output → [Ballast calculation, Page 232](#).

#### 3.8.4.2.1 Load table

Load type	Symbol	Max. load
Incandescent bulbs		3680 W
Fluorescent lamps uncompensated		3680 W
Fluorescent lamps parallel compensated		2500 W
Fluorescent lamps duo circuit		3680 W
Low-voltage halogen lamps inductive transformer		2000 W
Low-voltage halogen lamps electronic transformer		2500 W
Low-voltage halogen lamps 230 V		3680 W
Dulux lamps uncompensated		3680 W
Dulux lamps parallel compensated		3000 W
Mercury-vapor lamps uncompensated		3680 W
Mercury-vapor lamps parallel compensated		3000 W
LED lamps		650 W
Rated motor power		3680 W

Tab. 26: Load table

### 3.8.4.2.2 Energy function

Energy function	Detection range	0.02 ... 20 A
	Accuracy	±2 % of the actual current ±0.02 A
	Measurement delay	2 s
	Load current I <sub>load</sub> AC	0 ... 20 A, sinusoidal
	Load current I <sub>load</sub> DC	Is not acquired

Tab. 23: Energy function

### 3.8.4.3 Device type

Device type	Switch Actuator	SA/S 12.16.6.2
	Application	Switch energy function 2-fold 16 A / ... ... = current version number of the application
	Maximum number of Group Objects	663
	Maximum number of group addresses	1000
	Maximum number of assignments	1000

Tab. 24: Device type

**i Note**

Observe software information on the website → [www.abb.com/knx](http://www.abb.com/knx).

**i Note**

The device may be protected with a BCU key in ETS. If a BCU key was assigned, the device cannot be read or programmed without it.

## 4 Function

### 4.1 Device functions

The devices possess mutually independent switching relays with which the following functions can be implemented:

- Switching electrical loads with high peak inrush currents in single- or multi-phase electrical networks

On-site operation of the outputs is possible using toggle switches.

The devices have the following integrated functions:

- Current measurement
- Energy functions (calculated, based on current measurement)

### 4.2 Software functions

#### 4.2.1 Functional overview

	SA/S 2.16.6.2 SA/S 4.16.6.2 SA/S 8.16.6.2 SA/S 12.16.6.2
Type of outputs	Switch Actuator
Manual operation	x
Blocking manual operation	
<b>Function Switch</b>	x
Staircase lighting	x
Staircase lighting advance warning	x
Delay for switching on and off	x
Flashing	x
NO contact/NC contact	x
<b>Function Shutter</b>	
Blind	
Shutter	
Automatic sun function	
Reversing time	
reference movement	
<b>Function Load shedding</b>	x
<b>Function Energy</b>	x
Current measurement	x
Power calculation	x
Energy consumption calculation	x
Load monitoring	x
<b>Function Scene</b>	x
<b>Function Threshold</b>	x
<b>Function Logic</b>	x
<b>Forced operation/Block</b>	x
<b>Safety</b>	x
<b>Weather alarms</b>	
<b>Special functions</b>	x
Contact supervision	x
Reaction on bus voltage failure/recovery	x
status message	x
i-bus® Tool	x

Tab. 25: Functional overview

#### **i** Note

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

## 4.2.2 Function diagram Switch Actuator

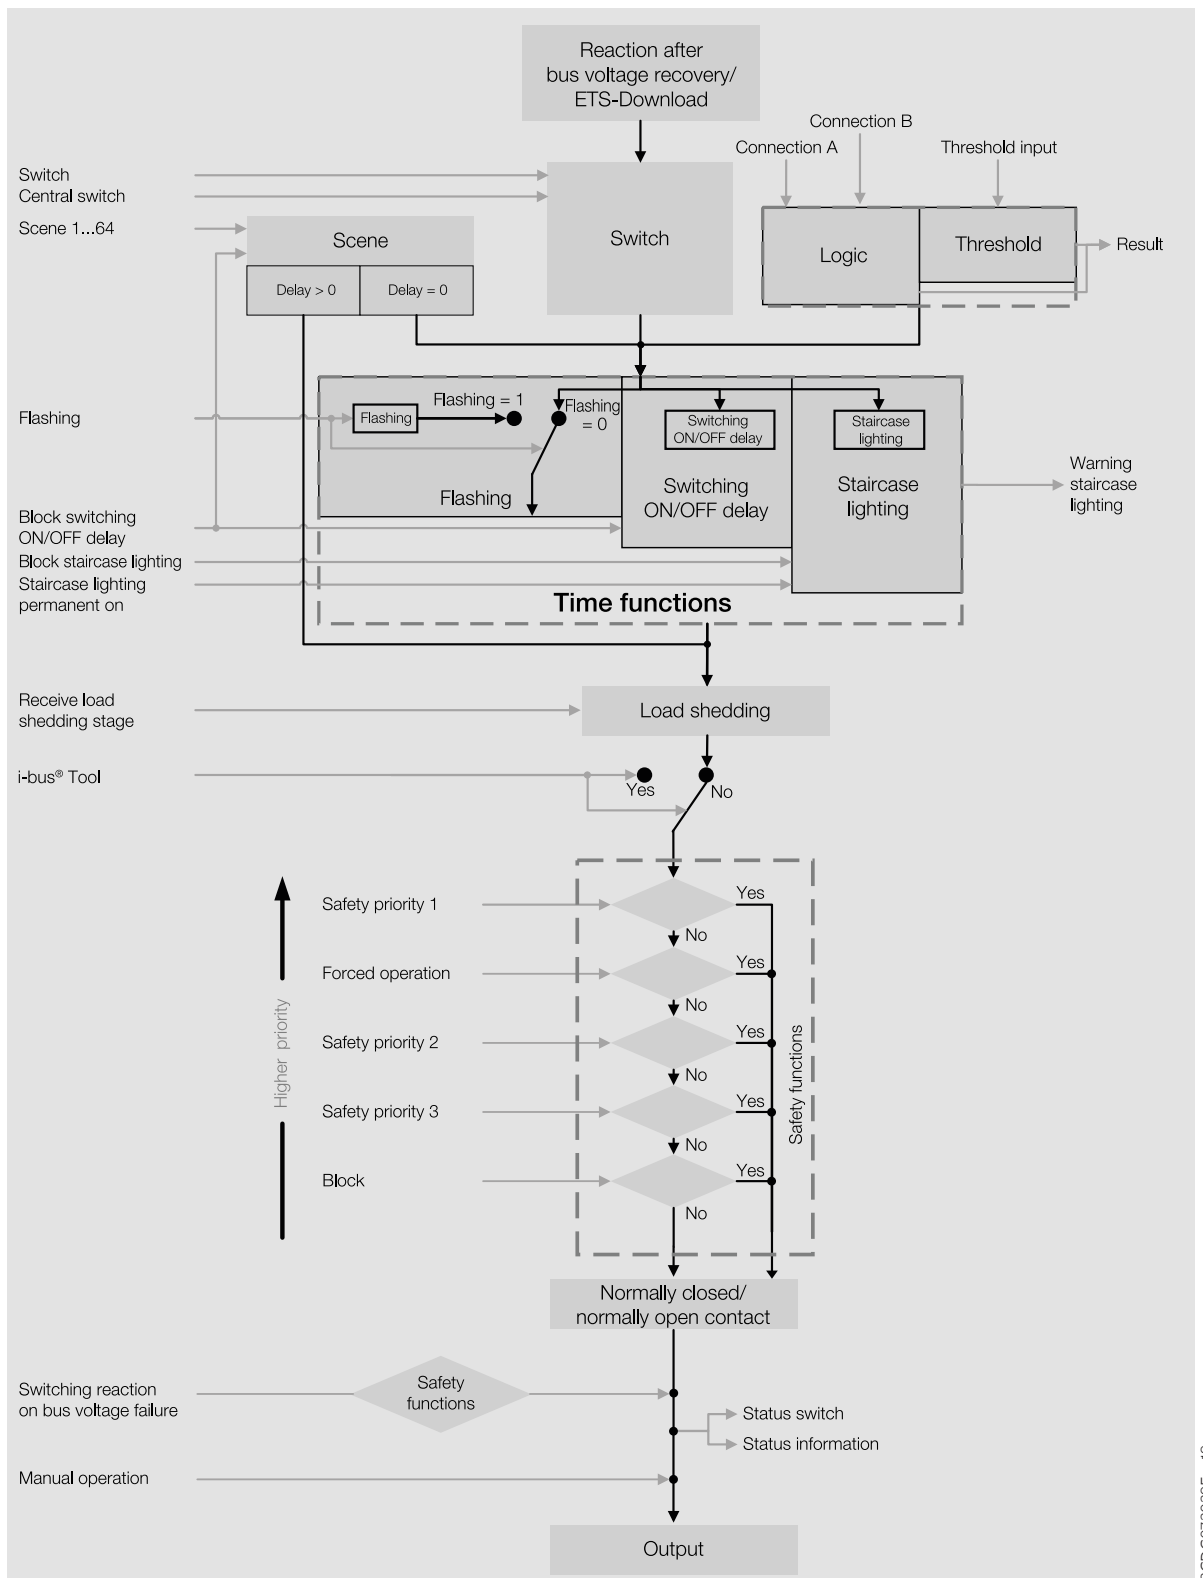


Fig. 13: Function diagram Switch Actuator

**Note**

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

## 4.2.3 Safety functions

### 4.2.3.1 Switch Actuator safety functions

#### 4.2.3.1.1 Priority of safety functions

The safety functions *Safety priority x*, *Block* and *Forced operation* have priority over every other function. If one of these safety functions is active, operation of the corresponding output is blocked.

The order of priority of the safety functions cannot be changed, → [Priorities for Switch Actuator, Page 230](#).

#### 4.2.3.1.2 Safety priority

This safety function is parameterized in the following parameter window:

- Parameter window [Safety](#)

The safety function *Safety priority* can be used to protect electrical loads on the switching output or to switch them in accordance with an installation situation.

Three different safety priorities are available for the Switch Actuator outputs. The user can freely select which (if any) of the safety priorities each output should react to. The position of the relay contact can be specified individually for each output for a safety priority and for the cancellation of a safety priority.

Each safety priority has its own Group Object. The Group Object and the corresponding safety function are enabled in the parameter *Enable Group Object "Safety priority x"*. Safety priority x is active if:

- A telegram with the value 1 is received on the Group Object *Safety priority x*.
- A telegram is not received on the Group Object *Safety priority x* within the time set in the parameter *Cyclical monitoring* → [Cyclical monitoring, Page 235](#).

If the safety priority is active, the relay adopts the contact position set in the parameter *Switching reaction on safety priority x* and operation is blocked.

If the corresponding safety priority is canceled, the relay adopts the contact position set in the parameter *Switching reaction on cancellation of block, forced operation and safety priority* and operation is enabled.

#### **Note**

If a safety priority is active, the operation of the output via Group Objects and i-bus® Tool is blocked. Higher-priority safety functions continue to run → [Function diagram Switch Actuator, Page 42](#).

#### 4.2.3.1.3 Block

#### **Block**

This safety function is parameterized in the following parameter window:

- Parameter window [Safety](#)

The safety function *Block* can be used to block the output via the Group Object *Block* [Switch Actuator]. The relay adopts the contact position specified in the parameter *Switching reaction on block* and operation is blocked.

If the block is canceled, the relay adopts the contact position set in the parameter *Switching reaction on cancellation of block, forced operation and safety priority* and operation is enabled.

**Note**

If the safety function is active, the operation of the output via Group Objects and i-bus® Tool is blocked.

Higher-priority safety functions continue to run → [Function diagram Switch Actuator, Page 42.](#)

**4.2.3.1.4****forced operation**

This safety function is parameterized in the following parameter window:

- Parameter window [Safety](#)

The safety function *Forced operation* can be used to set the device outputs to a defined state and block them.

A state that is set if forced operation is activated can be parameterized with 1-bit forced operation. It can additionally be defined whether activation is to take place via the value 1 or 0.

With 2-bit forced operation, two states are specified that are set if forced operation is activated. Forced operation is activated/deactivated with the first bit. The defined state is set with the second bit.

Bit 1	Bit 0	State of forced operation
0	0	Forced operation inactive
0	1	Forced operation inactive
1	0	Forced operation active, state Off
1	1	Forced operation active, state On

Tab. 26: Coding of 2-bit forced operation

The safety function *Forced operation* is activated in the parameter [Forced operation \(1 bit / 2 bit\) \[Switch Actuator\]](#).

The position of the relay contact during forced operation is specified in the parameter [Switching reaction on forced operation](#).

The position of the relay contact if forced operation is canceled is specified in the parameter [Switching reaction on cancellation of block, forced operation and safety priority](#).

**Example**

The safety function *Forced operation* can be used to ensure that all lights are switched on and secured against switching off during a fire alarm.

**Note**

If the safety function is active, the operation of the output via Group Objects and i-bus® Tool is blocked.

Higher-priority safety functions continue to run → [Function diagram Switch Actuator, Page 42.](#)

**4.2.4****Function Logic**

This function is parameterized in the following parameter window:

- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#)

The functions *Logic* and *Threshold* can be used independent of other functions.



The function *Logic* can be used to influence the reaction of an output by means of the following logic functions:

- AND
- OR
- Exclusive OR
- GATE
- 1 bit Inverter

Two input Group Objects (*Connection A*, *Connection B*) and one result Group Object (*Status Result [Logic]*) are available for the AND, OR, exclusive OR and GATE logic functions.

An input Group Object (*Connection A*) and a result Group Object (*Status Result [Logic]*) are available for the 1-bit inverter.

The result can be linked internally to any output in the parameter *Output reacts to* or output on the Group Object *Status Result [Logic]*.

If the result is linked internally to an output, the result has the same priority as Scene recalls or switching commands → [Function diagram Switch Actuator, Page 42](#).

The send behavior of the Group Object *Status Result [Logic]* is defined in the parameter *Send value of Group Object "Status Result"*. Internally in the device, the result is updated when a value is received on one of the two input Group Objects.

The result is dependent on the logic function selected and the values in the corresponding input Group Objects. Refer to the table below for information about the reaction of the logic functions:

Logic function	Connection A	Connection B	Result	Explanation
AND	0	0	0	The result is 1 if both input values are 1.
	0	1	0	
	1	0	0	
	1	1	1	
OR	0	0	0	The result is 1 if at least one of the input values is 1.
	0	1	1	
	1	0	1	
	1	1	1	
Exclusive OR	0	0	0	The result is 1 if the input values differ.
	0	1	1	
	1	0	1	
	1	1	0	
GATE	Blocked	0	-	The input value (Connection B) is processed only if the GATE is open. The value is ignored if the GATE is blocked.
	Open	0	0	
	Blocked	1	-	
	Open	1	1	
1 bit Inverter	0	-	1	The input value (Connection A) is inverted.
	1	-	0	

Tab. 27: Results of the logic functions

The result is recalculated when a value is received on one of the two input Group Objects *Connection A* or *Connection B*.

## 4.2.5 Function Threshold

This function is parameterized in the following parameter window:

- Parameter window *Logic/Threshold* \ Parameter window *Logic/Threshold x*

The functions *Logic* and *Threshold* can be used independent of other functions.

The function *Threshold* is used to compare the value received on the threshold input with the thresholds set in the parameters *Upper threshold* and *Lower threshold*.

A minimum duration for undershooting and overshooting the thresholds can be defined in the following parameters:

- *Min. duration of the overshoot*
- *Min. duration of the undershoot*
- *Minimum dwell time between the thresholds*

One of the following Group Objects is used as the threshold input, depending on the setting in the parameter *Data point type of Group Object "Threshold input"*:

- *Threshold input* (DPT 13.010)
- *Threshold input* (DPT 13.013)
- *Threshold input* (DPT 14.019)
- *Threshold input* (DPT 14.056)
- *Threshold input* (DPT 5.001)
- *Threshold input* (DPT 5.010)
- *Threshold input* (DPT 7.001)
- *Threshold input* (DPT 9.001)
- *Threshold input* (DPT 9.004)
- *Threshold input* (DPT 9.021)
- *Threshold input* (DPT 9.024)

A result can be defined in the following parameters depending on whether the value on the threshold input is above or below the thresholds:

- *Result if upper threshold is exceeded*
- *Result if lower threshold is dropped below*

The result can be linked internally to any output in the parameter *Output reacts to* or output on the Group Object *Status Result [Threshold]*.

If the result is linked internally to an output, the result has the same priority as Scene recalls or switching commands → [Function diagram Switch Actuator, Page 42](#).

The parameter *Monitor range between thresholds* can be used to define whether the range between the upper and lower thresholds is monitored and an evaluation is output on the Group Object *Status Input value between thresholds*.

The send behavior of the Group Objects *Status Result [Threshold]* and *Status Input value between thresholds* is defined in the parameter *Send values of Group Objects "Status Result" and "Status Input value between thresholds"*. Internally in the device, the result is updated when a value is received on the threshold input.

The thresholds set in ETS can be changed via the bus (ABB i-bus® KNX). The setting is made in the following parameters:

- *Change thresholds via Group Objects*
- *Change thresholds via i-bus® Tool*

The modified thresholds are received on the following Group Objects via the bus (ABB i-bus® KNX), depending on the setting in the parameter *Data point type of Group Object "Threshold input"*:

- *Change upper threshold* (DPT 13.010)  
*Change lower threshold* (DPT 13.010)
- *Change upper threshold* (DPT 13.013)  
*Change lower threshold* (DPT 13.013)
- *Change upper threshold* (DPT 14.019)  
*Change lower threshold* (DPT 14.019)
- *Change upper threshold* (DPT 14.056)  
*Change upper threshold* (DPT 14.056)
- *Change upper threshold* (DPT 5.001)  
*Change lower threshold* (DPT 5.001)
- *Change upper threshold* (DPT 5.010)  
*Change lower threshold* (DPT 5.010)
- *Change upper threshold* (DPT 7.001)  
*Change lower threshold* (DPT 7.001)
- *Change upper threshold* (DPT 9.001)  
*Change lower threshold* (DPT 9.001)
- *Change upper threshold* (DPT 9.004)  
*Change lower threshold* (DPT 9.004)
- *Change upper threshold* (DPT 9.021)  
*Change lower threshold* (DPT 9.021)
- *Change upper threshold* (DPT 9.024)  
*Change lower threshold* (DPT 9.024)

In the parameter *Overwrite thresholds on download* it is defined whether the thresholds changed via the bus (ABB i-bus® KNX) are overwritten with the thresholds set in ETS during an application download.

## 4.2.6 Function Load shedding

This function is parameterized in the following parameter window:

- Parameter window *Switch Actuator X* \ Parameter window *Load shedding*

With the function *Load shedding*, a load control master (e.g. Energy Analyzer QA/S, Energy Actuator SE/S) can manage an electrical installation energy efficiently. If a defined load limit is exceeded, the load control master sends switching commands in the form of load shedding stages on the bus (ABB i-bus® KNX). The slave devices receive the load shedding stages and react as per the parameterization.

The load shedding stages can be defined individually for each channel in the slave devices.

The functionality is explained in the following example based on a QA/S as the master:

### Note

The QA/S (master) processes eight load shedding stages in this example. The number of load shedding stages must be matched between master and slave.

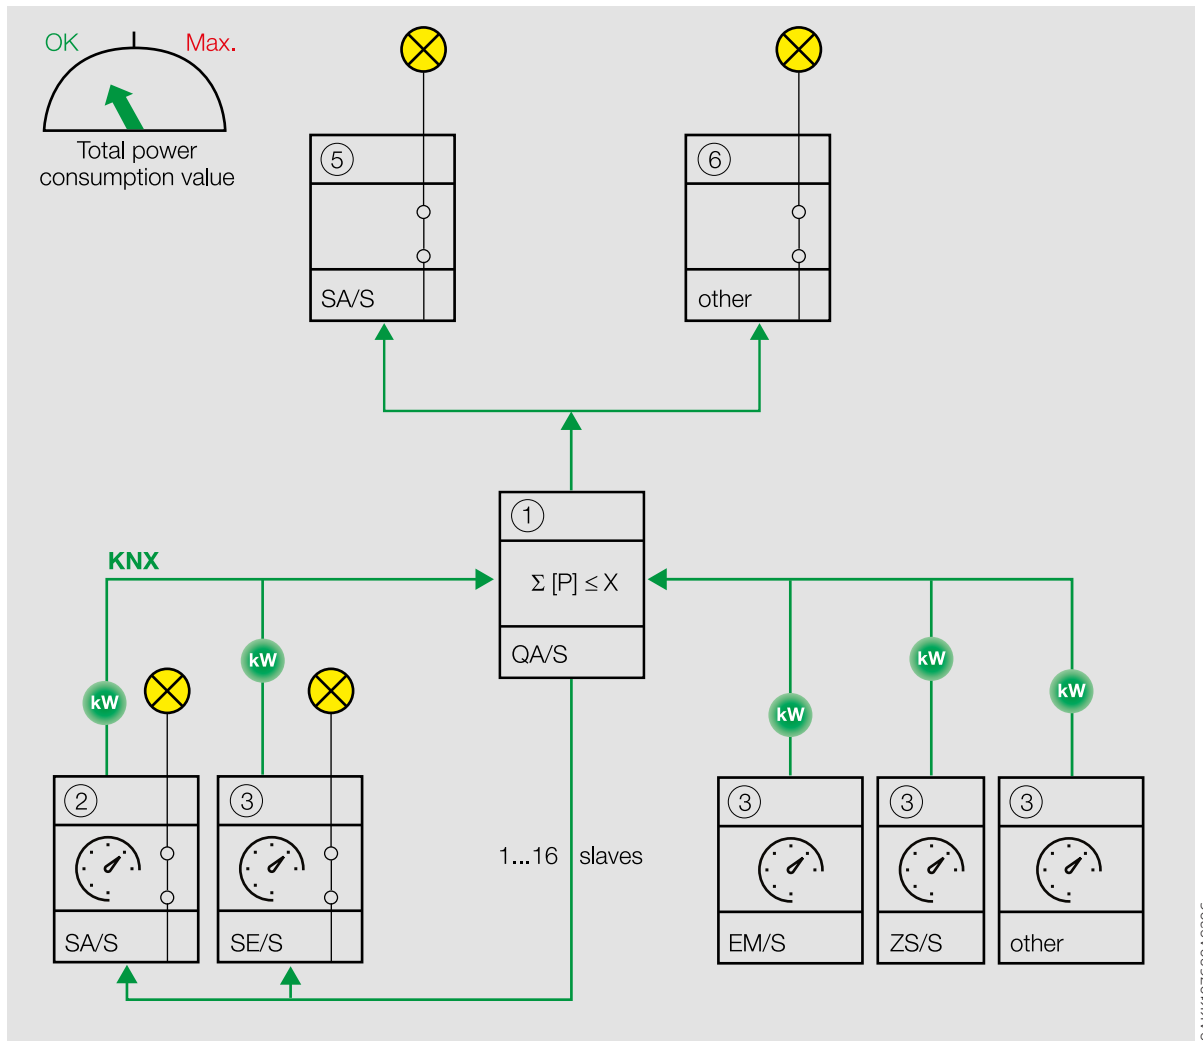


Fig. 14: Master receives power values

The QA/S (master) (1) receives power values from up to 16 slaves (e.g. SA/S x.16.6.2 (2) or energy meters such as SE/S, EM/S, ZS/S (3)). Devices (5) (6) that do not send any direct energy consumption values can also be integrated into the function *Load shedding* via an energy meter (e.g. ZS/S (3)).

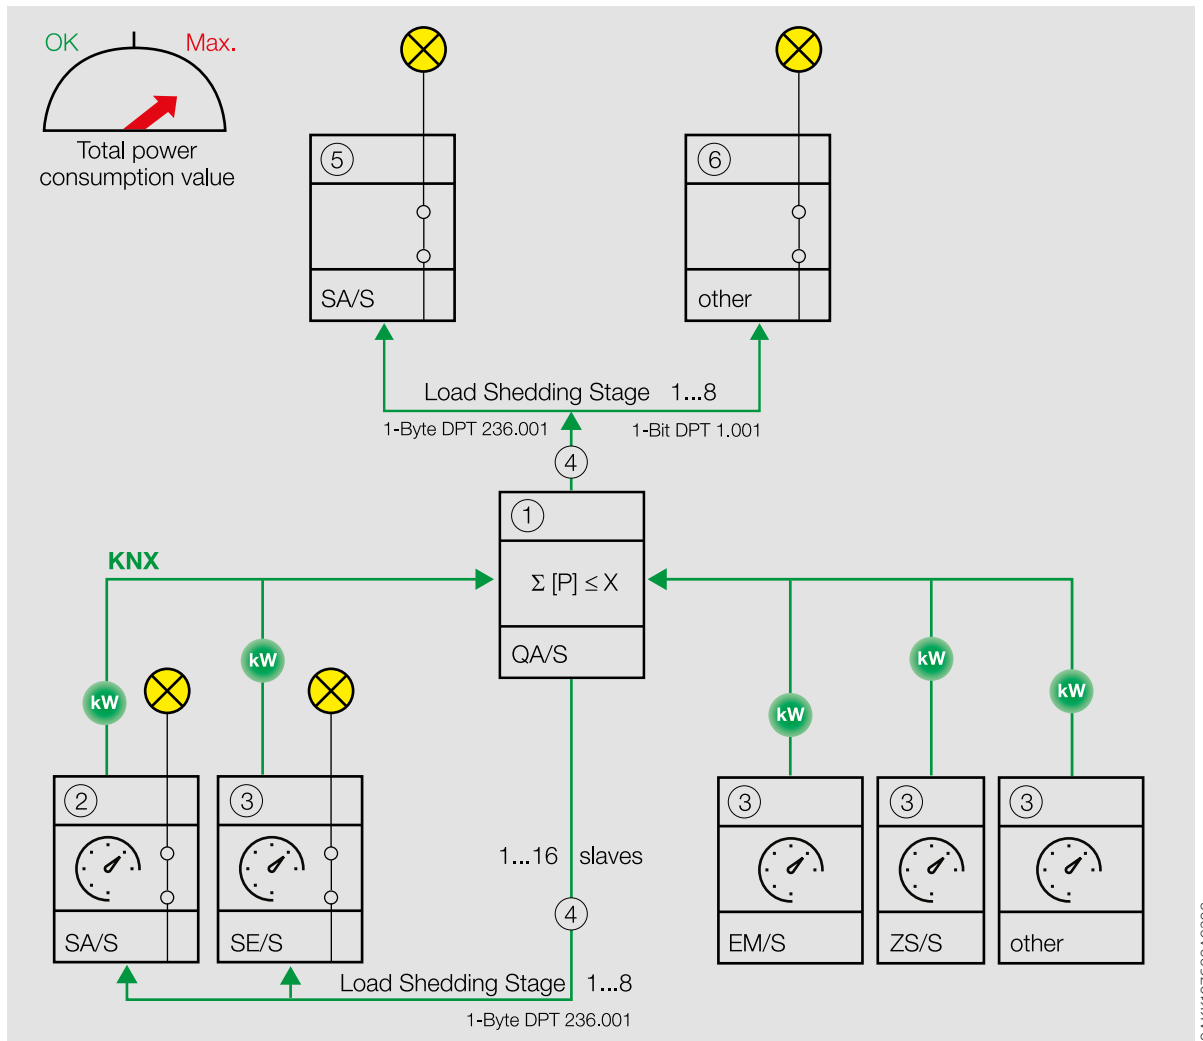


Fig. 15: Master adds together power values received

The master adds together the power values received and calculates the total power consumption. If the total power consumption exceeds the load limit defined, the master sends load shedding stages (4) on the bus (ABB i-bus® KNX).

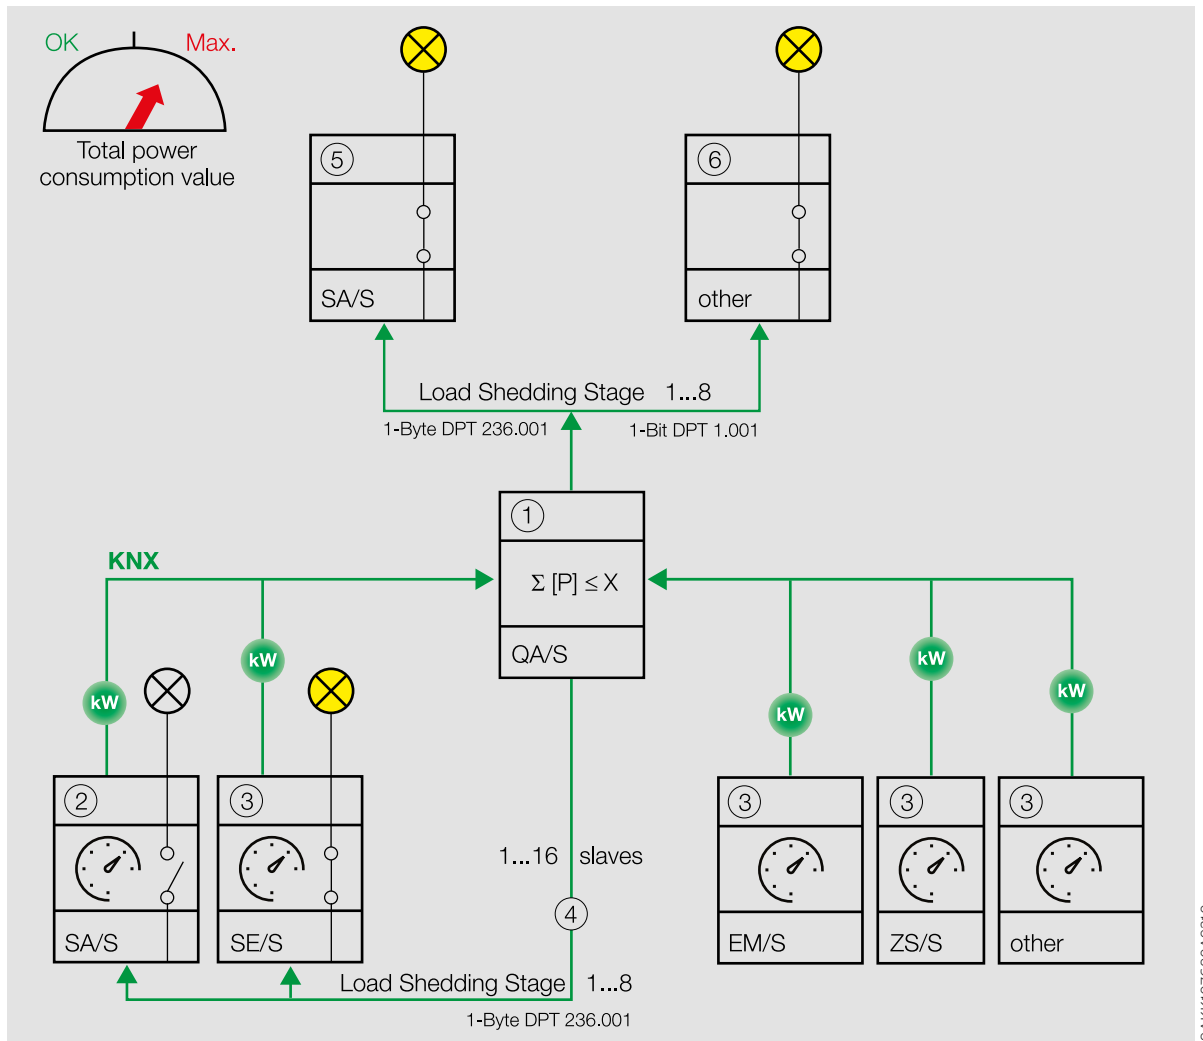


Fig. 16: Slaves receive load shedding stages

The slaves receive the load shedding stages and switch all channels that are assigned to this load shedding stage, corresponding to the reaction defined in the parameter *Switching reaction on active load shedding stage*.

**Note**

Integration of other devices into the load shedding → corresponding product manuals.

**Note**

- All ABB Switch Actuators (5) (Combi, Standard and Professional) contain the function *Load shedding*, including the Group Object *Receive load shedding stage* (DPT 236.001).
- Other devices (6) without the Group Object *Receive load shedding stage* (DPT 236.001) can be integrated into the function *Load shedding* using the Group Objects "Send load shedding stage x" (DPT 1.001) of the QA/S Energy Analyzer.

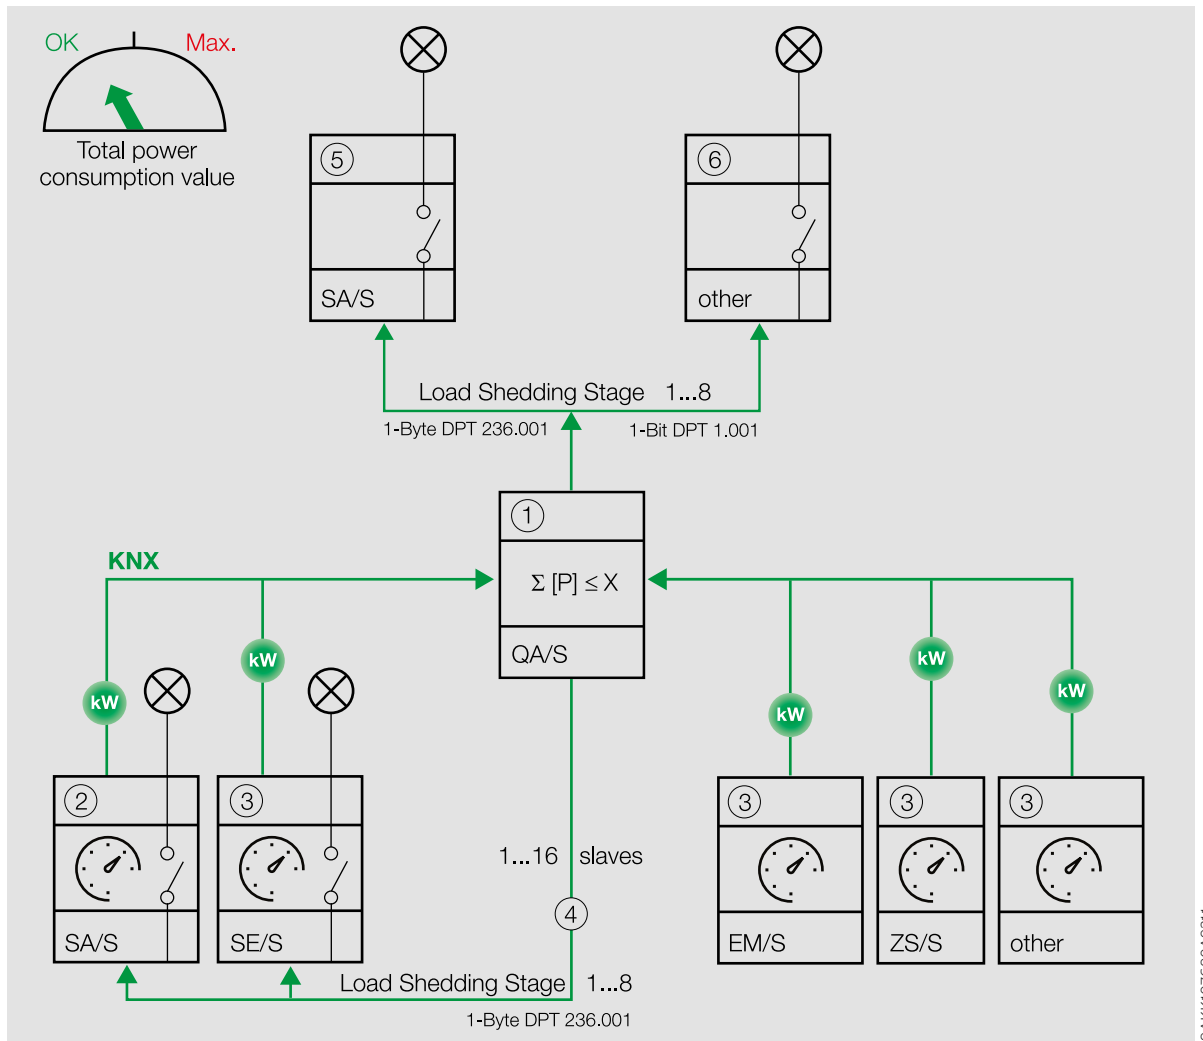


Fig. 17: Master increases load shedding stage

The master increases the load shedding stage until the total power consumption drops below the load limit.

**Note**

Integration of other devices into the load shedding → corresponding product manuals.

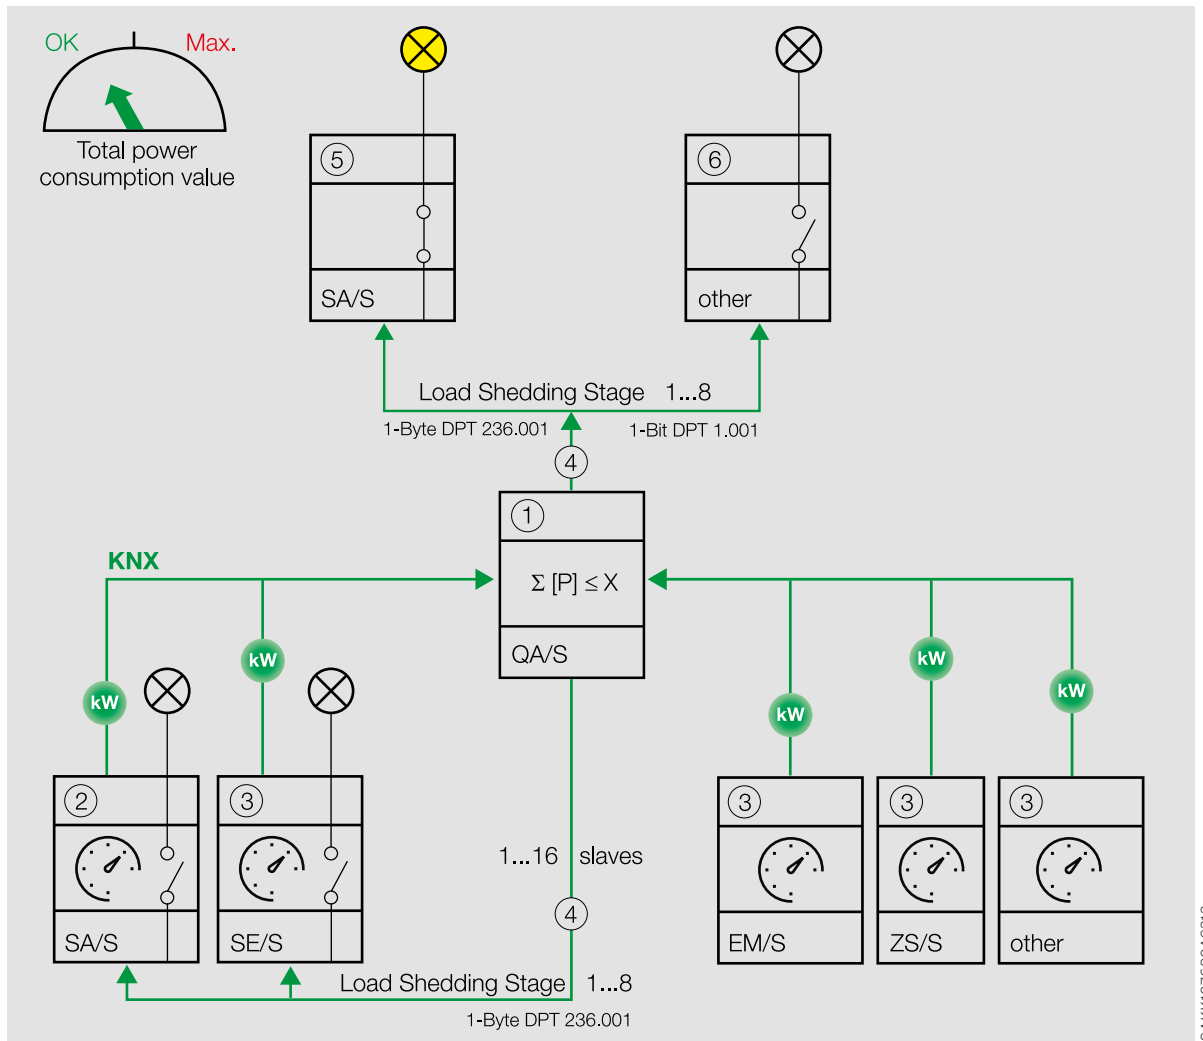


Fig. 18: Master decreases load shedding stage

Once the total power consumption has dropped below the load limit, the master (1) decreases the load shedding stage and sends this information via the bus (ABB i-bus® KNX) to the slaves. The channels react corresponding to the setting in the parameter *Switching reaction on revoke of load shedding stage*.

The load shedding stage for the channel is defined in the parameter *Load shedding stage*.

The load shedding stage set in ETS can be changed via the bus (ABB i-bus® KNX). The setting is made in the following parameters:

- *Change load shedding stage via Group Object*
- *Change load shedding stage via i-bus® Tool*

The modified load shedding stage is received on the Group Object *Set load shedding stage* via the bus (ABB i-bus® KNX).

In the parameter *Overwrite load shedding stage at download* it is defined whether the load shedding stage changed via the bus (ABB i-bus® KNX) is overwritten with the load shedding stage set in ETS during an application download.

## 4.2.7 Function Current measurement

This function is parameterized in the following parameter window:

- Parameter window *Switch Actuator X* \ Parameter window *Current measurement [channel]*
- Parameter window *Energy group X* \ Parameter window *Current measurement [group]*



Using the function *Current measurement*, sinusoidal load currents with a rated frequency range of 50 ... 60 Hz can be measured. The measured load currents are available as root mean square values.

Depending on the type of waveform, non-sinusoidal currents such as currents with varying phase angle or distorted currents will cause a measurement error. If a DC current is superimposed, the measurement error is significantly greater.

**Note**

With non-sinusoidal currents, there are significant differences between a true RMS measuring device (TRMS) and the values indicated by the function *Current measurement*. For comparative measurements, a measuring device should be used that is calibrated for sinusoidal AC currents.

Due to the measuring principle, only currents > 20 mA can be measured correctly.

The following technical data apply to the current measurement:

<b>Energy function</b>	Detection range	0.02 ... 20 A
	Accuracy	±2 % of the actual current ±0.02 A
	Measurement delay	2 s
	Load current $I_{load}$ AC	0 ... 20 A, sinusoidal
	Load current $I_{load}$ DC	Is not acquired

Tab. 28: Energy function

Examples for maximum measurement errors for purely sinusoidal currents:

Current measured	Maximum measurement error
300 mA	± 26 mA
2 A	± 60 mA
16 A	± 340 mA
20 A	± 420 mA

Tab. 29: Examples for maximum measurement errors for purely sinusoidal currents

The current measurement can be set individually for each channel. Several channels can be combined into energy groups.

**Note**

The links in the following function description relate to settings for the channel. The settings for the energy groups are made based on the same principle.

The current measured is sent via one of the following Group Objects on the bus (ABB i-bus® KNX), depending on the selection in the parameter *Current displaying unit [channel]*:

- *Status Current* (DPT 9.021)
- *Status Current* (DPT 14.019)

The send behavior is defined in the parameter *Send value of Group Object "Status Current"*. The parameter *Value is sent from a change of* can be used to define that the measured current value is sent on the bus (ABB i-bus® KNX) only after a deviation from the value sent previously.

To prevent incorrect measurements due to high starting or breaking currents, a measurement delay can be set in the parameter *Measurement delay after contact position change*.

## 4.2.8 Function Power calculation

This function is parameterized in the following parameter window:

- Parameter window *Switch Actuator X* \ Parameter window *Power calculation [channel]*
- Parameter window *Energy group X* \ Parameter window *Power calculation [group]*

**Note**

The power calculation is based on measured sinusoidal currents and fixed values for voltage and power factor. As the actual power can differ from the calculated value, the power calculation should not be used for billing purposes.

Using the function *Power calculation*, the power can be calculated continuously based on the current measured (→ [Function Current measurement, Page 52](#)) and the predefined values for voltage and power factor. The power calculation can be set individually for each channel. Several channels can be combined into energy groups.

The values for voltage and power factor are set in the following parameters:

- [Voltage](#)
- [Power factor \(cos phi\)](#)

The values set in ETS can be changed via the bus (ABB i-bus® KNX). The setting is made in the following parameters:

- [Change values Voltage/Power factor via Group Objects](#)
- [Change values Voltage/Power factor via i-bus® Tool](#)

The modified values are received on the following Group Objects via the bus (ABB i-bus® KNX):

- [Voltage value](#)
- [Power factor \(cos phi\)](#)

**Example**

Current measured values can be received from external measuring devices via the Group Objects [Voltage value](#) and [Power factor \(cos phi\)](#). In this way a more exact calculation of the power is possible.

In the parameter [Overwrite values Voltage/Power factor on download](#) it is defined whether the values changed via the bus (ABB i-bus® KNX) are overwritten with the values set in ETS during an application download.

**Note**

The links in the following function description relate to settings for the channel. The settings for the energy groups are made based on the same principle.

The power calculated is sent on the bus (ABB i-bus® KNX) via one of the following Group Objects, depending on the setting in the parameter [Power displaying unit \[channel\]](#):

- [Status Power](#) (DPT 14.056)
- [Status Power](#) (DPT 9.024)

The send behavior is defined in the parameter [Send value of Group Object "Status Power"](#). The parameter [Value is sent from a change of](#) can be used to define that the power value is sent on the bus (ABB i-bus® KNX) only after a deviation from the value sent previously.

**Note**

The values calculated are available on the bus (ABB i-bus® KNX) with a delay of approx. 2 seconds.

## 4.2.9 Function Energy consumption

This function is parameterized in the following parameter window:

- Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#)
- Parameter window [Energy group X](#) \ Parameter window [Energy consumption \[group\]](#)

Using the function *Energy consumption*, the energy consumption of the channel can be calculated based on the power calculated (→ [Function Power calculation, Page 53](#)) and the elapsed time. The energy consumption calculation can be set individually for each channel. Several channels can be combined into energy groups.

**Note**

The energy consumption calculation is based on measured sinusoidal currents and fixed values for voltage and power factor. The actual energy consumption can vary from the value calculated. The energy consumption calculation is not permitted to be used for billing purposes.

**Note**

The device receives the date and time from a system clock to set the device time or to synchronize the device time. For greater accuracy, it is recommended to synchronize the device time at least once per hour.

**Note**

The links in the following function description relate to settings for the channel. The settings for the energy groups are made based on the same principle.

### Total meter

The energy consumption calculation is activated in the parameter [Activate total meter \[channel\]](#). The energy consumption calculated is sent via one of the following Group Objects on the bus (ABB i-bus® KNX), depending on the setting in the parameter [Energy displaying unit \[channel\]](#):

- [Status Total meter energy consumption \(DPT 13.010\)](#)
- [Status Total meter energy consumption \(DPT 13.013\)](#)

The send behavior is defined in the parameter [Send value of Group Object "Status Total meter energy consumption"](#). The parameter [Value is sent from a change of](#) can be used to define that the calculated consumption value is sent on the bus (ABB i-bus® KNX) only after a deviation from the value sent previously.

**Note**

The values calculated are available on the bus (ABB i-bus® KNX) with a delay of approx. 2 seconds.

The timestamp with the start time for the energy consumption calculation is activated in the parameter [Send timestamp of total meter start \[channel\]](#) and sent via the following Group Objects on the bus (ABB i-bus® KNX), depending on the setting in the parameter [Data point type timestamp \[channel\]](#):

- [Start total meter date](#)
- [Start total meter time](#)
- [Start total meter Date/Time](#)

The energy consumption calculation can be reset or restarted either via the Group Object [Reset total meter](#) or via i-bus® Tool:

- [Reset total meter via Group Object \[channel\]](#)
- [Reset total meter via i-bus® Tool](#)

### Intermediate meter

**Note**

The energy consumption calculation via the intermediate meter is not available in the energy groups.

If an energy consumption calculation is to be performed within an interval, the intermediate meter can be used.

The intermediate meter is activated in the parameter *Activate intermediate meter* and started or stopped via the Group Object *Start/Stop intermediate meter*.

Function of the intermediate meter:

- If, with the intermediate meter running, a telegram with the value 1 is received on the Group Object *Start/Stop intermediate meter*, the intermediate meter sends the currently calculated energy consumption and continues to run.
- If, with the intermediate meter running, a telegram with the value 0 is received on the Group Object *Start/Stop intermediate meter*, the intermediate meter sends the currently calculated energy consumption and stops.
- If, with the intermediate meter stopped, a telegram with the value 0 is received on the Group Object *Start/Stop intermediate meter*, the intermediate meter sends the last value sent.
- If, with the intermediate meter stopped, a telegram with the value 1 is received on the Group Object *Start/Stop intermediate meter*, the intermediate meter is started, it sends the value 0 (reset) and the meter reading starts at 0.

The energy consumption currently calculated is sent via one of the following Group Objects on the bus (ABB i-bus® KNX), depending on the setting in the parameter *Energy displaying unit [channel]*:

- *Status Intermediate meter energy consumption* (DPT 13.010)
- *Status Intermediate meter energy consumption* (DPT 13.013)

#### **Note**

Sending the energy consumption calculated can also be triggered via a Value Read on the following Group Objects:

- *Status Intermediate meter energy consumption* (DPT 13.010)
- *Status Intermediate meter energy consumption* (DPT 13.013)

During a Value Read the last value sent is sent again.

More information: → [Value Read, Page 235](#).

## 4.2.10

### Function Load monitoring

This function is parameterized in the following parameter window:

- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]*

Using the function *Load monitoring*, the status of a load connected to the output can be monitored efficiently. The complete status information for the load can be sent in real time on the bus (ABB i-bus® KNX) via Group Objects and used for visualization or energy monitoring systems. The load monitoring can be set individually for each channel. Several channels can be combined into energy groups.

#### **Note**

The links in the following function description relate to settings for the channel. The settings for the energy groups are made based on the same principle.

The function *Load monitoring* calculates the status of the load based on the current measured (or the power value if the function *Power calculation* is used). The status of the load is defined via current or power thresholds. Which thresholds are monitored is defined in the parameter *Type of monitoring [channel]*.

If the current or power value for the load exceeds or falls below a threshold, the status of the load is sent on the bus (ABB i-bus® KNX) via the corresponding Group Object.

#### **Note**

A threshold is exceeded if the value measured is greater than the threshold set.

A threshold is fallen below if the value measured is less than the threshold set.

The status of the load is divided into the following ranges:

- A: On/Off
- B: Standby
- C: Underload
- D: Operation
- E: Overload
- F: Maximum threshold exceeded

**Note**

Status Load On/Off is reliably detected if the current measured by the device is  $> 0$  A. More information: → [Function Current measurement, Page 52](#).

The ranges are defined via thresholds. The thresholds can be set in the following parameters:

- [Threshold Standby/Underload \(I\) \[channel\]](#)
- [Threshold Underload/Operation \(II\) \[channel\]](#)
- [Threshold operation/overload \(III\) \[channel\]](#)
- [Maximum threshold \(IV\) \[channel\]](#)

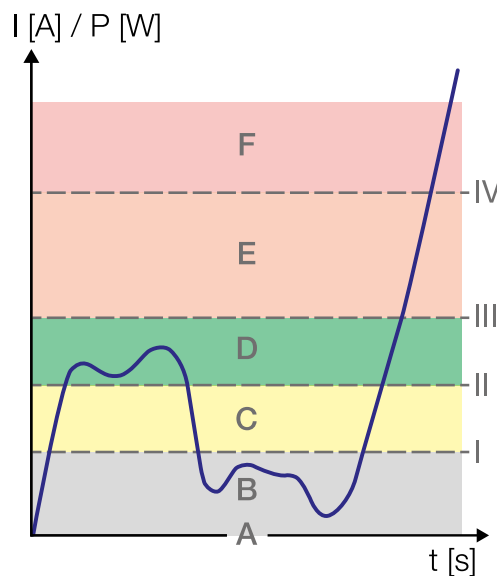


Fig. 19: Load monitoring

The thresholds are set as currents. If the function *Power calculation* is used, it can be defined in the parameter [Measurement unit](#) whether the thresholds are set as current or as power values.

**Note**

If several channels are combined into energy groups, the setting in the parameter [Measurement unit](#) in the group and in the related channels must be identical.

**Note**

The following is to be noted while defining the thresholds:

- A current or power value with large fluctuations will result in frequently changing status results. The bus load will increase if the status of the load is sent on change.
- The device does not check whether the sequence or the levels for the thresholds set are plausible.

The thresholds set in ETS can be changed via the bus (ABB i-bus® KNX). The setting is made in the following parameters:

- [Change load thresholds via Group Objects \[channel\]](#)
- [Change load thresholds via i-bus® Tool](#)

The modified thresholds are received on the following Group Objects via the bus (ABB i-bus® KNX), depending on the setting in the parameter *Measurement unit*:

- *Set threshold Standby/Underload* (DPT 14.019)
- *Set threshold Standby/Underload* (DPT 14.056)
- *Set threshold Underload/Operation* (DPT 14.019)
- *Set threshold Underload/Operation* (DPT 14.056)
- *Set threshold Operation/Overload* (DPT 14.019)
- *Set threshold Operation/Overload* (DPT 14.056)
- *Set maximum threshold* (DPT 14.019)
- *Set maximum threshold* (DPT 14.056)

In the parameter *Overwrite load threshold at download* it is defined whether the thresholds changed via the bus (ABB i-bus® KNX) are overwritten with the thresholds set in ETS during an application download.

If the option *General threshold monitoring (A ... F)* is selected in the parameter *Type of monitoring [channel]*, it can be defined in the dependent parameter *Status Send load as [channel]* whether the status of the load is sent via a common Group Object or via individual 1-bit Group Objects on the bus (ABB i-bus® KNX).

If other options are selected in the parameter *Type of monitoring [channel]*, the status of the load is sent via individual Group Objects on the bus (ABB i-bus® KNX).

The following Group Objects are available for sending the load status:

- *Status Load*
- *Status Load maximum threshold exceeded*
- *Status Load in overload*
- *Status Load in operation*
- *Status Load in underload*
- *Status Load in standby*
- *Status Load On/Off*

More information → [Coding, Group Object "Status Load", Page 232](#), → [Telegram values 1-bit Group Objects "Status Load", Page 234](#).

The send behavior of all Group Objects for the load monitoring is defined in the parameter *Send Status Load*.

#### Note

Monitoring conditions cannot be influenced in practice. Load monitoring via a current or power threshold model is possible only if the following is taken into account:

- Current fluctuations due to tolerances and environmental effects
- Accuracy of power calculation

## 4.2.11 Function Contact supervision

This function is parameterized in the following parameter window:

- Parameter window *Switch Actuator X* \ Parameter window *Contact supervision*

The function *Contact supervision* can be used to monitor the position of the relay contact. The contact position brought about via the bus (ABB i-bus® KNX) or via i-bus® Tool is compared to the actual current that has been measured via the function *Current measurement*.

### Contact open and current flows

If a current is measured with the contact position "open", this situation can be due to the following causes:

- Contact position changed manually via toggle switch
- Contact welded

An alarm telegram is sent on the bus (ABB i-bus® KNX) via the Group Object [Contact open and current flows](#). The telegram value depends on the option selected in the parameter [Value of Group Object when contact open and current flows](#).

### Contact closed and no current flows

If no current is measured with the contact position "closed", this situation can be due to the following causes:

- Contact position changed manually via toggle switch
- Back-up fuse tripped
- Cable break
- No load connected to the output
- Load switched off via a different switch (e.g. device switch)
- Load faulty
- Contact oxidized (high-impedance)

An alarm telegram is sent on the bus (ABB i-bus® KNX) via the Group Object [Contact closed and no current flows](#). The telegram value depends on the option selected in the parameter [Value of Group Object when contact closed and no current flows](#).

### Resetting the alarm

If the alarm is to be reset automatically after troubleshooting, the option *No* is to be selected in the parameter [Reset alarm via Group Object](#). If the option *Yes* is selected, the alarm must be reset via the Group Object [Reset alarm](#).

## 4.2.12

### Function Scenes

This function is parameterized in the following parameter window:

- Parameter window [Switch Actuator X](#) \ Parameter window [Scene assignments \[Switch Actuator\]](#)

The function *Scenes* can be used to create, to enable, to assign Scenes to the output and to incorporate additional KNX devices in a Scene. It is a prerequisite that all the devices incorporated are parameterized with the same Scene number and recall is via the same group address.

The following parameters can be used to create, enable and assign to the output up to 16 Scenes:

- [Enable Scene assignment x \[Switch Actuator\]](#)

An individual number (1 ... 64) is assigned for each Scene in the parameter [Scene number](#).

The reaction of the output during Scene recall is defined in the parameter [Reaction on Scene recall](#).

The parameter [Delay](#) is used to define the delay with which the Scene is run after Scene recall.

#### **i** Note

If a delay is used for Scene recall (→ parameter [Delay](#)), the output does not react to the functions *Staircase lighting* and *Delay for switching on and off* → [Function diagram Switch Actuator, Page 42](#).

## Scene recall

A Scene is recalled via the following Group Objects:

- [Scene 1 ... 64](#)  
A Scene number is received via this central Group Object. All outputs and KNX devices incorporated execute the Scenes assigned with the corresponding Scene number. Depending on the telegram value, the current positions of the relay contacts for all outputs and KNX devices integrated can be saved in the Scene. In this way, the contact position for a Scene number can be overwritten.
- [Scene 1...64](#)  
A Scene number is received via this Group Object. The output executes all Scenes assigned with the corresponding Scene number. Depending on the telegram value, the current position of the relay contact can be saved in the Scene. In this way, the contact position for a Scene number can be overwritten.
- [Recall Scene assignment x](#)  
The Scene assignment  $x$  ( $x = 1 \dots 4$ ) for the output is recalled via these 1-bit Group Objects and the corresponding Scene number executed. This direct Scene recall is possible only for Scene assignments  $1 \dots 4$ .

### 4.2.12.1 Structure of 1-byte Scene telegram

A 1-byte Scene telegram contains the Scene number ( $1 \dots 64$ ) and information about whether to recall or save the Scene.

Telegram value:

- $0 \dots 63 = \text{Recall Scene } x$  ( $x = 1 \dots 64$ )
- $128 \dots 191 = \text{Save Scene } x$  ( $x = 1 \dots 64$ )

More information: → [Table of values, Group Object "Scene 1 ... 64", Page 239](#).

## 4.2.13 Time functions

Three time functions are available for each output. The parameter [Enable function Time](#) can be used to assign one of the following time functions to each output:

- → [Function Staircase lighting, Page 60](#)
- → [Function Delay for switching on and off, Page 62](#)
- → [Function Flashing, Page 63](#)

The selected time function is integrated into the function chain for the output.

More information: → [Function diagram Switch Actuator, Page 42](#).

### 4.2.13.1 Function Staircase lighting

This function is parameterized in the following parameter window:

- [Staircase lighting](#)

The function *Staircase lighting* can be used for time-controlled lighting (e.g. staircase lighting) or to control automatically an application with a similar function.

#### **i** Note

If a delay is used for Scene recall (→ parameter [Delay](#)), the output does not react to the functions *Staircase lighting* and *Delay for switching on and off* → [Function diagram Switch Actuator, Page 42](#).

The switch-on duration is defined in the parameter [Staircase lighting time](#).



Depending on the option selected in the parameter *Switching reaction of staircase lighting on telegram value 0/1*, the receipt of a telegram with the value 0 or 1 on one of the following Group Objects produces switching:

- *Switch*
- *Switch (Central)*
- *Scene 1...64*
- *Scene 1 ... 64 (Central)*
- *Status Result [Logic]*
- *Status Result [Threshold]*

If the contact is defined as normally opened in the parameter *Reaction of output*, the contact is closed on receipt of a switch-on value and opened after the staircase lighting time has elapsed.

If the contact is defined as normally closed in the parameter *Reaction of output*, the contact is opened on receipt of a switch-on value and closed after the staircase lighting time has elapsed.

The function *Staircase lighting* can notify of the imminent switching off (→ parameter *Warning time*). The warning time starts after the staircase lighting time has elapsed. The type of warning is defined in the parameter *Warning before switching off the staircase lighting*:

- Via the Group Object *Warning staircase lighting*:  
The Group Object is set to the value 1 at the start of the warning time. The Group Object is set to the value 0 when the warning time elapses. The Group Object can be used to switch a warning light.
- Via short switching off/on:  
The output is briefly switched off and then back on during the warning time. The number of Off/On changes can be defined in the parameter *Number of Off/On changes*. The first Off/On change takes place at the beginning of the warning time. Additional Off/On changes are uniformly distributed over the remaining warning time.

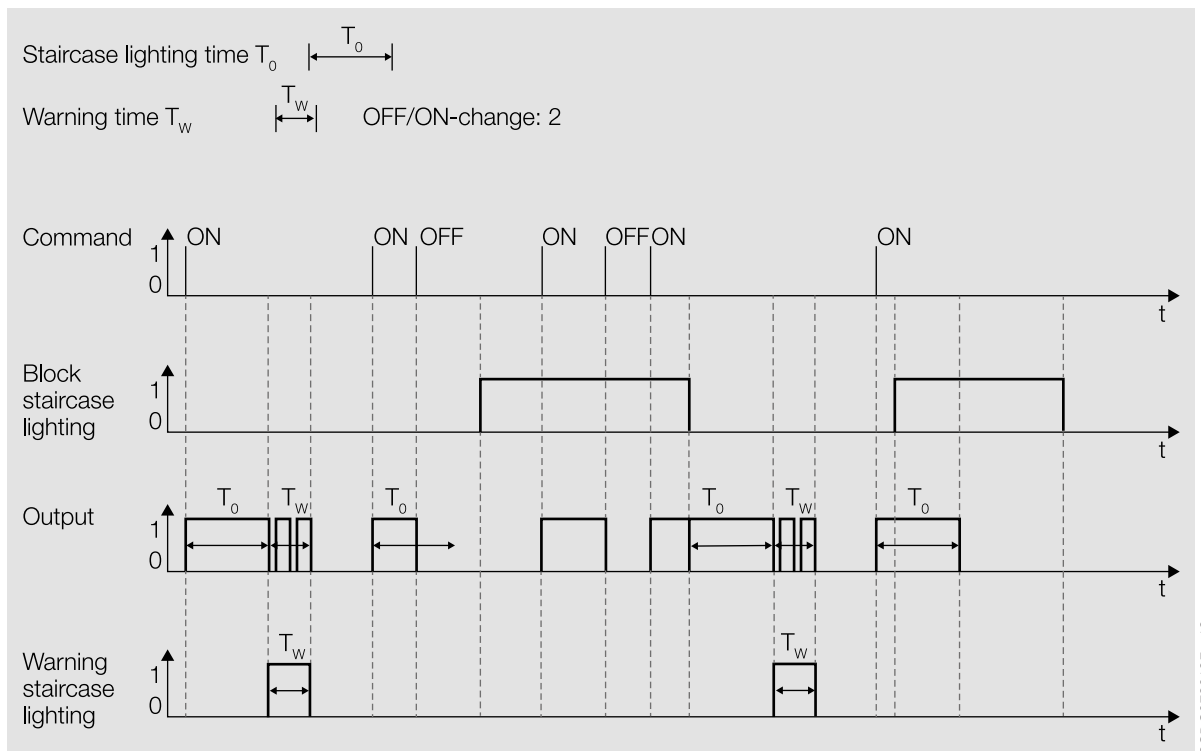


Fig. 20: Switch-on/switch-off reaction of the function Staircase lighting

#### 4.2.13.1.1

#### Extending staircase lighting time (retriggering/pumping)

The staircase lighting time can be restarted if the option *Yes* is selected in the parameter *Staircase lighting time can be started again*.

## Retriggering

The staircase lighting time can be restarted any number of times if the option *No, can only be started again* is selected in the parameter *Staircase lighting time extendable (pumping)*.

## Pumping

If the option “Up to max. x times staircase lighting time” ( $x = 2 \dots 5$ ) is selected in the parameter *Staircase lighting time extendable (pumping)*, the staircase lighting time can be extended to max. five times the duration. If further switch-on commands are received during the staircase lighting time or during the warning time, the staircase lighting time is extended by a further staircase lighting time.

The following diagram shows the reaction on extension to quintuple the staircase lighting time:

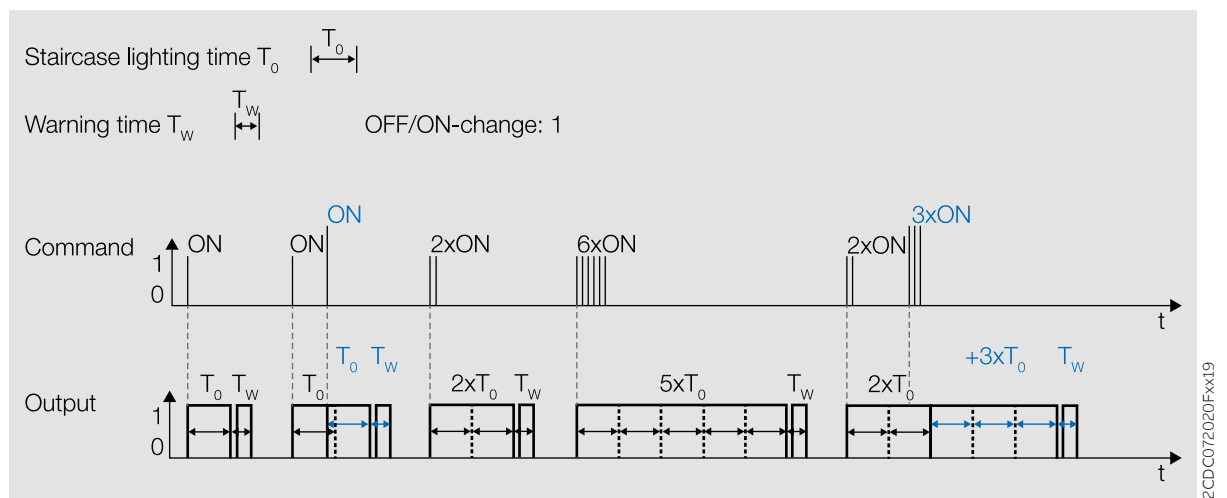


Fig. 21: Extending staircase lighting time (retriggering/pumping)

### 4.2.13.1.2

#### Block staircase lighting

The function *Staircase lighting* can be blocked via the Group Object *Block staircase lighting*. If the function *Staircase lighting* is blocked, the switch-on command is forwarded without time function in the function chain (→ [Function diagram Switch Actuator, Page 42](#)) and the output reacts according to its parameterization.

### 4.2.13.1.3

#### Permanent on

If the function *Staircase lighting* is activated, the output can be permanently switched on via the Group Object *Staircase lighting permanent on*. If Permanent on operation is activated, the output remains switched on. Other functions continue to run in the background, but they do not trigger any switching operation. If Permanent on operation is deactivated, the output reacts to the Group Object *Switch*.

The parameter *Restart staircase lighting time after permanent on* can be used to define how the lighting reacts after the end of Permanent ON operation.

After a download or bus voltage recovery, the Permanent on operation state from before the download or bus voltage failure is restored.

### 4.2.13.2

#### Function Delay for switching on and off

This function is parameterized in the following parameter window:

- [Delay for switching on and off](#)

Using the function *Delay for switching on and off*, the effect of a switching command received on one of the following Group Objects can be delayed:

- *Switch*
- *Switch* (Central)
- *Scene 1...64*
- *Scene 1 ... 64* (Central)
- *Status Result [Logic]*
- *Status Result [Threshold]*

**i Note**

If a delay is used for Scene recall (→ parameter *Delay*), the output does not react to the functions *Staircase lighting* and *Delay for switching on and off* → [Function diagram Switch Actuator, Page 42](#).

The duration of the delay is set in the following parameters:

- *Delay for switching on*
- *Delay for switching off*

Reaction of the delay for switching on:

- The delay for switching on starts after the reception of a switch-on command (telegram with the telegram value 1).
- If a switch-on command is received during the delay for switching on, the time for the delay for switching on restarts.
- If a switch-off command is received during the delay for switching on, the switch-on is discarded.

Reaction of the delay for switching off:

- The delay for switching off starts after the reception of a switch-off command (telegram with the telegram value 0).
- If a switch-off command is received during the delay for switching off, the time for the delay for switching off restarts.
- If a switch-on command is received during the delay for switching off, the switch-off is discarded.

**i Note**

Whether the relay contact is opened or closed depends on the setting in the parameter *Reaction of output*.

### 4.2.13.3

#### Function Flashing

This function is parameterized in the following parameter window:

- *Flashing*

The function *Flashing* can be used to switch the relay contact alternately after receipt of a switch-on command.

The switch-on command is issued via the Group Object *Flashing*. Each switch-on command restarts the flashing cycle.

The parameter *Flashing if Group Object "Flashing" is* can be used to define the telegram value with which a flashing cycle can be started and prematurely ended.

The number and duration of the flashing cycles can be defined in the following parameters:

- *Time for on*
- *Time for off*
- *Number of flashing cycles*

Each flashing cycle begins with the On state. Whether the relay contact is opened or closed depends on whether the output is defined as a normally closed contact or normally opened contact in the parameter [Reaction of output](#).

Each flashing cycle begins with the Off state. The position of the relay contact after the end of the flashing cycle can be specified in the parameter [Reaction after flashing](#).

If the function *Flashing* is active, the output does not react to other switching commands → [Function diagram Switch Actuator, Page 42](#).

#### **i** Note

If the function *Flashing* is used:

- Pay attention to the service life of the lighting equipment.
- Take into account the service life of the switching contacts → Technical data.

#### **i** Note

Each relay can perform only a limited number of switching operations per minute → Technical data. A large number of switching operations per minute can delay switching.

## 4.3 Integration into i-bus® Tool

i-bus® Tool can be used to read the data from connected devices. It can also be used to simulate values and test the following functions:

- Function of the physical inputs and outputs

If there is no communication between the devices and i-bus® Tool, the simulated values cannot be sent on the bus.

For more information → parameter [i-bus® Tool access](#).

i-bus® Tool can be downloaded free of charge from the company homepage ([www.abb.com/knx](http://www.abb.com/knx)).

#### **i** Note

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

## 4.4 Special operating states

The devices' reaction on bus voltage failure, after bus voltage recovery and after ETS download can be set in the device parameters.

### 4.4.1 Reaction on bus voltage failure

Bus voltage failure describes the failure of the bus voltage, e.g. due to a power failure.

The reaction of the Switch Actuator outputs can be defined in the parameter window [Basic settings \[Switch Actuator\]](#), in the parameter [Switching reaction on bus voltage failure](#).

## 4.4.2 Reaction after bus voltage recovery

Bus voltage recovery is the state that exists after the bus voltage is restored. The devices will restart after bus voltage recovery.

The time set in the parameter *Sending and switching delay after bus voltage recovery* is awaited before the devices perform an action.

The reaction of the Switch Actuator outputs can be defined in the parameter window *Basic settings [Switch Actuator]*, in the parameter *Reaction after bus voltage recovery [Switch Actuator]*.

## 4.4.3 Reaction on ETS reset

An ETS reset restarts the ETS application in the devices. ETS reset can be performed in ETS using the Commissioning menu item, in the function *Reset device* (from ETS version 6 *Restart device*).

During an ETS reset, the device reacts the same way as during bus voltage failure.

The reaction of the Switch Actuator outputs can be defined in the parameter window *Basic settings [Switch Actuator]*, in the parameter *Switching reaction on bus voltage failure*.

## 4.4.4 Reaction during download

Downloading describes loading a modified or updated ETS application onto the devices. The devices are not ready to operate during a download.

### Reaction of the Switch Actuator outputs:

The positions of the relay contacts are blocked at the start of the download. The reaction after download can be defined in the parameter window *Basic settings [Switch Actuator]*, in the parameter *Reaction after ETS download [Switch Actuator]*.

### **i** Note

The device will no longer operate after the application is uninstalled or the download is canceled.

- ▶ Download again.

## 5 Mounting and installation

### 5.1 Information about mounting



#### **DANGER – Severe injuries due to touch voltage**

Electric feedback from different phase conductors can cause contact voltages and lead to serious injuries.

- ▶ Operate the device only in a closed housing (distribution board).
- ▶ Disconnect all phases before working on the electrical connection.

The device can be mounted in any position as required on a 35 mm mounting rail.

The electrical connection to the loads is made using screw terminals. The connection to the bus (ABB i-bus® KNX) is made using the bus connection terminal supplied. The terminal designation is located on the housing.

#### **i Note**

The maximum permissible current consumption on a KNX line must not be exceeded.

- ▶ During planning and installation, ensure that the KNX line is correctly dimensioned. The device has a maximum current consumption of 12 mA.

### 5.2 Mounting on mounting rail

#### **i Note**

No additional tools are required for mounting on a mounting rail.

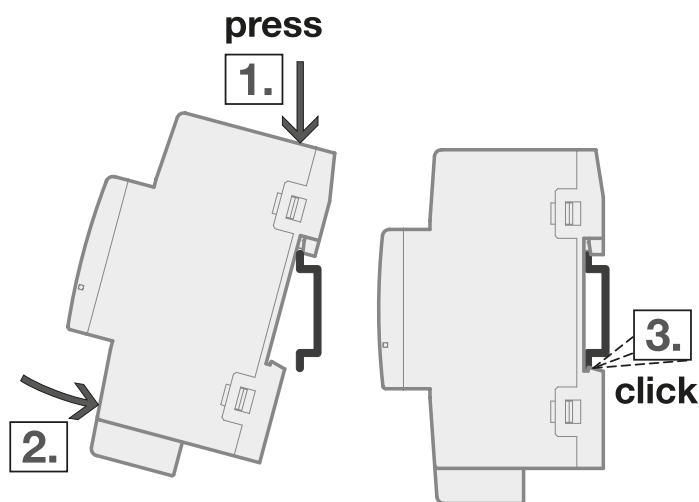


Fig. 22: Mounting on mounting rail

1. Place the mounting rail holder on the upper edge of the mounting rail and push down.
2. Push the lower part of the device toward the mounting rail until the mounting rail holder engages.
  - ⇒ The device is now mounted on the mounting rail.
3. Relieve the pressure on the top of the housing.

## 6 Commissioning

### 6.1 Prerequisites for commissioning

A PC with ETS and a connection to the bus (ABB i-bus® KNX), e.g. via a KNX interface, are required to commission the device.

- Required ETS version: 5.6 or higher
- Product-specific application: installed

### 6.2 Commissioning overview

After the bus voltage is activated for the first time, the following factory settings will be selected automatically:

- Physical address of the device: 15.15.255
- ETS application: preloaded
- Switching contact position: open

The device can be programmed only using ETS.

#### **i** Note

The complete ETS application can be downloaded again if required. Downloads may take longer after an application is uninstalled or when changing applications.

### 6.3 Putting device into operation

1. Connect the device to the bus (ABB i-bus® KNX).
2. Switch on bus voltage.
  - ⇒ All switching contacts are open.
3. Switch on power supply of the connected loads.
  - ⇒ Device is ready for operation.

### 6.4 Assignment of the physical address

#### **i** Note

If it is set in ETS that the application is to be downloaded during programming, the download will begin after assignment of the physical address.

Triggering assignment of the physical address via ETS:

1. Press *Programming* button.
  - ⇒ Programming mode active. *Programming* LED lights up.
2. Start programming process in ETS.
  - ⇒ Physical address is assigned. Device restarts.

#### **i** Note

The device performs an ETS reset during assignment of the physical address. All states are reset.

## 6.5 Software/application

### 6.5.1 Download reaction

Depending on the PC, it can take up to 90 seconds for the progress bar to appear during a download.

Using an interface that supports download via "long frames" (e.g. USB/S 1.2 or IPR/S 3.5.1) can greatly shorten the download time.

### 6.5.2 Copying, exchanging and converting

The following functions can be performed with the ETS app *ABBUpdate Copy Convert*:

- *Update*: Changes the application program to a higher or lower version while retaining the current configurations
- *Convert*: Transfers/adopts a configuration from an identical or compatible source device
- *Copy channel*: Copies a channel configuration to other channels on a multichannel device
- *Channel exchange*: Exchanges configurations between two channels on a multichannel device
- *Import/export*: Saves and reads device configurations as external files

The ETS app *ABBUpdate Copy Convert* can be downloaded free of charge from the KNX Shop → [www.KNX.org](http://www.KNX.org).



# 7 Parameters

## 7.1 General

**Note**

ETS (Engineering Tool Software) is used to parameterize the device.

The following sections describe the device parameters based on the parameter windows. The parameter windows have a dynamic design. Parameters are shown or hidden depending on parameterization and function.

The default values of the parameters are underlined, e.g.:

No (*checkbox cleared*)

Yes (*checkbox ticked*)

**Note**

The default values in the ETS application can vary from the values stated in the product manual depending on the product variant.

**Note**


A device with 12 channels (A ... L) is described below.

## 7.2 Parameter windows

### 7.2.1 Parameter windows Configuration

The following settings can be made in this parameter window:

- Enable outputs
- Enable energy functions
- Enable energy groups
- Enable functions *Logic* and *Threshold*
- Limit number of telegrams sent
- Activate i-bus® Tool access

** Note**

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

**Configuration**

- + Device settings
- + Safety
- + Energy group 1
- + Logic/Threshold
- + Switch Actuator template
- + Energy functions template
- + Switch Actuator A:
- + Switch Actuator B:
- + Switch Actuator C:
- + Switch Actuator D:
- + Switch Actuator E:
- + Switch Actuator F:
- + Switch Actuator G:
- + Switch Actuator H:
- + Switch Actuator I:
- + Switch Actuator J:
- + Switch Actuator K:
- + Switch Actuator L:

**i** Firmware V0.2.0 or higher is required for using the i-bus® Tool. Update via ETS app "Firmware-Update 2.0".

**Channel configuration**

	Enable	Energy function
Output A	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output B	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output C	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output E	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output F	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output G	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output H	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output I	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output J	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output K	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Output L	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

---

**Enable energy groups**

Energy group 1

Energy group 2

Energy group 3

Energy group 4

---

**Enable Logic/Threshold**

Logic/Threshold 1-4

Logic/Threshold 5-8

Logic/Threshold 9-12

Logic/Threshold 13-16

Logic/Threshold 17-20

Logic/Threshold 21-24

---

Maximum number of sent telegrams

In period (0 = deactivated)  ss

i-bus® Tool access

Fig. 23: Parameter window Configuration

**This parameter window includes the following parameters:**

- [Enable output X, Page 111](#)
- [Enable energy function x, Page 119](#)
- [Enable energy group x, Page 120](#)
- [Enable Logic/Threshold x-y, Page 140](#)
- [Maximum number of sent telegrams, Page 140](#)
- [In period \(0 = deactivated\), Page 130](#)
- [i-bus® Tool access, Page 194](#)

**Prerequisites for visibility**

- The parameter window is always visible.

## 7.2.2 Parameter windows Device settings

The following settings can be made in this parameter window:

- Set sending and switching delay
- Enable Group Object [Request status values](#)
- Enable Group Object [In operation](#)
- Enable central and device-specific Group Objects

Configuration	Device settings
– Device settings	
– Device settings	
+ Safety	
+ Energy group 1	
+ Logic/Threshold	
+ Switch Actuator template	
+ Energy functions template	
+ Switch Actuator A:	
+ Switch Actuator B:	
+ Switch Actuator C:	
	<p>Sending and switching delay after bus voltage recovery <input type="text" value="00:00:02"/> hh:mm:ss</p> <p>Value after sending and switching delay has expired <input checked="" type="radio"/> Last value received <input type="radio"/> Ignore received values</p> <p>Enable Time Group Objects for setting of device time <input type="text" value="No"/></p> <hr/> <p>Enable Group Object "Request Status values" <input type="checkbox"/></p> <hr/> <p>Enable central Group Object "Switch" <input type="checkbox"/></p> <p>Enable central Group Object "Receive load shedding stage" <input checked="" type="checkbox"/></p> <p>Enable central Group Object "Scene 1 ... 64" <input type="checkbox"/></p> <hr/> <p>Enable Group Object "In operation" <input type="text" value="No"/></p>

Fig. 24: Parameter window Device settings

**This parameter window includes the following parameters:**

- [Sending and switching delay after bus voltage recovery](#), Page 154
- [Value after sending and switching delay has expired](#), Page 189
- [Enable Time Group Objects for setting of device time](#), Page 134
  - [Request Date/Time via Group Object](#), Page 115
- [Enable Group Object "Request status values"](#), Page 132
- [Enable central Group Object "Switch"](#), Page 194
- [Enable central Group Object "Receive load shedding stage"](#), Page 193
- [Enable central Group Object "Scene 1 ... 64"](#), Page 194
- [Enable Group Object "In operation"](#), Page 131
  - [Sending cycle](#), Page 155

**Prerequisites for visibility**

- The parameter window is always visible.

### 7.2.3 Parameter windows Safety

The following settings can be made in this parameter window:

- Enable safety priorities

The safety priorities apply to the entire device, but each output can react differently to receipt of a safety priority. The reaction of the individual outputs can be defined in the respective parameter windows.

More information: → [Safety functions, Page 43](#).

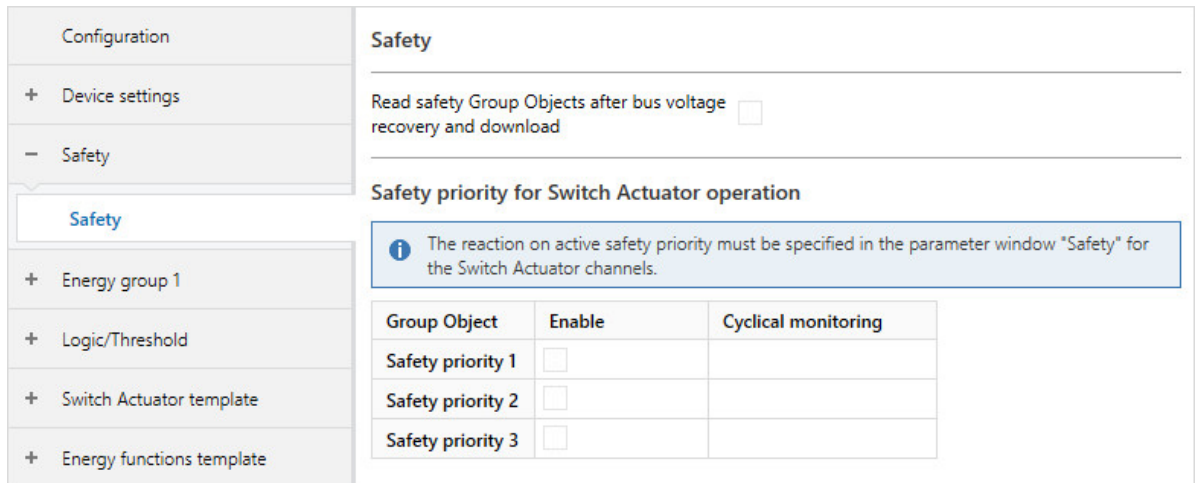


Fig. 25: Parameter window Safety

**This parameter window includes the following parameters:**

- [Read safety Group Objects after bus voltage recovery and download, Page 155](#)
- [Enable Group Object "Safety priority x", Page 131](#)
- [Cyclical monitoring, Page 197](#)

**Prerequisites for visibility**

- The parameter window is always visible.

## 7.2.4 Parameter windows Energy group X

The energy groups are used to monitor several channels simultaneously. Up to four energy groups are available. Each channel can be assigned to one or more energy groups in the parameter [Assign to energy group x](#).

**Note**

If several channels are combined into energy groups, the setting in the parameter [Measurement unit](#) in the group and in the related channels must be identical.

**Note**

The energy group values for current measurement, power calculation and energy consumption are the sum of the values from all channels assigned.

The group values are available on the bus (ABB i-bus® KNX) only after a short delay due to device-internal calculations.

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option [Yes](#)

### 7.2.4.1 Parameter windows Current measurement [group]

The following settings can be made in this parameter window:

- Parameterize function *Current measurement* for the group

More information: → [Function Current measurement, Page 52](#).

Configuration	Current displaying unit	<input type="radio"/> mA (DPT 9.021) <input checked="" type="radio"/> A (DPT 14.019)
+ Device settings	Send value of Group Object "Status Current"	On change
+ Safety	Evaluate change of value as	<input checked="" type="radio"/> Percentage <input type="radio"/> Change absolute
- Energy group 1	Value is sent from a change of	10 %
<b>Current measurement</b>	<div style="border: 1px solid #ccc; padding: 2px;"> <span style="font-size: 0.8em;">i</span> Calculated based on the last sent value         </div>	
Energy functions		

Fig. 26: Parameter window Current measurement

**This parameter window includes the following parameters:**

- [Current displaying unit \[group\], Page 118](#)
- [Send value of Group Object "Status Current", Page 180](#)
  - [Evaluate change of value as, Page 189](#)
  - [Value is sent from a change of, Page 189](#)
  - [Send cyclically every, Page 196](#)

**Prerequisites for visibility**

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option *Yes*
- The parameter window is in the parameter window *Energy group X*.

### 7.2.4.2 Parameter windows Energy functions [group]

The following settings can be made in this parameter window:

- Enable energy functions for the group

Configuration	Description	Text
+ Device settings	Enable function Power calculation	<input type="checkbox"/>
+ Safety	Enable function Load monitoring	<input type="checkbox"/>
- Energy group 1		
Current measurement		
<b>Energy functions</b>		

Fig. 27: Parameter window Energy functions

**This parameter window includes the following parameters:**

→ [Description](#), Page 112

→ [Enable function Power calculation \[group\]](#), Page 125

→ [Enable function Energy consumption \[group\]](#), Page 123

→ [Enable function Load monitoring \[group\]](#), Page 124

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option Yes
- The parameter window is in the parameter window [Energy group X](#).



### 7.2.4.3 Parameter windows Power calculation [group]

The following settings can be made in this parameter window:

- Parameterize function *Power calculation* for the group

More information: → [Function Power calculation, Page 53](#).

Configuration	Power displaying unit	<input checked="" type="radio"/> W (DPT 14.056) <input type="radio"/> kW (DPT 9.024)
+ Device settings	Send value of Group Object "Status Power"	On change
+ Safety	Evaluate change of value as	<input checked="" type="radio"/> Percentage <input type="radio"/> Change absolute
- Energy group 1	Value is sent from a change of	10 %
Current measurement	<i>i</i> Calculated based on the last sent value	
Energy functions	<i>i</i> The power calculation function must be enabled in the channels related to the group.	
Power calculation		

Fig. 28: Parameter window Power calculation

**This parameter window includes the following parameters:**

- [Power displaying unit \[group\], Page 118](#)
- [Send value of Group Object "Status Power", Page 177](#)
  - [Evaluate change of value as, Page 189](#)
  - [Value is sent from a change of, Page 189](#)
  - [Send cyclically every, Page 196](#)

#### ***i* Note**

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

#### **Prerequisites for visibility**

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option *Yes*
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]* \ Parameter *Enable function Power calculation [group]* \ Option *Yes*
- The parameter window is in the parameter window *Energy group X*.

### 7.2.4.4 Parameter windows Energy consumption [group]

The following settings can be made in this parameter window:

- Parameterize function *Energy consumption* for the group

More information: → [Function Energy consumption, Page 54](#).

Configuration	Energy displaying unit	<input type="radio"/> Wh (DPT 13.010) <input checked="" type="radio"/> kWh (DPT 13.013)
+ Device settings	Activate total meter	<input checked="" type="checkbox"/>
+ Safety	Send value of Group Object "Status Total meter energy consumption"	On change
- Energy group 1	Evaluate change of value as	<input checked="" type="radio"/> Percentage <input type="radio"/> Change absolute
Current measurement	Value is sent from a change of	10 %
Energy functions	<div style="border: 1px solid #ccc; padding: 2px;"> <p><b>i</b> Calculated based on the last sent value</p> </div>	
Power calculation	Send time stamp of total meter start	<input type="checkbox"/>
Energy consumption	Reset total meter via Group Object	<input type="checkbox"/>
Logic/Threshold	Reset total meter via i-bus® Tool	<input type="checkbox"/>
+ Switch Actuator template	<div style="border: 1px solid #ccc; padding: 2px;"> <p><b>i</b> The energy consumption function must be enabled in the channels related to the group.</p> </div>	

Fig. 29: Parameter window Energy consumption

**This parameter window includes the following parameters:**

- [Energy displaying unit \[group\], Page 117](#)
- [Activate total meter \[group\], Page 127](#)
  - [Send value of Group Object "Status Total meter energy consumption", Page 175](#)
    - [Evaluate change of value as, Page 189](#)
    - [Value is sent from a change of, Page 189](#)
    - [Send cyclically every, Page 196](#)
  - [Send timestamp of total meter start \[group\], Page 192](#)
    - [Data point type timestamp \[group\], Page 114](#)
  - [Reset total meter via Group Object \[Group\], Page 129](#)
  - [Reset total meter via i-bus® Tool, Page 128](#)

#### **i** Note

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option Yes
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#)
  - Parameter [Enable function Power calculation \[group\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[group\]](#) \ Option Yes
- The parameter window is in the parameter window [Energy group X](#).

### 7.2.4.5 Parameter windows Load monitoring [group]

The following settings can be made in this parameter window:

- Parameterize function *Load monitoring* for the group

More information: → [Function Load monitoring, Page 56.](#)

<p>Configuration</p> <ul style="list-style-type: none"> <li>+ Device settings</li> <li>+ Safety</li> <li>- Energy group 1             <ul style="list-style-type: none"> <li>Current measurement</li> <li>Energy functions</li> <li style="background-color: #e0e0e0;">Load monitoring</li> </ul> </li> <li>+ Logic/Threshold</li> <li>+ Switch Actuator template</li> <li>+ Energy functions template</li> <li>+ Switch Actuator A:</li> <li>+ Switch Actuator B:</li> <li>+ Switch Actuator C:</li> <li>+ Switch Actuator D:</li> <li>+ Switch Actuator E:</li> <li>+ Switch Actuator F:</li> <li>+ Switch Actuator G:</li> <li>+ Switch Actuator H:</li> <li>+ Switch Actuator I:</li> </ul>	<p>Type of monitoring <span style="float: right;">General threshold monitoring (A...F) ▼</span></p> <hr/> <div style="display: flex; align-items: center;"> <div style="flex: 1;"> <p>Explanation of threshold evaluation</p> </div> <div style="flex: 2;"> </div> </div> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p><b>i</b> A: On/Off          B: Standby          C: Underload          D: Operation          E: Overload          F: Maximum threshold exceeded</p> </div> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 60%;">Maximum threshold (IV)</td> <td style="width: 20%; text-align: center;">16000</td> <td style="width: 20%; text-align: right;">mA</td> </tr> <tr> <td>Threshold Operation/Overload (III)</td> <td style="text-align: center;">2000</td> <td style="text-align: right;">mA</td> </tr> <tr> <td>Threshold Underload/Operation (II)</td> <td style="text-align: center;">1000</td> <td style="text-align: right;">mA</td> </tr> <tr> <td>Threshold Standby/Underload (I)</td> <td style="text-align: center;">200</td> <td style="text-align: right;">mA</td> </tr> </table> <p>Change load thresholds via Group Objects <input type="checkbox"/></p> <p>Change load thresholds via i-bus® Tool <input checked="" type="checkbox"/></p> <p>Overwrite load threshold at download <input checked="" type="checkbox"/></p> <hr/> <p>Send status load as <span style="float: right;"><input checked="" type="radio"/> 1 byte <input type="radio"/> Individual bits</span></p> <p>Send status load <span style="float: right;">On change ▼</span></p>	Maximum threshold (IV)	16000	mA	Threshold Operation/Overload (III)	2000	mA	Threshold Underload/Operation (II)	1000	mA	Threshold Standby/Underload (I)	200	mA
Maximum threshold (IV)	16000	mA											
Threshold Operation/Overload (III)	2000	mA											
Threshold Underload/Operation (II)	1000	mA											
Threshold Standby/Underload (I)	200	mA											

Fig. 30: Parameter window Load monitoring

**This parameter window includes the following parameters:**

- [Type of monitoring \[group\]](#), Page 164
- [Measurement unit](#), Page 142
- [Maximum threshold \(IV\) \[group\]](#), Page 140
- [Threshold operation/overload \(III\) \[group\]](#), Page 150
- [Threshold Underload/Operation \(II\) \[group\]](#), Page 152
- [Threshold Standby/Underload \(I\) \[group\]](#), Page 151
- [Change load thresholds via Group Objects \[group\]](#), Page 138
- [Change load thresholds via i-bus® Tool](#), Page 137
  - [Overwrite load threshold at download](#), Page 136
- [Status Send load as \[group\]](#), Page 157
  - [Value of Group Object when maximum threshold exceeded \[group\]](#), Page 187
  - [Value of Group Object when load in overload \[group\]](#), Page 185
  - [Value of Group Object when load in operation \[group\]](#), Page 183
  - [Value of Group Object when load in underload \[group\]](#), Page 186
  - [Value of Group Object when load in standby \[group\]](#), Page 184
  - [Value of Group Object when load On/Off \[group\]](#), Page 182
- [Send Status Load](#), Page 156

** Note**

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option *Yes*
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#) \ Parameter [Enable function Load monitoring \[group\]](#) \ Option *Yes*
- The parameter window is in the parameter window [Energy group X](#).

## 7.2.5 Parameter windows Logic/Threshold

The functions *Logic* and *Threshold* can be set individually for each output in the subordinate parameter windows.

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable Logic/Threshold x-y* \ Option Yes

### 7.2.5.1 Parameter windows Logic/Threshold x

The following settings can be made in this parameter window:

- Parameterize function *Logic*
- Parameterize function *Threshold*

The functions *Logic* and *Threshold* can be used independent of other functions. The results of the functions *Logic* and *Threshold* can be linked internally with any output (→ parameter *Output reacts to*) and/or sent on the bus (ABB i-bus® KNX).

More information → [Function Logic, Page 44](#), → [Function Threshold, Page 45](#).

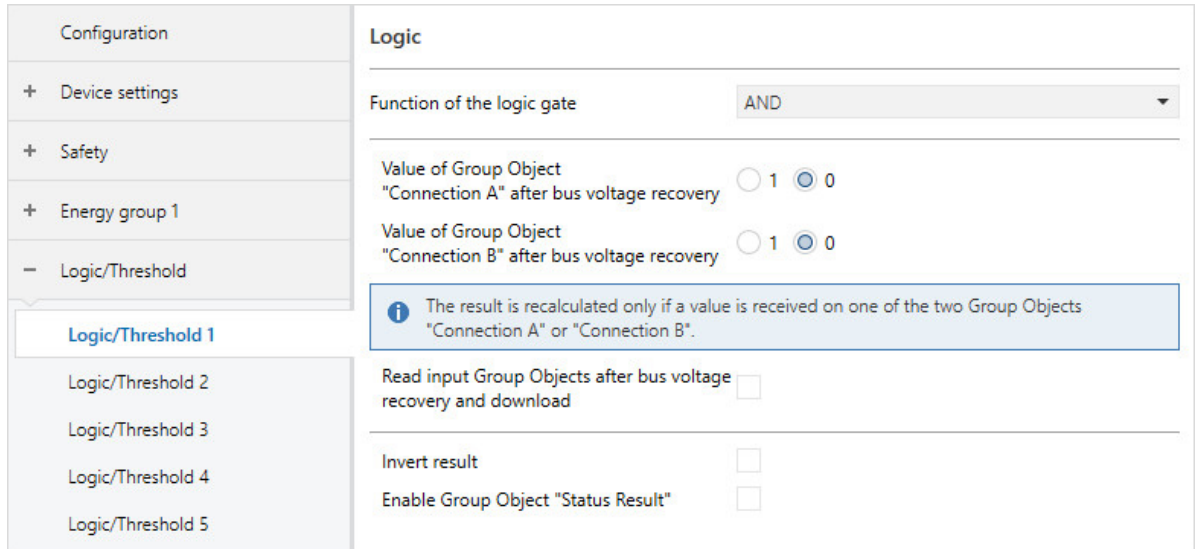


Fig. 31: Parameter window Logic/Threshold x

**This parameter window includes the following parameters:**

- [Function of the logic gate, Page 121](#)
- [Value of Group Object "Connection A" after bus voltage recovery, Page 181](#)
- [Value of Group Object "Connection B" after bus voltage recovery, Page 181](#)
- [Read input Group Objects after bus voltage recovery and download, Page 116](#)
- [Invert result, Page 120](#)
- [Enable Group Object "Status Result", Page 131](#)
  - [Send value of Group Object "Status Result", Page 174](#)
- [GATE blocks if Group Object "Connection A" equals, Page 159](#)
- [Data point type of Group Object "Threshold input", Page 113](#)
- [Upper threshold, Page 144](#)
- [Lower threshold, Page 166](#)
- [Change thresholds via Group Objects, Page 154](#)
- [Change thresholds via i-bus® Tool, Page 153](#)
  - [Overwrite thresholds on download, Page 153](#)
- [Result if upper threshold is exceeded, Page 120](#)
- [Min. duration of the overshoot, Page 143](#)
- [Monitor range between thresholds, Page 112](#)
  - [Minimum dwell time between the thresholds, Page 144](#)
- [Result if lower threshold is dropped below, Page 121](#)
- [Min. duration of the undershoot, Page 143](#)
- [Read input Group Objects after bus voltage recovery and download, Page 116](#)
- [Enable Group Objects "Status Result" and "Status Input value between thresholds", Page 133](#)
  - [Send values of Group Objects "Status Result" and "Status Input value between thresholds", Page 190](#)

** Note**

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

**Prerequisites for visibility**

- Parameter window *Configuration* \ Parameter *Enable Logic/Threshold x-y* \ Option *Yes*
- The parameter window is in the parameter window *Logic/Threshold*.

## 7.2.6 Parameter windows Switch Actuator template

The functions can be set for all Switch Actuator outputs in this parameter window.

**i Note**

It can be decided for each Switch Actuator output whether parameterization from the template is used. The individual setting for a Switch Actuator output is made in the respective parameter window [Switch Actuator X](#).

The parameterization options in the template and in the parameter window for the Switch Actuator output are identical. The following parameter windows are available in the template:

- [Basic settings \[Switch Actuator\]](#)
- [Safety](#)
- [Load shedding](#)
- [Delay for switching on and off](#)
- [Staircase lighting](#)
- [Flashing](#)
- [Scene assignments \[Switch Actuator\]](#)

**Prerequisites for visibility**

- The parameter window is always visible.



## 7.2.7 Parameter windows Energy functions template

The energy functions can be set for all Switch Actuator outputs in this parameter window.

**Note**

It can be decided for each Switch Actuator output whether parameterization from the template is used. The individual setting for a Switch Actuator output is made in the respective parameter window [Switch Actuator X](#).

**Note**

If the parameterization for the function *Load monitoring* from the template is applied and the thresholds are set as power values in the template, the function *Power calculation* must be enabled in the channel.

The parameterization options in the template and in the parameter window for the Switch Actuator output are identical. The following parameter windows are available in the template:

- [Current measurement \[channel\]](#)
- [Power calculation \[channel\]](#)
- [Energy consumption \[channel\]](#)
- [Load monitoring \[channel\]](#)
- [Contact supervision](#)

**Prerequisites for visibility**

- The parameter window is always visible.

## 7.2.8 Parameter windows Switch Actuator X

The functions can be set individually for each Switch Actuator output in the subordinate parameter windows.

**Note**

If several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window [Switch Actuator template](#).

**Note**

The layout in the parameter window is identical for all outputs. The settings are explained in the following based on examples.

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*

### 7.2.8.1 Parameter windows Functions Switch Actuator

The following settings can be made in this parameter window:

- Enable functions
- Connect output to the functions *Logic* and *Threshold*

Configuration	<b>Switch Actuator functions</b>
+ Device settings	Description <input type="text"/>
+ Safety	Enable function Safety <input type="checkbox"/>
+ Energy group 1	Enable function Time <span style="border: 1px solid #ccc; padding: 2px;">No ▼</span>
+ Logic/Threshold	Enable function Scenes <input type="checkbox"/>
+ Switch Actuator template	Enable function Load shedding <input type="checkbox"/>
+ Energy functions template	Output reacts to <span style="border: 1px solid #ccc; padding: 2px;">No Logic/Threshold function ▼</span>
- Switch Actuator A:	<span style="font-size: 0.8em;">i</span> Enable the function Logic/Threshold in the parameter window Logic/Threshold.
<a href="#">Switch Actuator functions</a>	

Fig. 32: Parameter window Functions

**This parameter window includes the following parameters:**

- [Description, Page 112](#)
- [Enable function Safety, Page 126](#)
- [Enable function Time, Page 127](#)
- [Enable function Scenes \[Switch Actuator\], Page 126](#)
- [Enable function Load shedding, Page 124](#)
- [Output reacts to, Page 111](#)
  - [Reaction on result "0" \[Switch Actuator\], Page 167](#)
  - [Reaction on result "1" \[Switch Actuator\], Page 168](#)

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- The parameter window is in the parameter window *Switch Actuator X*.

## 7.2.8.2 Parameter windows Basic settings [Switch Actuator]

**Note**

If several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window [Switch Actuator template](#).

The following settings can be made in this parameter window:

- Reaction of output (normally closed/normally opened contact)
- Connect output to the central Group Object [Switch](#)
- Enable and configure status information
- Configure reaction on bus voltage failure, after bus voltage recovery and after download

Configuration	Basic settings
+ Device settings	Parameter setting <input type="radio"/> Apply from template <input checked="" type="radio"/> Individual
+ Safety	Reaction of output <input type="radio"/> NC contact <input checked="" type="radio"/> NO contact
+ Energy group 1	Feedback of contact position via Group Object "Status Switch" <input checked="" type="checkbox"/>
+ Logic/Threshold	Value of Group Object "Status Switch" <input checked="" type="radio"/> 1: closed, 0: open <input type="radio"/> 0: closed, 1: open
+ Switch Actuator template	Send value of Group Object "Status Switch" <input type="text" value="On change or on request"/>
+ Energy functions template	Enable Group Objects "Status byte" <input type="text" value="No"/>
- Switch Actuator A:	
Switch Actuator functions	Switching reaction on bus voltage failure <input type="text" value="Contact unchanged"/>
<b>Basic settings</b>	Reaction after bus voltage recovery <input type="text" value="Calculate contact position"/>
Current measurement	Reaction after ETS download <input type="text" value="Switching only if safety function active"/>
Energy functions	<b>i</b> Safety functions are taken into account.

Fig. 33: Parameter window Basic settings

**This parameter window includes the following parameters:**

- [Parameter setting](#), Page 144
- [Reaction of output](#), Page 169
- [Switch output reacts to central Switch Group Object](#), Page 145
- [Feedback of contact position via Group Object "Status Switch"](#), Page 145
  - [Value of Group Object "Status Switch"](#), Page 179
  - [Send value of Group Object "Status Switch"](#), Page 179
- [Enable Group Objects "Status byte" \[Switch Actuator\]](#), Page 133
  - [Send value of Group Objects "Status byte" \[Switch Actuator\]](#), Page 188
- [Switching reaction on bus voltage failure](#), Page 146
- [Reaction after bus voltage recovery \[Switch Actuator\]](#), Page 169
- [Reaction after ETS download \[Switch Actuator\]](#), Page 170

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- The parameter window is in the parameter window [Switch Actuator X](#).

## 7.2.8.3

## Parameter windows Safety

**Note**

If several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window [Switch Actuator template](#).

The following settings can be made in this parameter window:

- Parameterize reaction to safety priorities, forced operation and block

More information: → [Switch Actuator safety functions, Page 43](#).

Configuration	Safety
+ Device settings	Parameter setting <input type="radio"/> Apply from template <input checked="" type="radio"/> Individual
+ Safety	
+ Energy group 1	<b>i</b> The Group Objects "Safety priority 1-3" are enabled in the parameter window "Safety". The order specifies the priority of the safety functions.
+ Logic/Threshold	Forced operation (1 bit/2 bit) <input type="text" value="Deactivated"/>
+ Switch Actuator template	Switching reaction on block <input type="text" value="No reaction/deactivated"/>
+ Energy functions template	Switching reaction on cancellation of block, forced operation and safety priority <input type="text" value="No reaction"/>
- Switch Actuator A:	
Switch Actuator functions	
Basic settings	
<b>Safety</b>	

Fig. 34: Parameter window Safety

**This parameter window includes the following parameters:**

→ [Parameter setting, Page 144](#)

→ [Switching reaction on safety priority x, Page 148](#)

→ [Forced operation \(1 bit / 2 bit\) \[Switch Actuator\], Page 195](#)

→ [Switching reaction on forced operation, Page 150](#)

→ [Switching reaction on block, Page 149](#)

→ [Switching reaction on cancellation of block, forced operation and safety priority, Page 147](#)

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Safety](#) \ Option Yes
- The parameter window is in the parameter window [Switch Actuator X](#).

## 7.2.8.4 Parameter windows Load shedding

### **Note**

If several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window [Switch Actuator template](#).

The following settings can be made in this parameter window:

- Parameterize function *Load shedding*

More information: → [Function Load shedding, Page 47](#).

Configuration	Load shedding
+ Device settings	Parameter setting <input type="radio"/> Apply from template <input checked="" type="radio"/> Individual
+ Safety	
+ Energy group 1	Load shedding stage <input type="text" value="1"/>
+ Logic/Threshold	Change load shedding stage via Group Object <input type="checkbox"/>
+ Switch Actuator template	Change load shedding stage via i-bus® Tool <input type="checkbox"/>
+ Energy functions template	Switching reaction on active load shedding stage <input checked="" type="radio"/> Off <input type="radio"/> On
- Switch Actuator A:	Switching reaction on revoke of load shedding stage <input type="text" value="No reaction"/>
Switch Actuator functions	Enable Group Object "Status Load shedding" <input type="checkbox"/>
Basic settings	
Load shedding	

Fig. 35: Parameter window Load shedding

**This parameter window includes the following parameters:**

- [Parameter setting, Page 144](#)
  - [Load shedding stage, Page 134](#)
  - [Change load shedding stage via Group Object, Page 136](#)
    - [Overwrite load shedding stage at download, Page 135](#)
  - [Change load shedding stage via i-bus® Tool, Page 135](#)
  - [Switching reaction on active load shedding stage, Page 146](#)
  - [Switching reaction on revoke of load shedding stage, Page 147](#)
  - [Enable group object "Status Load shedding", Page 132](#)
    - [Send value of Group Object "Status Load shedding", Page 177](#)

### **Note**

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Device settings](#) \ Parameter [Enable central Group Object "Receive load shedding stage"](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Load shedding](#) \ Option Yes
- The parameter window is in the parameter window [Switch Actuator X](#).

### 7.2.8.5 Parameter windows Staircase lighting

**Note**

If several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window [Switch Actuator template](#).

The following settings can be made in this parameter window:

- Parameterize function *Staircase lighting*

More information: → [Function Staircase lighting, Page 60](#).

**Note**

If a delay is used for Scene recall (→ parameter *Delay*), the output does not react to the functions *Staircase lighting* and *Delay for switching on and off* → [Function diagram Switch Actuator, Page 42](#).

Configuration	<b>Staircase lighting</b>	
+ Device settings	Parameter setting	<input type="radio"/> Apply from template <input checked="" type="radio"/> Individual
+ Safety	Staircase lighting time	<input type="text" value="00:05:00"/> hh:mm:ss
+ Energy group 1	Staircase lighting time can be started again	<input checked="" type="checkbox"/>
+ Logic/Threshold	Staircase lighting time extendable (pumping)	No, can only be started again ▼
+ Switch Actuator template	Switching reaction of staircase lighting on telegram value 0/1	On with "1" and off with "0" ▼
+ Energy functions template	Warning before switching off the staircase lighting	No ▼
- Switch Actuator A:	Block staircase lighting via Group Object	<input type="checkbox"/>
Switch Actuator functions	Change staircase lighting time via Group Object	<input type="checkbox"/>
Basic settings	Change staircase lighting time via i-bus® Tool	<input type="checkbox"/>
<b>Staircase lighting</b>	Restart staircase lighting time after permanent on	<input type="checkbox"/>
Current measurement		

Fig. 36: Parameter window Staircase lighting

**This parameter window includes the following parameters:**

- [Parameter setting, Page 144](#)
- [Staircase lighting time, Page 161](#)
- [Staircase lighting time can be started again, Page 162](#)
  - [Staircase lighting time extendable \(pumping\), Page 164](#)
- [Switching reaction of staircase lighting on telegram value 0/1, Page 160](#)
- [Warning before switching off the staircase lighting, Page 172](#)
  - [Number of Off/On changes, Page 110](#)
  - [Warning time, Page 173](#)
- [Block staircase lighting via Group Object, Page 161](#)
  - [Block staircase lighting after bus voltage recovery, Page 160](#)
- [Change staircase lighting time via Group Object, Page 163](#)
  - [Overwrite staircase lighting time on download, Page 161](#)
- [Change staircase lighting time via i-bus® Tool, Page 163](#)
- [Restart staircase lighting time after permanent on, Page 162](#)

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Staircase lighting*
- The parameter window is in the parameter window [Switch Actuator X](#).



## 7.2.8.6 Parameter windows Delay for switching on and off

### **Note**

If several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window [Switch Actuator template](#).

The following settings can be made in this parameter window:

- Parameterize function *Delay for switching on and off*

More information: → [Function Delay for switching on and off, Page 62](#).

### **Note**

If a delay is used for Scene recall (→ parameter *Delay*), the output does not react to the functions *Staircase lighting* and *Delay for switching on and off* → [Function diagram Switch Actuator, Page 42](#).

Configuration	Delay for switching on and off
+ Device settings	Parameter setting <input type="radio"/> Apply from template <input checked="" type="radio"/> Individual
+ Safety	
+ Energy group 1	Delay for switching on <input type="text" value="00:00:00"/> hh:mm:ss
+ Logic/Threshold	Delay for switching off <input type="text" value="00:00:00"/> hh:mm:ss
+ Switch Actuator template	Block delay for switching on and off via Group Object <input type="checkbox"/>
+ Energy functions template	
- Switch Actuator A:	
Switch Actuator functions	
Basic settings	
<a href="#">Delay for switching on and off</a>	

Fig. 37: Parameter window Delay for switching on and off

**This parameter window includes the following parameters:**

- [Parameter setting, Page 144](#)
  - [Delay for switching on, Page 119](#)
  - [Delay for switching off, Page 112](#)
  - [Block delay for switching on and off via Group Object, Page 115](#)
    - [Block delay for switching on and off after bus voltage recovery, Page 115](#)

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Delay for switching on and off*
- The parameter window is in the parameter window [Switch Actuator X](#).

### 7.2.8.7 Parameter windows Flashing

#### **Note**

If several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window [Switch Actuator template](#).

The following settings can be made in this parameter window:

- Parameterize function *Flashing*

More information: → [Function Flashing, Page 63](#).

#### **Note**

Each relay can perform only a limited number of switching operations per minute → Technical data. A large number of switching operations per minute can delay switching.

#### **Note**

If the function *Flashing* is used:

- Pay attention to the service life of the lighting equipment.
- Take into account the service life of the switching contacts → Technical data.

Configuration	Flashing
+ Device settings	Parameter setting <input type="radio"/> Apply from template <input checked="" type="radio"/> Individual
+ Safety	Flashing if Group Object "Flashing" is <input type="text" value="On (1) or off (0)"/>
+ Energy group 1	Time for on <input type="text" value="00:00:05"/> hh:mm:ss
+ Logic/Threshold	Time for off <input type="text" value="00:00:05"/> hh:mm:ss
+ Switch Actuator template	Number of flashing cycles <input type="text" value="5"/>
+ Energy functions template	Reaction after flashing <input type="text" value="Refreshed KNX state"/>
- Switch Actuator A:	<b>Note</b> Observe the contact life span and switching cycles per minute. For more information, see product manual.
Switch Actuator functions	
Basic settings	
<b>Flashing</b>	

Fig. 38: Parameter window Flashing

**This parameter window includes the following parameters:**

- [Parameter setting, Page 144](#)
- [Flashing if Group Object "Flashing" is, Page 113](#)
- [Time for on, Page 192](#)
- [Time for off, Page 192](#)
- [Number of flashing cycles, Page 110](#)
- [Reaction after flashing, Page 169](#)

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Flashing](#)
- The parameter window is in the parameter window [Switch Actuator X](#).

### 7.2.8.8 Parameter windows Scene assignments [Switch Actuator]

**Note**

If several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window *Switch Actuator template*.

The following settings can be made in this parameter window:

- Enable Scene assignments
- Create Scenes

More information: → [Function Scenes, Page 59](#).

<p>Configuration</p> <ul style="list-style-type: none"> <li>+ Device settings</li> <li>+ Safety</li> <li>+ Energy group 1</li> <li>+ Logic/Threshold</li> <li>+ Switch Actuator template</li> <li>+ Energy functions template</li> <li>- Switch Actuator A:             <ul style="list-style-type: none"> <li>Switch Actuator functions</li> <li>Basic settings</li> <li style="background-color: #e0e0e0;"><b>Scene assignments</b></li> <li>Current measurement</li> <li>Energy functions</li> </ul> </li> <li>+ Switch Actuator B:</li> <li>+ Switch Actuator C:</li> <li>+ Switch Actuator D:</li> <li>+ Switch Actuator E:</li> <li>+ Switch Actuator F:</li> </ul>	<p><b>Scene assignments</b></p> <hr/> <p>Parameter setting <input type="radio"/> Apply from template <input checked="" type="radio"/> Individual</p> <hr/> <p>Overwrite Scenes on download <input checked="" type="checkbox"/></p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">Scene assignment</th> <th style="width: 10%;">Enable</th> <th style="width: 10%;">Scene number</th> <th style="width: 20%;">Delay</th> <th style="width: 45%;">Reaction on Scene recall</th> </tr> </thead> <tbody> <tr> <td>1</td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> <td style="text-align: center;">1</td> <td style="text-align: center;">00:00:00 hh:mm:ss</td> <td style="text-align: center;"><input checked="" type="radio"/> On <input type="radio"/> Off</td> </tr> <tr><td>2</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>3</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>4</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>5</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>6</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>7</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>8</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>9</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>10</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>11</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>12</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>13</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>14</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>15</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> <tr><td>16</td><td style="text-align: center;"><input type="checkbox"/></td><td></td><td></td><td></td></tr> </tbody> </table> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 5px;"> <p><b>i</b> If delay not equal to 0, there is no staircase lighting and no delay for switching on and off.</p> </div> <p>Recall Scene 1 also via 1-bit Group Object <input type="checkbox"/></p>	Scene assignment	Enable	Scene number	Delay	Reaction on Scene recall	1	<input checked="" type="checkbox"/>	1	00:00:00 hh:mm:ss	<input checked="" type="radio"/> On <input type="radio"/> Off	2	<input type="checkbox"/>				3	<input type="checkbox"/>				4	<input type="checkbox"/>				5	<input type="checkbox"/>				6	<input type="checkbox"/>				7	<input type="checkbox"/>				8	<input type="checkbox"/>				9	<input type="checkbox"/>				10	<input type="checkbox"/>				11	<input type="checkbox"/>				12	<input type="checkbox"/>				13	<input type="checkbox"/>				14	<input type="checkbox"/>				15	<input type="checkbox"/>				16	<input type="checkbox"/>			
Scene assignment	Enable	Scene number	Delay	Reaction on Scene recall																																																																																		
1	<input checked="" type="checkbox"/>	1	00:00:00 hh:mm:ss	<input checked="" type="radio"/> On <input type="radio"/> Off																																																																																		
2	<input type="checkbox"/>																																																																																					
3	<input type="checkbox"/>																																																																																					
4	<input type="checkbox"/>																																																																																					
5	<input type="checkbox"/>																																																																																					
6	<input type="checkbox"/>																																																																																					
7	<input type="checkbox"/>																																																																																					
8	<input type="checkbox"/>																																																																																					
9	<input type="checkbox"/>																																																																																					
10	<input type="checkbox"/>																																																																																					
11	<input type="checkbox"/>																																																																																					
12	<input type="checkbox"/>																																																																																					
13	<input type="checkbox"/>																																																																																					
14	<input type="checkbox"/>																																																																																					
15	<input type="checkbox"/>																																																																																					
16	<input type="checkbox"/>																																																																																					

Fig. 39: Parameter window Scene assignments

**This parameter window includes the following parameters:**

- [Parameter setting, Page 144](#)
- [Overwrite Scenes on download, Page 158](#)
- [Enable Scene assignment x \[Switch Actuator\], Page 159](#)
  - [Scene number, Page 159](#)
  - [Delay, Page 172](#)
  - [Reaction on Scene recall, Page 168](#)
  - [Recall Scene x also via 1-bit Group Object, Page 111](#)

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Scenes \[Switch Actuator\]](#) \ Option Yes
- The parameter window is in the parameter window [Switch Actuator X](#).

## 7.2.8.9 Parameter windows Current measurement [channel]

### **Note**

If the energy function for several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window [Energy functions template](#).

The following settings can be made in this parameter window:

- Parameterize function *Current measurement* for the channel

More information: → [Function Current measurement, Page 52](#).

Configuration	Parameter setting <input type="radio"/> Apply from template <input checked="" type="radio"/> Individual
+ Device settings	Current displaying unit <input type="radio"/> mA (DPT 9.021) <input checked="" type="radio"/> A (DPT 14.019)
+ Safety	Measurement delay after contact position change <input type="text" value="4"/> s
+ Energy group 1	Send value of Group Object "Status Current" <input type="text" value="On change"/>
+ Logic/Threshold	Evaluate change of value as <input checked="" type="radio"/> Percentage <input type="radio"/> Change absolute
+ Switch Actuator template	Value is sent from a change of <input type="text" value="10"/> %
+ Energy functions template	<b>i</b> Calculated based on the last sent value
- Switch Actuator A:	
Switch Actuator functions	
Basic settings	
<b>Current measurement</b>	

Fig. 40: Parameter window Current measurement

**This parameter window includes the following parameters:**

- [Parameter setting, Page 144](#)
  - [Current displaying unit \[channel\], Page 119](#)
  - [Measurement delay after contact position change, Page 143](#)
  - [Send value of Group Object "Status Current", Page 180](#)
    - [Evaluate change of value as, Page 189](#)
    - [Value is sent from a change of, Page 189](#)
    - [Send cyclically every, Page 196](#)

**Prerequisites for visibility**

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- The parameter window is in the parameter window [Switch Actuator X](#).

### 7.2.8.10 Parameter windows Energy functions [channel]

The following settings can be made in this parameter window:

- Enable energy functions for the channel
- Assign channel to one or more energy groups

Configuration	Enable function Power calculation <input type="checkbox"/>
+ Device settings	Enable function Load monitoring <input type="checkbox"/>
+ Safety	Enable function Contact supervision <input type="checkbox"/>
+ Energy group 1	Assign to energy group 1 <input type="checkbox"/>
+ Logic/Threshold	<div style="border: 1px solid #0070C0; padding: 5px;"> <p><b>i</b> The energy groups must be enabled in the parameter window "Configuration".</p> </div>
+ Switch Actuator template	
+ Energy functions template	
- Switch Actuator A:	
Switch Actuator functions	
Basic settings	
Current measurement	
Energy functions	

Fig. 41: Parameter window Energy functions

**This parameter window includes the following parameters:**

- [Enable function Power calculation \[channel\], Page 125](#)
  - [Enable function Energy consumption \[channel\], Page 123](#)
- [Enable function Load monitoring \[channel\], Page 125](#)
- [Enable function Contact supervision, Page 124](#)
- [Assign to energy group x, Page 195](#)

**Prerequisites for visibility**

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- The parameter window is in the parameter window [Switch Actuator X](#).

### 7.2.8.11 Parameter windows Power calculation [channel]

**Note**

If the energy function for several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window *Energy functions template*.

The following settings can be made in this parameter window:

- Parameterize function *Power calculation* for the channel

More information: → [Function Power calculation, Page 53](#).

Configuration	Parameter setting	<input type="radio"/> Apply from template <input checked="" type="radio"/> Individual
+ Device settings	Power displaying unit	<input checked="" type="radio"/> W (DPT 14.056) <input type="radio"/> kW (DPT 9.024)
+ Safety	Voltage	<input type="text" value="230"/> V
+ Energy group 1	Power factor (cos phi)	<input type="text" value="1"/>
+ Logic/Threshold	Change values Voltage/Power factor via Group Objects	<input type="checkbox"/>
+ Switch Actuator template	Change values Voltage/Power factor via i-bus® Tool	<input checked="" type="checkbox"/>
+ Energy functions template	Overwrite values Voltage/Power factor on download	<input checked="" type="checkbox"/>
- Switch Actuator A:	Send value of Group Object "Status Power"	<input type="text" value="On change"/>
Switch Actuator functions	Evaluate change of value as	<input checked="" type="radio"/> Percentage <input type="radio"/> Change absolute
Basic settings	Value is sent from a change of	<input type="text" value="10"/> %
Current measurement	<input type="checkbox"/> Calculated based on the last sent value	
Energy functions		
<b>Power calculation</b>		

Fig. 42: Parameter window Power calculation

**This parameter window includes the following parameters:**

- [Parameter setting](#), Page 144
- [Power displaying unit \[channel\]](#), Page 118
- [Voltage](#), Page 155
- [Power factor \(cos phi\)](#), Page 139
- [Change values Voltage/Power factor via Group Objects](#), Page 191
- [Change values Voltage/Power factor via i-bus® Tool](#), Page 191
  - [Overwrite values Voltage/Power factor on download](#), Page 190
- [Send value of Group Object "Status Power"](#), Page 177
  - [Evaluate change of value as](#), Page 189
  - [Value is sent from a change of](#), Page 189
  - [Send cyclically every](#), Page 196

**Note**

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

**Prerequisites for visibility**

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
- The parameter window is in the parameter window [Switch Actuator X](#).



### 7.2.8.12 Parameter windows Energy consumption [channel]

**Note**

If the energy function for several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window *Energy functions template*.

The following settings can be made in this parameter window:

- Parameterize function *Energy consumption* for the channel


More information: → [Function Energy consumption, Page 54](#).

Configuration	Parameter setting <input type="radio"/> Apply from template <input checked="" type="radio"/> Individual
+ Device settings	Energy displaying unit <input type="radio"/> Wh (DPT 13.010) <input checked="" type="radio"/> kWh (DPT 13.013)
+ Safety	Activate total meter <input checked="" type="checkbox"/>
+ Energy group 1	Send value of Group Object "Status Total meter energy consumption" <input type="text" value="On change"/>
+ Logic/Threshold	Evaluate change of value as <input checked="" type="radio"/> Percentage <input type="radio"/> Change absolute
+ Switch Actuator template	Value is sent from a change of <input type="text" value="10"/> %
+ Energy functions template	<b>i</b> Calculated based on the last sent value
- Switch Actuator A:	Send time stamp of total meter start <input type="checkbox"/>
Switch Actuator functions	<b>i</b> For the time stamp the Group Objects for setting the device time in the parameter window "Device settings" must be enabled and the correct date and time set.
Basic settings	Reset total meter via Group Object <input type="checkbox"/>
Current measurement	Reset total meter via i-bus® Tool <input type="checkbox"/>
Energy functions	Activate intermediate meter <input type="checkbox"/>
Power calculation	
<b>Energy consumption</b>	

Fig. 43: Parameter window Energy consumption

**This parameter window includes the following parameters:**

- [Parameter setting](#), Page 144
- [Energy displaying unit \[channel\]](#), Page 117
- [Activate total meter \[channel\]](#), Page 128
  - [Send value of Group Object "Status Total meter energy consumption"](#), Page 175
    - [Evaluate change of value as](#), Page 189
    - [Value is sent from a change of](#), Page 189
    - [Send cyclically every](#), Page 196
  - [Send timestamp of total meter start \[channel\]](#), Page 193
    - [Data point type timestamp \[channel\]](#), Page 114
  - [Reset total meter via Group Object \[channel\]](#), Page 130
  - [Reset total meter via i-bus® Tool](#), Page 128
- [Activate intermediate meter](#), Page 196

** Note**

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

**Prerequisites for visibility**

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
  - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
- The parameter window is in the parameter window [Switch Actuator X](#).

### 7.2.8.13 Parameter windows Load monitoring [channel]

**Note**

If the energy function for several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window *Energy functions template*.

The following settings can be made in this parameter window:

- Parameterize function *Load monitoring* for the channel

More information: → [Function Load monitoring, Page 56](#).

<p>Configuration</p> <ul style="list-style-type: none"> <li>+ Device settings</li> <li>+ Safety</li> <li>+ Energy group 1</li> <li>+ Logic/Threshold</li> <li>+ Switch Actuator template</li> <li>+ Energy functions template</li> <li>- Switch Actuator A:             <ul style="list-style-type: none"> <li>Switch Actuator functions</li> <li>Basic settings</li> <li>Current measurement</li> <li>Energy functions</li> <li><b>Load monitoring</b></li> </ul> </li> <li>+ Switch Actuator B:</li> <li>+ Switch Actuator C:</li> <li>+ Switch Actuator D:</li> <li>+ Switch Actuator E:</li> <li>+ Switch Actuator F:</li> <li>+ Switch Actuator G:</li> <li>+ Switch Actuator H:</li> <li>+ Switch Actuator I:</li> </ul>	<p>Parameter setting <input type="radio"/> Apply from template <input checked="" type="radio"/> Individual</p> <hr/> <p>Type of monitoring <span style="float: right;">General threshold monitoring (A...F) ▼</span></p> <hr/> <div style="display: flex; align-items: center;"> <div style="flex: 1;"> <p>Explanation of threshold evaluation</p> </div> <div style="flex: 2;"> </div> </div> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p><b>i</b> A: On/Off          B: Standby          C: Underload          D: Operation          E: Overload          F: Maximum threshold exceeded</p> </div> <hr/> <p>Maximum threshold (IV) <input type="text" value="8000"/> mA</p> <p>Threshold Operation/Overload (III) <input type="text" value="1000"/> mA</p> <p>Threshold Underload/Operation (II) <input type="text" value="500"/> mA</p> <p>Threshold Standby/Underload (I) <input type="text" value="100"/> mA</p> <p>Change load thresholds via Group Objects <input type="checkbox"/></p> <p>Change load thresholds via i-bus® Tool <input checked="" type="checkbox"/></p> <p>Overwrite load threshold at download <input checked="" type="checkbox"/></p> <hr/> <p>Send status load as <input checked="" type="radio"/> 1 byte <input type="radio"/> Individual bits</p> <p>Send status load <span style="float: right;">On change ▼</span></p>
--	---

Fig. 44: Parameter window Load monitoring

**This parameter window includes the following parameters:**

- [Parameter setting](#), Page 144
  - [Type of monitoring \[channel\]](#), Page 165
    - [Measurement unit](#), Page 142
    - [Maximum threshold \(IV\) \[channel\]](#), Page 141
    - [Threshold operation/overload \(III\) \[channel\]](#), Page 150
    - [Threshold Underload/Operation \(II\) \[channel\]](#), Page 152
    - [Threshold Standby/Underload \(I\) \[channel\]](#), Page 151
    - [Change load thresholds via Group Objects \[channel\]](#), Page 139
    - [Change load thresholds via i-bus® Tool](#), Page 137
      - [Overwrite load threshold at download](#), Page 136
    - [Status Send load as \[channel\]](#), Page 158
      - [Value of Group Object when maximum threshold exceeded \[channel\]](#), Page 188
      - [Value of Group Object when load in overload \[channel\]](#), Page 186
      - [Value of Group Object when load in operation \[channel\]](#), Page 184
      - [Value of Group Object when load in underload \[channel\]](#), Page 187
      - [Value of Group Object when load in standby \[channel\]](#), Page 185
      - [Value of Group Object when load On/Off \[channel\]](#), Page 183
    - [Send Status Load](#), Page 156

** Note**

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

**Prerequisites for visibility**

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Load monitoring \[channel\]](#) \ Option Yes
- The parameter window is in the parameter window [Switch Actuator X](#).

## 7.2.8.14 Parameter windows Contact supervision

### **Note**

If the energy function for several Switch Actuator outputs are to be set to the same values, parameterization can be performed in the parameter window [Energy functions template](#).

The following settings can be made in this parameter window:

- Parameterize function *Contact supervision*

More information: → [Function Contact supervision, Page 58](#).

Fig. 45: Parameter window Contact supervision

**This parameter window includes the following parameters:**

- [Parameter setting, Page 144](#)
  - [Value of Group Object when contact open and current flows, Page 182](#)
    - [Send value of Group Object "Contact open and current flows", Page 174](#)
  - [Value of Group Object when contact closed and no current flows, Page 181](#)
    - [Send value of Group Object "Contact closed and no current flows", Page 173](#)
  - [Reset alarm via Group Object, Page 110](#)

### **Prerequisites for visibility**

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Contact supervision](#) \ Option Yes
- The parameter window is in the parameter window [Switch Actuator X](#) \ Parameter window [Contact supervision](#).

## 7.3 Overview of parameters

- [Activate intermediate meter, Page 196](#)
- [Activate total meter \[group\], Page 127](#)
- [Activate total meter \[channel\], Page 128](#)
- [Assign to energy group x, Page 195](#)
- [Block delay for switching on and off after bus voltage recovery, Page 115](#)
- [Block delay for switching on and off via Group Object, Page 115](#)
- [Block staircase lighting after bus voltage recovery, Page 160](#)
- [Block staircase lighting via Group Object, Page 161](#)
- [Change load shedding stage via Group Object, Page 136](#)
- [Change load shedding stage via i-bus® Tool, Page 135](#)
- [Change load thresholds via Group Objects \[channel\], Page 139](#)
- [Change load thresholds via Group Objects \[group\], Page 138](#)
- [Change load thresholds via i-bus® Tool, Page 137](#)
- [Change staircase lighting time via Group Object, Page 163](#)
- [Change staircase lighting time via i-bus® Tool, Page 163](#)
- [Change thresholds via Group Objects, Page 154](#)
- [Change thresholds via i-bus® Tool, Page 153](#)
- [Change values Voltage/Power factor via Group Objects, Page 191](#)
- [Change values Voltage/Power factor via i-bus® Tool, Page 191](#)
- [Current displaying unit \[channel\], Page 119](#)
- [Current displaying unit \[group\], Page 118](#)
- [Cyclical monitoring, Page 197](#)
- [Data point type of Group Object "Threshold input", Page 113](#)
- [Data point type timestamp \[channel\], Page 114](#)
- [Data point type timestamp \[group\], Page 114](#)
- [Delay for switching off, Page 112](#)
- [Delay for switching on, Page 119](#)
- [Delay, Page 172](#)
- [Description, Page 112](#)
- [Enable central Group Object "Receive load shedding stage", Page 193](#)
- [Enable central Group Object "Scene 1 ... 64", Page 194](#)
- [Enable central Group Object "Switch", Page 194](#)
- [Enable energy function x, Page 119](#)
- [Enable energy group x, Page 120](#)
- [Enable function Contact supervision, Page 124](#)
- [Enable function Energy consumption \[channel\], Page 123](#)
- [Enable function Energy consumption \[group\], Page 123](#)
- [Enable function Load monitoring \[channel\], Page 125](#)
- [Enable function Load monitoring \[group\], Page 124](#)
- [Enable function Load shedding, Page 124](#)
- [Enable function Power calculation \[channel\], Page 125](#)
- [Enable function Power calculation \[group\], Page 125](#)
- [Enable function Safety, Page 126](#)
- [Enable function Scenes \[Switch Actuator\], Page 126](#)
- [Enable function Time, Page 127](#)
- [Enable Group Object "In operation", Page 131](#)
- [Enable Group Object "Request status values", Page 132](#)
- [Enable Group Object "Safety priority x", Page 131](#)
- [Enable group object "Status Load shedding", Page 132](#)
- [Enable Group Object "Status Result", Page 131](#)
- [Enable Group Objects "Status byte" \[Switch Actuator\], Page 133](#)
- [Enable Group Objects "Status Result" and "Status Input value between thresholds", Page 133](#)
- [Enable Logic/Threshold x-y, Page 140](#)
- [Enable output X, Page 111](#)
- [Enable Scene assignment x \[Switch Actuator\], Page 159](#)
- [Enable Time Group Objects for setting of device time, Page 134](#)

- [Energy displaying unit \[channel\], Page 117](#)
- [Energy displaying unit \[group\], Page 117](#)
- [Evaluate change of value as, Page 189](#)
- [Feedback of contact position via Group Object "Status Switch", Page 145](#)
- [Flashing if Group Object "Flashing" is, Page 113](#)
- [Forced operation \(1 bit / 2 bit\) \[Switch Actuator\], Page 195](#)
- [Function of the logic gate, Page 121](#)
- [GATE blocks if Group Object "Connection A" equals, Page 159](#)
- [i-bus® Tool access, Page 194](#)
- [In period \(0 = deactivated\), Page 130](#)
- [Invert result, Page 120](#)
- [Load shedding stage, Page 134](#)
- [Lower threshold, Page 166](#)
- [Maximum number of sent telegrams, Page 140](#)
- [Maximum threshold \(IV\) \[channel\], Page 141](#)
- [Maximum threshold \(IV\) \[group\], Page 140](#)
- [Measurement delay after contact position change, Page 143](#)
- [Measurement unit, Page 142](#)
- [Min. duration of the overshoot, Page 143](#)
- [Min. duration of the undershoot, Page 143](#)
- [Minimum dwell time between the thresholds, Page 144](#)
- [Monitor range between thresholds, Page 112](#)
- [Number of flashing cycles, Page 110](#)
- [Number of Off/On changes, Page 110](#)
- [Output reacts to, Page 111](#)
- [Overwrite load shedding stage at download, Page 135](#)
- [Overwrite load threshold at download, Page 136](#)
- [Overwrite Scenes on download, Page 158](#)
- [Overwrite staircase lighting time on download, Page 161](#)
- [Overwrite thresholds on download, Page 153](#)
- [Overwrite values Voltage/Power factor on download, Page 190](#)
- [Parameter setting, Page 144](#)
- [Power displaying unit \[channel\], Page 118](#)
- [Power displaying unit \[group\], Page 118](#)
- [Power factor \(cos phi\), Page 139](#)
- [Reaction after bus voltage recovery \[Switch Actuator\], Page 169](#)
- [Reaction after ETS download \[Switch Actuator\], Page 170](#)
- [Reaction after flashing, Page 169](#)
- [Reaction of output, Page 169](#)
- [Reaction on result "0" \[Switch Actuator\], Page 167](#)
- [Reaction on result "1" \[Switch Actuator\], Page 168](#)
- [Reaction on Scene recall, Page 168](#)
- [Read input Group Objects after bus voltage recovery and download, Page 116](#)
- [Read safety Group Objects after bus voltage recovery and download, Page 155](#)
- [Recall Scene x also via 1-bit Group Object, Page 111](#)
- [Request Date/Time via Group Object, Page 115](#)
- [Reset alarm via Group Object, Page 110](#)
- [Reset total meter via Group Object \[channel\], Page 130](#)
- [Reset total meter via Group Object \[Group\], Page 129](#)
- [Reset total meter via i-bus® Tool, Page 128](#)
- [Restart staircase lighting time after permanent on, Page 162](#)
- [Result if lower threshold is dropped below, Page 121](#)
- [Result if upper threshold is exceeded, Page 120](#)
- [Scene number, Page 159](#)
- [Send cyclically every, Page 196](#)
- [Send Status Load, Page 156](#)
- [Send timestamp of total meter start \[channel\], Page 193](#)
- [Send timestamp of total meter start \[group\], Page 192](#)



- [Send value of Group Object "Contact closed and no current flows", Page 173](#)
- [Send value of Group Object "Contact open and current flows", Page 174](#)
- [Send value of Group Object "Status Current", Page 180](#)
- [Send value of Group Object "Status Load shedding", Page 177](#)
- [Send value of Group Object "Status Power", Page 177](#)
- [Send value of Group Object "Status Result", Page 174](#)
- [Send value of Group Object "Status Switch", Page 179](#)
- [Send value of Group Object "Status Total meter energy consumption", Page 175](#)
- [Send value of Group Objects "Status byte" \[Switch Actuator\], Page 188](#)
- [Send values of Group Objects "Status Result" and "Status Input value between thresholds", Page 190](#)
- [Sending and switching delay after bus voltage recovery, Page 154](#)
- [Sending cycle, Page 155](#)
- [Staircase lighting time can be started again, Page 162](#)
- [Staircase lighting time extendable \(pumping\), Page 164](#)
- [Staircase lighting time, Page 161](#)
- [Status Send load as \[channel\], Page 158](#)
- [Status Send load as \[group\], Page 157](#)
- [Switch output reacts to central Switch Group Object, Page 145](#)
- [Switching reaction of staircase lighting on telegram value 0/1, Page 160](#)
- [Switching reaction on active load shedding stage, Page 146](#)
- [Switching reaction on block, Page 149](#)
- [Switching reaction on bus voltage failure, Page 146](#)
- [Switching reaction on cancellation of block, forced operation and safety priority, Page 147](#)
- [Switching reaction on forced operation, Page 150](#)
- [Switching reaction on revoke of load shedding stage, Page 147](#)
- [Switching reaction on safety priority x, Page 148](#)
- [Threshold operation/overload \(III\) \[channel\], Page 150](#)
- [Threshold operation/overload \(III\) \[group\], Page 150](#)
- [Threshold Standby/Underload \(I\) \[channel\], Page 151](#)
- [Threshold Standby/Underload \(I\) \[group\], Page 151](#)
- [Threshold Underload/Operation \(II\) \[channel\], Page 152](#)
- [Threshold Underload/Operation \(II\) \[group\], Page 152](#)
- [Time for off, Page 192](#)
- [Time for on, Page 192](#)
- [Type of monitoring \[channel\], Page 165](#)
- [Type of monitoring \[group\], Page 164](#)
- [Upper threshold, Page 144](#)
- [Value after sending and switching delay has expired, Page 189](#)
- [Value is sent from a change of, Page 189](#)
- [Value of Group Object "Connection A" after bus voltage recovery, Page 181](#)
- [Value of Group Object "Connection B" after bus voltage recovery, Page 181](#)
- [Value of Group Object "Status Switch", Page 179](#)
- [Value of Group Object when contact closed and no current flows, Page 181](#)
- [Value of Group Object when contact open and current flows, Page 182](#)
- [Value of Group Object when load in operation \[channel\], Page 184](#)
- [Value of Group Object when load in operation \[group\], Page 183](#)
- [Value of Group Object when load in overload \[channel\], Page 186](#)
- [Value of Group Object when load in overload \[group\], Page 185](#)
- [Value of Group Object when load in standby \[channel\], Page 185](#)
- [Value of Group Object when load in standby \[group\], Page 184](#)
- [Value of Group Object when load in underload \[channel\], Page 187](#)
- [Value of Group Object when load in underload \[group\], Page 186](#)
- [Value of Group Object when load On/Off \[channel\], Page 183](#)
- [Value of Group Object when load On/Off \[group\], Page 182](#)
- [Value of Group Object when maximum threshold exceeded \[channel\], Page 188](#)
- [Value of Group Object when maximum threshold exceeded \[group\], Page 187](#)
- [Voltage, Page 155](#)
- [Warning before switching off the staircase lighting, Page 172](#)



- [Warning time, Page 173](#)

## 7.4 Parameter descriptions

### 7.4.1 Reset alarm via Group Object

This parameter is used to define whether the alarm telegrams for the Group Objects *Contact open and current flows* and *Contact closed and no current flows* can be reset via a separate Group Object.

Option	
No	The alarm telegrams are reset automatically after troubleshooting.
Yes	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <i>Reset alarm</i></li> </ul>

#### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Contact supervision* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Contact supervision* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Contact supervision*.

### 7.4.2 Number of Off/On changes

This parameter is used to define the number of Off/On changes during the warning time.

Option	
1... 2... 5	

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Functions Switch Actuator* \ Parameter *Enable function Time* \ Option *Staircase lighting*
- Parameter window *Switch Actuator X* \ Parameter window *Staircase lighting*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Warning before switching off the staircase lighting* \ Option *Short switching off / Via Group Object and short switching off*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Staircase lighting*.

### 7.4.3 Number of flashing cycles

This parameter is used to define the number of flashing cycles. A flashing cycle consists of one On/Off change.

Option	
0... 5... 100	

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Functions Switch Actuator* \ Parameter *Enable function Time* \ Option *Flashing*
- Parameter window *Switch Actuator X* \ Parameter window *Flashing* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Flashing*.

## 7.4.4 Recall Scene x also via 1-bit Group Object

### **i** Note

This parameter is available only for the Scene assignments 1 ... 4.

This parameter is used to define whether it is possible to recall the Scene assignment also via the Group Object *Recall Scene assignment x*.

Option	
<i>No</i>	It is not possible to recall the Scene assignment via Group Object.
<i>Yes</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <i>Recall Scene assignment x</i></li> </ul>

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Functions Switch Actuator* \ Parameter *Enable function Scenes [Switch Actuator]* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Scene assignments [Switch Actuator]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Enable Scene assignment x [Switch Actuator]* \ Option *Yes*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Scene assignments [Switch Actuator]*.

## 7.4.5 Output reacts to

This parameter is used to define whether the output reacts to the result of a Logic or Threshold function.

More information → [Function Logic, Page 44](#), → [Function Threshold, Page 45](#).

Option	
<i>No Logic/Threshold function</i>	The output does not react to the result of a <i>Logic</i> or <i>Threshold</i> function.
<i>Logic/Threshold x</i>	The output reacts to the result of the function <i>Logic/Threshold x</i> ( $x = 1 \dots 24$ ).  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <i>Reaction on result "0" [Switch Actuator]</i></li> <li>• <i>Reaction on result "1" [Switch Actuator]</i></li> </ul>

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Functions Switch Actuator*.

## 7.4.6 Enable output X

These parameters enable the device outputs. The enabled outputs are configured in the parameter window *Switch Actuator X*.

Option	
<i>No</i>	The outputs are not enabled.
<i>Yes</i>	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <i>Switch Actuator X</i></li> <li>• <i>Functions Switch Actuator</i></li> <li>• <i>Basic settings [Switch Actuator]</i></li> </ul>

### Prerequisites for visibility

- The parameter is in the parameter window *Configuration*.

## 7.4.7 Delay for switching off

This parameter is used to define the switch-off delay for the output after an Off telegram is received.

More information: → [Function Delay for switching on and off, Page 62](#).

---

### Option

*00:00:00... 18:12:15 hh:mm:ss*

---

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Delay for switching on and off](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Delay for switching on and off](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Delay for switching on and off](#).

## 7.4.8 Monitor range between thresholds

This parameter is used to define whether the range between the thresholds is monitored and evaluated via the Group Object [Status Input value between thresholds](#).

---

### Option

*No* The range between the thresholds is not monitored and evaluated.

*Yes* The following dependent parameters are shown:

- [Minimum dwell time between the thresholds](#)

---

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Option [Threshold](#)
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

## 7.4.9 Description

This parameter is used to define a description of an output, a channel or a group. The description is displayed at the following points:

- In i-bus® Tool
- In the name of the corresponding parameter window
- In the name of the corresponding Group Objects

### Note

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

---

### Option

*Free text entry* Maximum 24 ASCII characters; the maximum number of characters may vary for other character formats.

---

#### Prerequisites for visibility

- The parameter appears at various points in the application. The visibility is dependent on the application and the higher-level parameter.

## 7.4.10 Flashing if Group Object "Flashing" is

This parameter is used to set the telegram value with which flashing is started and prematurely ended.

Option	
<i>On (1) or off (0)</i>	A telegram with the value 1 or 0 starts the flashing. Flashing cannot be ended prematurely.
<i>On (1)</i>	A telegram with the value 1 starts the flashing. A telegram with the value 0 ends flashing.
<i>Off (0)</i>	A telegram with the value 0 starts the flashing. A telegram with the value 1 ends flashing.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Flashing](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Flashing](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Flashing](#).

## 7.4.11 Data point type of Group Object "Threshold input"

This parameter is used to define the data point type that is received via the Group Object "Threshold input" and evaluated.

Option	
<i>Percent (DPT 5.001)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 5.001)</li> </ul>
<i>Meter pulses (DPT 5.010)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 5.010)</li> </ul>
<i>Meter pulses (DPT 7.001)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 7.001)</li> </ul>
<i>Temperature (DPT 9.001)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 9.001)</li> </ul>
<i>Lux (DPT 9.004)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 9.004)</li> </ul>
<i>mA (DPT 9.021)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 9.021)</li> </ul>
<i>A (DPT 14.019)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 14.019)</li> </ul>
<i>W (DPT 14.056)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 14.056)</li> </ul>
<i>kW (DPT 9.024)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 9.024)</li> </ul>
<i>Wh (DPT 13.010)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 13.010)</li> </ul>
<i>kWh (DPT 13.013)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Threshold input</a> (DPT 13.013)</li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option [Yes](#)
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Option [Threshold](#)
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

## 7.4.12 Data point type timestamp [group]

This parameter is used to define the data point type with which the start time for the group energy consumption calculation is sent on the bus (ABB i-bus® KNX).

Option	
<i>Date (DPT 11.001)/time (10.001)</i>	Date and time are sent via two separate Group Objects on the bus (ABB i-bus® KNX).  The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Start total meter date</a></li> <li>• <a href="#">Start total meter time</a></li> </ul>
<i>Date/Time (DPT 19.001)</i>	Date and time are sent via a Group Object on the bus (ABB i-bus® KNX).  The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Start total meter Date/Time</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option Yes
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#)
  - Parameter [Enable function Power calculation \[group\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[group\]](#) \ Option Yes
- Parameter window [Energy group X](#) \ Parameter window [Energy consumption \[group\]](#)
  - Parameter [Activate total meter \[group\]](#) \ Option Yes
  - Parameter [Send timestamp of total meter start \[group\]](#) \ Option Yes
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Energy consumption \[group\]](#).

## 7.4.13 Data point type timestamp [channel]

This parameter is used to define the data point type with which the start time for the channel energy consumption calculation is sent on the bus (ABB i-bus® KNX).

Option	
<i>Date (DPT 11.001)/time (10.001)</i>	Date and time are sent via two separate Group Objects on the bus (ABB i-bus® KNX).  The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Start total meter date</a></li> <li>• <a href="#">Start total meter time</a></li> </ul>
<i>Date/Time (DPT 19.001)</i>	Date and time are sent via a Group Object on the bus (ABB i-bus® KNX).  The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Start total meter Date/Time</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
  - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Activate total meter \[channel\]](#) \ Option Yes
  - Parameter [Send timestamp of total meter start \[channel\]](#) \ Option Yes
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Energy consumption \[channel\]](#).

## 7.4.14 Request Date/Time via Group Object

This parameter is used to define whether a date and time request is sent via the Group Object [Request Date/Time](#).

Option	
<i>No</i>	The request is not sent.
<i>Yes</i>	The request is sent 30 seconds after switching on the device. An active send and switching delay is not taken into account.

### Prerequisites for visibility

- Parameter window [Device settings](#) \ Parameter [Enable Time Group Objects for setting of device time](#) \ all options except *No*
- The parameter is in the parameter window [Device settings](#).

## 7.4.15 Block delay for switching on and off after bus voltage recovery

This parameter is used to define whether the function [Delay for switching on and off](#) is blocked after bus voltage recovery.

Option	
<i>No</i>	
<i>Yes</i>	

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Delay for switching on and off](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Delay for switching on and off](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Block delay for switching on and off via Group Object](#) \ Option *Yes*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Delay for switching on and off](#).

## 7.4.16 Block delay for switching on and off via Group Object

This parameter is used to define whether the function [Delay for switching on and off](#) can be blocked via a Group Object.

If the function *Delay for switching on and off* is blocked, the switch-on command is forwarded without time function in the function chain. The output reacts according to its parameterization. After a download, the function *Delay for switching on and off* remains blocked.

Option	
<i>No</i>	The delay for switching on and off cannot be blocked via a Group Object.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Block delay for switching on and off after bus voltage recovery</a></li> </ul> The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Block delay for switching on and off</a></li> </ul>

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Delay for switching on and off*
- Parameter window [Switch Actuator X](#) \ Parameter window [Delay for switching on and off](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Delay for switching on and off](#).

## 7.4.17

### Read input Group Objects after bus voltage recovery and download

This parameter is used to define whether the following input Group Objects are read after bus voltage recovery or download:

- [Connection A](#)
- [Connection B](#)
- [Threshold input](#) (DPT 5.001)
- [Threshold input](#) (DPT 5.010)
- [Threshold input](#) (DPT 7.001)
- [Threshold input](#) (DPT 9.001)
- [Threshold input](#) (DPT 9.004)

#### Note

To update the Group Objects after bus voltage recovery and download, the read flags must be set for the corresponding Group Objects of the sending device.

Option	
<i>No</i>	The input Group Objects are not read. The results of the functions <i>Logic</i> and <i>Threshold</i> are recalculated only if a new value is received on one of the input Group Objects.
<i>Yes</i>	The input Group Objects are read. The results of the functions <i>Logic</i> and <i>Threshold</i> are recalculated.

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option *Yes*
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ all options except *None*
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).



## 7.4.18 Energy displaying unit [group]

This parameter is used to define the unit and data point type for the group energy consumption calculation.

Option	
<i>Wh (DPT 13.010)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Total meter energy consumption</a></li> </ul>
<i>kWh (DPT 13.013)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Total meter energy consumption</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option Yes
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#)
  - Parameter [Enable function Power calculation \[group\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[group\]](#) \ Option Yes
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Energy consumption \[group\]](#).

## 7.4.19 Energy displaying unit [channel]

This parameter is used to define the unit and data point type for the channel energy consumption calculation.

Option	
<i>Wh (DPT 13.010)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Total meter energy consumption</a></li> <li>• <a href="#">Status Intermediate meter energy consumption</a></li> </ul>
<i>kWh (DPT 13.013)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Total meter energy consumption</a></li> <li>• <a href="#">Status Intermediate meter energy consumption</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
  - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Energy consumption \[channel\]](#).

## 7.4.20 Power displaying unit [group]

This parameter is used to define the unit and data point type for the group power calculation.

Option	
<i>W (DPT 14.056)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Power</a></li> </ul>
<i>kW (DPT 9.024)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Power</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option [Yes](#)
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#) \ Parameter [Enable function Power calculation \[group\]](#) \ Option [Yes](#)
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Power calculation \[group\]](#).

## 7.4.21 Power displaying unit [channel]

This parameter is used to define the unit and data point type for the channel power calculation.

Option	
<i>W (DPT 14.056)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Power</a></li> </ul>
<i>kW (DPT 9.024)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Power</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option [Yes](#)
  - Parameter [Enable energy function x](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Power calculation \[channel\]](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Power calculation \[channel\]](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Power calculation \[channel\]](#).

## 7.4.22 Current displaying unit [group]

This parameter is used to define the unit and data point type for the group current measurement.

Option	
<i>mA (DPT 9.021)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Current</a></li> </ul>
<i>A (DPT 14.019)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Current</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option [Yes](#)
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Current measurement \[group\]](#).

## 7.4.23 Current displaying unit [channel]

This parameter is used to define the unit and data point type for the channel current measurement.

Option	
<i>mA (DPT 9.021)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Current</a></li> </ul>
<i>A (DPT 14.019)</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Status Current</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option [Yes](#)
  - Parameter [Enable energy function x](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Current measurement \[channel\]](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Current measurement \[channel\]](#).

## 7.4.24 Delay for switching on

This parameter is used to define the switch-on delay for the output after an On telegram is received.

More information: → [Function Delay for switching on and off, Page 62.](#)

Option	
<i>00:00:00... 18:12:15 hh:mm:ss</i>	

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Delay for switching on and off](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Delay for switching on and off](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Delay for switching on and off](#).

## 7.4.25 Enable energy function x

These parameters enable the energy functions for the outputs.

Option	
<i>No</i>	The energy functions are not enabled.
<i>Yes</i>	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <a href="#">Current measurement [channel]</a></li> <li>• <a href="#">Energy functions [channel]</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option [Yes](#)
- The parameter is in the parameter window [Configuration](#).

## 7.4.26 Enable energy group x

These parameters enable the energy groups.

Option	
No	The energy group x (x = 1 ... 4) is not enabled.
Yes	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <a href="#">Energy group X</a></li> <li>• <a href="#">Current measurement [group]</a></li> <li>• <a href="#">Energy functions [group]</a></li> </ul>

### Prerequisites for visibility

- The parameter is in the parameter window [Configuration](#).

## 7.4.27 Invert result

This parameter is used to define whether the result of the function *Logic* is output inverted.

Option	
No	
Yes	

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Options *AND* / *OR* / *Exclusive OR* / *GATE*
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

## 7.4.28 Result if upper threshold is exceeded

This parameter is used to define the result of the function *Threshold* when the value received at the threshold input exceeds the upper threshold.

The result can be linked with any output within the device or output on the Group Object [Status Result \[Threshold\]](#).

Option	
<i>Unchanged</i>	The result of the function <i>Threshold</i> remains unchanged.
<i>1</i>	The result of the function <i>Threshold</i> is 1.
<i>0</i>	The result of the function <i>Threshold</i> is 0.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Option *Threshold*
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

## 7.4.29 Result if lower threshold is dropped below

This parameter is used to define the result of the function *Threshold* when the value received at the threshold input falls below the lower threshold.

The result can be linked with any output within the device or output on the Group Object [Status Result \[Threshold\]](#).

Option	
<i>Unchanged</i>	The result of the function <i>Threshold</i> remains unchanged.
<i>1</i>	The result of the function <i>Threshold</i> is 1.
<i>0</i>	The result of the function <i>Threshold</i> is 0.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Option *Threshold*
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

## 7.4.30 Function of the logic gate

This parameter is used to define whether one of the logic functions or the threshold function is used.

Option	
<i>None</i>	The logic gate is not used.
AND	<p>The logic function <i>AND</i> is used. If the value 1 is present on all inputs, the result = 1.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Value of Group Object "Connection A" after bus voltage recovery</a></li> <li>• <a href="#">Value of Group Object "Connection B" after bus voltage recovery</a></li> <li>• <a href="#">Read input Group Objects after bus voltage recovery and download</a></li> <li>• <a href="#">Invert result</a></li> <li>• <a href="#">Enable Group Object "Status Result"</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Connection A</a></li> <li>• <a href="#">Connection B</a></li> </ul>
OR	<p>The logic function <i>OR</i> is used. If the value 1 is present on at least one input, the result = 1.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Value of Group Object "Connection A" after bus voltage recovery</a></li> <li>• <a href="#">Value of Group Object "Connection B" after bus voltage recovery</a></li> <li>• <a href="#">Read input Group Objects after bus voltage recovery and download</a></li> <li>• <a href="#">Invert result</a></li> <li>• <a href="#">Enable Group Object "Status Result"</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Connection A</a></li> <li>• <a href="#">Connection B</a></li> </ul>
<i>Exclusive OR</i>	<p>The logic function <i>exclusive OR</i> is used. If the value 1 is present on at least one input, the result = 1. If the same value is present on all inputs, the result = 0.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Value of Group Object "Connection A" after bus voltage recovery</a></li> <li>• <a href="#">Value of Group Object "Connection B" after bus voltage recovery</a></li> <li>• <a href="#">Read input Group Objects after bus voltage recovery and download</a></li> <li>• <a href="#">Invert result</a></li> <li>• <a href="#">Enable Group Object "Status Result"</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Connection A</a></li> <li>• <a href="#">Connection B</a></li> </ul>
GATE	<p>The logic function <i>GATE</i> is used. If the GATE is open (Connection A), the most recent value sent to the input (Connection B) remains as the result. If the GATE is blocked (Connection A), the value that the result had before the block is retained. After enabling, the result corresponds to the value of the input (Connection B).</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">GATE blocks if Group Object "Connection A" equals</a></li> <li>• <a href="#">Value of Group Object "Connection A" after bus voltage recovery</a></li> <li>• <a href="#">Value of Group Object "Connection B" after bus voltage recovery</a></li> <li>• <a href="#">Read input Group Objects after bus voltage recovery and download</a></li> <li>• <a href="#">Invert result</a></li> <li>• <a href="#">Enable Group Object "Status Result"</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Connection A</a></li> <li>• <a href="#">Connection B</a></li> </ul>
<i>Threshold</i>	<p>The function <i>Threshold</i> is used. More information: → <a href="#">Function Threshold, Page 45.</a></p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Data point type of Group Object "Threshold input"</a></li> <li>• <a href="#">Upper threshold</a></li> <li>• <a href="#">Lower threshold</a></li> <li>• <a href="#">Change thresholds via Group Objects</a></li> <li>• <a href="#">Change thresholds via i-bus® Tool</a></li> <li>• <a href="#">Result if upper threshold is exceeded</a></li> <li>• <a href="#">Min. duration of the overshoot</a></li> <li>• <a href="#">Monitor range between thresholds</a></li> <li>• <a href="#">Result if lower threshold is dropped below</a></li> <li>• <a href="#">Min. duration of the undershoot</a></li> <li>• <a href="#">Read input Group Objects after bus voltage recovery and download</a></li> <li>• <a href="#">Enable Group Objects "Status Result" and "Status Input value between thresholds"</a></li> </ul>
<i>1 bit Inverter</i>	<p>The logic function <i>1 bit Inverter</i> is used. If the value 1 is present at the input, the result = 0. If the value 0 is present at the input, the result = 1.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Value of Group Object "Connection A" after bus voltage recovery</a></li> <li>• <a href="#">Read input Group Objects after bus voltage recovery and download</a></li> <li>• <a href="#">Enable Group Object "Status Result"</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Connection A</a></li> </ul>

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option *Yes*
- The parameter is in the parameter window [Logic/Threshold x](#).

**7.4.31 Enable function Energy consumption [group]**

This parameter enables the function *Energy consumption* for the group and the related parameter window [Energy consumption \[group\]](#) is displayed.

Option	
<a href="#">No</a>	The function is not enabled.
<i>Yes</i>	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <a href="#">Energy consumption [group]</a></li> </ul>

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option *Yes*
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#) \ Parameter [Enable function Power calculation \[group\]](#) \ Option *Yes*
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Energy functions \[group\]](#).

**7.4.32 Enable function Energy consumption [channel]**

This parameter enables the function *Energy consumption* for the channel and the related parameter window [Energy consumption \[channel\]](#) is displayed.

Option	
<a href="#">No</a>	The function is not enabled.
<i>Yes</i>	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <a href="#">Energy consumption [channel]</a></li> </ul>

**Prerequisites for visibility**

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option *Yes*
  - Parameter [Enable energy function x](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Power calculation \[channel\]](#) \ Option *Yes*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Energy functions \[channel\]](#).

### 7.4.33 Enable function Contact supervision

This parameter enables the function *Contact supervision* and the related parameter window *Contact supervision* is displayed.

Option	
No	The function is not enabled.
Yes	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <a href="#">Contact supervision</a></li> </ul> The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Contact open and current flows</a></li> <li>• <a href="#">Contact closed and no current flows</a></li> </ul>

#### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Energy functions \[channel\]](#).

### 7.4.34 Enable function Load shedding

This parameter enables the function *Load shedding* and the related parameter window *Load shedding* is displayed.

Option	
No	The function is not enabled.
Yes	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <a href="#">Load shedding</a></li> </ul>

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Functions Switch Actuator](#).

### 7.4.35 Enable function Load monitoring [group]

This parameter enables the function *Load monitoring* for the group and the related parameter window *Load monitoring [group]* is displayed.

Option	
No	The function is not enabled.
Yes	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <a href="#">Load monitoring [group]</a></li> </ul>

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option Yes
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Energy functions \[group\]](#).



### 7.4.36 Enable function Load monitoring [channel]

This parameter enables the function *Load monitoring* for the channel and the related parameter window *Load monitoring [channel]* is displayed.

Option	
No	The function is not enabled.
Yes	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <i>Load monitoring [channel]</i></li> </ul>

#### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Energy functions [channel]*.

### 7.4.37 Enable function Power calculation [group]

This parameter enables the function *Power calculation* for the group and the related parameter window *Power calculation [group]* is displayed.

Option	
No	The function is not enabled.
Yes	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <i>Power calculation [group]</i></li> </ul> The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <i>Enable function Energy consumption [group]</i></li> <li>• <i>Measurement unit</i></li> </ul>

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- The parameter is in the parameter window *Energy group X* \ parameter window *Energy functions [group]*.

### 7.4.38 Enable function Power calculation [channel]

This parameter enables the function *Power calculation* for the channel and the related parameter window *Power calculation [channel]* is displayed.

Option	
No	The function is not enabled.
Yes	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <i>Power calculation [channel]</i></li> </ul> The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <i>Enable function Energy consumption [channel]</i></li> <li>• <i>Measurement unit</i></li> </ul>

#### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Energy functions [channel]*.

### 7.4.39 Enable function Safety

This parameter enables the function *Safety* and the related parameter window *Safety* is displayed.

Option	
<i>No</i>	The function is not enabled.
<i>Yes</i>	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <i>Safety</i></li> </ul>

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Functions Switch Actuator*.

### 7.4.40 Enable function Scenes [Switch Actuator]

This parameter enables the function *Scenes* and the related parameter window *Scene assignments [Switch Actuator]* is displayed.

Option	
<i>No</i>	The function is not enabled.
<i>Yes</i>	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <i>Scene assignments [Switch Actuator]</i></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <i>Scene 1...64</i></li> </ul>

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Functions Switch Actuator*.

## 7.4.41 Enable function Time

This parameter enables one of the following time functions and the related parameter window is displayed:

- *Staircase lighting*
- *Delay for switching on and off*
- *Flashing*

Option	
<u>No</u>	No time function is used for this output.
<i>Staircase lighting</i>	<p>The <i>Staircase lighting</i> time function is used for this output.</p> <p>The following dependent parameter windows are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Staircase lighting</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Staircase lighting permanent on</a></li> </ul>
<i>Delay for switching on and off</i>	<p>The time function <i>Delay for switching on and off</i> is used for this output.</p> <p>The following dependent parameter windows are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Delay for switching on and off</a></li> </ul>
<i>Flashing</i>	<p>The <i>Flashing</i> time function is used for this output.</p> <p>The following dependent parameter windows are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Flashing</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Flashing</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Functions Switch Actuator](#).

## 7.4.42 Activate total meter [group]

This parameter is used to activate the total meter for the group.

Option	
<u>No</u>	The meter is not activated.
<u>Yes</u>	<p>The meter is activated. The energy consumption calculation for the group is started.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Send value of Group Object "Status Total meter energy consumption"</a></li> <li>• <a href="#">Send timestamp of total meter start [group]</a></li> <li>• <a href="#">Reset total meter via Group Object [Group]</a></li> <li>• <a href="#">Reset total meter via i-bus® Tool</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option Yes
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#)
  - Parameter [Enable function Power calculation \[group\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[group\]](#) \ Option Yes
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Energy consumption \[group\]](#).

### 7.4.43 Activate total meter [channel]

This parameter is used to activate the total meter for the channel.

Option	
<i>No</i>	The meter is not activated.
<u><i>Yes</i></u>	<p>The meter is activated. The energy consumption calculation for the channel is started.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Send value of Group Object "Status Total meter energy consumption"</a></li> <li>• <a href="#">Send timestamp of total meter start [channel]</a></li> <li>• <a href="#">Reset total meter via Group Object [channel]</a></li> <li>• <a href="#">Reset total meter via i-bus® Tool</a></li> </ul>

#### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
  - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Energy consumption \[channel\]](#).

### 7.4.44 Reset total meter via i-bus® Tool

This parameter is used to define whether the total meter can be reset via i-bus® Tool.

The meter is reset to 0 by resetting. The energy consumption calculation is restarted.

**Note**

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

**Option**

No

Yes

**Prerequisites for visibility**

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]*
  - Parameter *Enable function Power calculation [group]* \ Option Yes
  - Parameter *Enable function Energy consumption [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy consumption [group]* \ Parameter *Activate total meter [group]* \ Option Yes
- The parameter is in the parameter window *Energy group X* \ parameter window *Energy consumption [group]*.

or

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]*
  - Parameter *Enable function Power calculation [channel]* \ Option Yes
  - Parameter *Enable function Energy consumption [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy consumption [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Activate total meter [channel]* \ Option Yes
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Energy consumption [channel]*.

## 7.4.45

### Reset total meter via Group Object [Group]

This parameter is used to define whether the group total meter can be reset via the Group Object *Reset total meter*.

The meter is reset to 0 by resetting. The energy consumption calculation is restarted.

**Option**

No

The total meter cannot be reset via the Group Object.

Yes

The following dependent Group Objects are displayed:

- *Reset total meter*

**Prerequisites for visibility**

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]*
  - Parameter *Enable function Power calculation [group]* \ Option Yes
  - Parameter *Enable function Energy consumption [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy consumption [group]* \ Parameter *Activate total meter [group]* \ Option Yes
- The parameter is in the parameter window *Energy group X* \ parameter window *Energy consumption [group]*.

## 7.4.46 Reset total meter via Group Object [channel]

This parameter is used to define whether the channel total meter can be reset via the Group Object [Reset total meter](#).

The meter is reset to 0 by resetting. The energy consumption calculation is restarted.

Option	
No	The total meter cannot be reset via the Group Object.
Yes	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Reset total meter</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
  - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Activate total meter \[channel\]](#) \ Option Yes
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Energy consumption \[channel\]](#).

## 7.4.47 In period (0 = deactivated)

This parameter is used to define the period during which the device sends telegrams. The telegrams are sent as quickly as possible at the start of a period.

### Note

The telegram rate limit is deactivated when the value 0 is selected.

More information: → [Telegram rate limit, Page 234](#).

Option	
0 ... <u>1</u> ... 59 s	

### Prerequisites for visibility

- The parameter is in the parameter window [Configuration](#).

## 7.4.48 Enable Group Object "In operation"

This parameter enables the Group Object *In operation*.

Option	
<u>No</u>	The Group Object is not enabled.
<i>Yes, send value 0 cyclically</i>	<p>The Group Object is enabled and cyclically sends the value 0.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Sending cycle</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">In operation</a></li> </ul>
<i>Yes, send value 1 cyclically</i>	<p>The Group Object is enabled and cyclically sends the value 1.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Sending cycle</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">In operation</a></li> </ul>

### Prerequisites for visibility

- The parameter is in the parameter window [Device settings](#).

## 7.4.49 Enable Group Object "Safety priority x"

These parameters are used to enable the Group Objects *Safety priority x* (x = 1, 2, 3).

More information: → [Safety priority, Page 43](#).

Option	
<u>No</u>	The Group Object is not enabled.
<i>Yes</i>	<p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Cyclical monitoring</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Safety priority x</a></li> </ul>

### Prerequisites for visibility

- The parameter is in the parameter window [Safety](#).

## 7.4.50 Enable Group Object "Status Result"

This parameter enables the Group Object *Status Result [Logic]*.

Option	
<u>No</u>	The Group Object is not enabled.
<i>Yes</i>	<p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Send value of Group Object "Status Result"</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Result [Logic]</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Options [AND](#) / [OR](#) / [Exclusive OR](#) / [GATE](#) / [1 bit Inverter](#)
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

## 7.4.51 Enable group object "Status Load shedding"

This parameter enables the Group Object *Status Load shedding*.

Option	
<i>No</i>	The Group Object is not enabled.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <i>Send value of Group Object "Status Load shedding"</i></li> </ul> The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <i>Status Load shedding</i></li> </ul>

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Device settings* \ Parameter *Enable central Group Object "Receive load shedding stage"* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Functions Switch Actuator* \ Parameter *Enable function Load shedding* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Load shedding* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load shedding*.

## 7.4.52 Enable Group Object "Request status values"

This parameter enables the Group Object *Request status values*.

All status messages of the device can be requested using the Group Object *Request status values* and sent on the bus (ABB i-bus® KNX).

### Note

The values of the status Group Objects are sent only if sending on request is set in the related parameters.

Option	
<i>No</i>	The Group Object is not enabled.
<i>Yes</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <i>Request status values</i></li> </ul>

### Prerequisites for visibility

- The parameter is in the parameter window *Device settings*.



## 7.4.53 Enable Group Objects "Status Result" and "Status Input value between thresholds"

This parameter enables the Group Objects *Status Result [Threshold]* and *Status Input value between thresholds*.

### **i** Note

This Group Object *Status Input value between thresholds* is available only if, in the parameter *Monitor range between thresholds*, the option *Yes* is set.

Option	
<i>No</i>	The Group Objects will not be enabled.
<i>Yes</i>	<p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li><i>Send value of Group Object "Status Result"</i></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li><i>Status Result [Threshold]</i></li> <li><i>Status Input value between thresholds</i></li> </ul>

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable Logic/Threshold x-y* \ Option *Yes*
- Parameter window *Logic/Threshold* \ Parameter window *Logic/Threshold x* \ Parameter *Function of the logic gate* \ Option *Threshold*
- The parameter is in the parameter window *Logic/Threshold* \ parameter window *Logic/Threshold x*.

## 7.4.54 Enable Group Objects "Status byte" [Switch Actuator]

This parameter enables one of the following Group Objects:

- Status byte all active priorities*
- Status byte highest active priority*

Option	
<i>No</i>	The Group Object is not enabled.
<i>Yes, all active priorities</i>	<p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li><i>Send value of Group Objects "Status byte" [Switch Actuator]</i></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li><i>Status byte all active priorities</i></li> </ul>
<i>Yes, highest active priority</i>	<p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li><i>Send value of Group Objects "Status byte" [Switch Actuator]</i></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li><i>Status byte highest active priority</i></li> </ul>

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Basic settings [Switch Actuator]* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Basic settings [Switch Actuator]*.

## 7.4.55 Enable Time Group Objects for setting of device time

This parameter is used to define the data point type for the reception of the date and time. The corresponding Group Objects are enabled.

Option	
<i>No</i>	The Group Objects will not be enabled.
<i>Date (DPT 11.001)/time (10.001)</i>	<p>Date and time are sent via two separate Group Objects on the bus (ABB i-bus® KNX).</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Request Date/Time via Group Object</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Set date</a></li> <li>• <a href="#">Set time</a></li> <li>• <a href="#">Request Date/Time</a></li> </ul>
<i>Date/Time (DPT 19.001)</i>	<p>Date and time are sent via a Group Object on the bus (ABB i-bus® KNX).</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Request Date/Time via Group Object</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Set date/time</a></li> <li>• <a href="#">Request Date/Time</a></li> </ul>

### Prerequisites for visibility

- The parameter is in the parameter window [Device settings](#).

## 7.4.56 Load shedding stage

This parameter is used to assign the channel to a load shedding stage.

Option
<i>1... 15</i>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Device settings](#) \ Parameter [Enable central Group Object "Receive load shedding stage"](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Load shedding](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Load shedding](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load shedding](#).

## 7.4.57 Overwrite load shedding stage at download

This parameter is used to define whether the load shedding stage assigned to the channel is overwritten while downloading the application to the device.

Option	
<i>No</i>	The existing values in the device are not overwritten.
<i>Yes</i>	The existing values in the device are overwritten with the values defined in ETS.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Device settings](#) \ Parameter [Enable central Group Object "Receive load shedding stage"](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Load shedding](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Load shedding](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Change load shedding stage via Group Object](#) \ Option *Yes*
  - or
  - Parameter [Change load shedding stage via i-bus® Tool](#) \ Option *Yes*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load shedding](#).

## 7.4.58 Change load shedding stage via i-bus® Tool

This parameter is used to define whether the load shedding stage assigned to the channel can be changed via i-bus® Tool.

### Note

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

Option	
<i>No</i>	The load shedding stage cannot be changed via i-bus® Tool.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Overwrite load shedding stage at download</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Device settings](#) \ Parameter [Enable central Group Object "Receive load shedding stage"](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Load shedding](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Load shedding](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load shedding](#).

## 7.4.59 Change load shedding stage via Group Object

This parameter is used to define whether the load shedding stage assigned to the channel can be changed via the Group Object [Set load shedding stage](#).

Option	
<i>No</i>	The load shedding stage cannot be changed via a Group Object.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Overwrite load shedding stage at download</a></li> </ul> The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Set load shedding stage</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Device settings](#) \ Parameter [Enable central Group Object "Receive load shedding stage"](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Load shedding](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Load shedding](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load shedding](#).

## 7.4.60 Overwrite load threshold at download

This parameter is used to define whether the load thresholds are overwritten while downloading the application to the device.

Option	
<i>No</i>	The existing values in the device are not overwritten.
<i>Yes</i>	The existing values in the device are overwritten with the values defined in ETS.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option *Yes*
  - Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#) \ Parameter [Enable function Load monitoring \[group\]](#) \ Option *Yes*
  - Parameter window [Energy group X](#) \ Parameter window [Load monitoring \[group\]](#)
    - Parameter [Type of monitoring \[group\]](#) \ Options *General threshold monitoring (A ... F) / Maximum threshold monitoring (F) / Operation monitoring (D) / Standby monitoring (B)*
    - Parameter [Change load thresholds via Group Objects \[group\]](#) \ Option *Yes*
    - or
    - Parameter [Change load thresholds via i-bus® Tool](#) \ Option *Yes*
  - The parameter is in the parameter window [Energy group X](#) \ parameter window [Load monitoring \[group\]](#).
- or
- Parameter window [Configuration](#)
    - Parameter [Enable output X](#) \ Option *Yes*
    - Parameter [Enable energy function x](#) \ Option *Yes*
  - Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Load monitoring \[channel\]](#) \ Option *Yes*
  - Parameter window [Switch Actuator X](#) \ Parameter window [Load monitoring \[channel\]](#)
    - Parameter [Parameter setting](#) \ Option *Individual*
    - Parameter [Type of monitoring \[channel\]](#) \ Options *General threshold monitoring (A ... F) / Maximum threshold monitoring (F) / Operation monitoring (D) / Standby monitoring (B)*
    - Parameter [Change load thresholds via Group Objects \[channel\]](#) \ Option *Yes*
    - or
    - Parameter [Change load thresholds via i-bus® Tool](#) \ Option *Yes*
  - The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load monitoring \[channel\]](#).

## 7.4.61 Change load thresholds via i-bus® Tool

This parameter is used to define whether the load thresholds set in ETS can be changed via i-bus® Tool.

### **i** Note

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

### Option

<i>No</i>	The load thresholds cannot be changed via i-bus® Tool.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <i>Overwrite load threshold at download</i></li> </ul>

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option *Yes*
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]* \ Parameter *Enable function Load monitoring [group]* \ Option *Yes*
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]* \ Parameter *Type of monitoring [group]* \ Options *General threshold monitoring (A ... F) / Maximum threshold monitoring (F) / Operation monitoring (D) / Standby monitoring (B)*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

or

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option *Yes*
  - Parameter *Enable energy function x* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Options *General threshold monitoring (A ... F) / Maximum threshold monitoring (F) / Operation monitoring (D) / Standby monitoring (B)*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.62 Change load thresholds via Group Objects [group]

This parameter is used to define whether the load thresholds for the energy group set in ETS can be changed via the corresponding Group Objects.

Option	
<i>No</i>	The values cannot be changed via Group Objects.
Yes	<p>The values can be changed via Group Objects.</p> <p>Depending on the setting in the parameter <i>Type of monitoring [group]</i>, the following Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <i>Set maximum threshold</i> (DPT 14.019)</li> <li>• <i>Set maximum threshold</i> (DPT 14.056)</li> <li>• <i>Set threshold Operation/Overload</i> (DPT 14.019)</li> <li>• <i>Set threshold Operation/Overload</i> (DPT 14.056)</li> <li>• <i>Set threshold Underload/Operation</i> (DPT 14.019)</li> <li>• <i>Set threshold Underload/Operation</i> (DPT 14.056)</li> <li>• <i>Set threshold Standby/Underload</i> (DPT 14.019)</li> <li>• <i>Set threshold Standby/Underload</i> (DPT 14.056)</li> </ul> <p>The data point type (DPT) depends on the setting in the parameter <i>Measurement unit</i>.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <i>Overwrite load threshold at download</i></li> </ul>

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]* \ Parameter *Enable function Load monitoring [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]* \ Parameter *Type of monitoring [group]* \ Options *General threshold monitoring (A ... F) / Maximum threshold monitoring (F) / Operation monitoring (D) / Standby monitoring (B)*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

## 7.4.63 Change load thresholds via Group Objects [channel]

This parameter is used to define whether the load thresholds for the channel set in ETS can be changed via the corresponding Group Objects.

Option	
No	The values cannot be changed via Group Objects.
Yes	<p>The values can be changed via Group Objects.</p> <p>Depending on the setting in the parameter <i>Type of monitoring [channel]</i>, the following Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <i>Set maximum threshold</i> (DPT 14.019)</li> <li>• <i>Set maximum threshold</i> (DPT 14.056)</li> <li>• <i>Set threshold Operation/Overload</i> (DPT 14.019)</li> <li>• <i>Set threshold Operation/Overload</i> (DPT 14.056)</li> <li>• <i>Set threshold Underload/Operation</i> (DPT 14.019)</li> <li>• <i>Set threshold Underload/Operation</i> (DPT 14.056)</li> <li>• <i>Set threshold Standby/Underload</i> (DPT 14.019)</li> <li>• <i>Set threshold Standby/Underload</i> (DPT 14.056)</li> </ul> <p>The data point type (DPT) depends on the setting in the parameter <i>Measurement unit</i>.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <i>Overwrite load threshold at download</i></li> </ul>

### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Options *General threshold monitoring (A ... F) / Maximum threshold monitoring (F) / Operation monitoring (D) / Standby monitoring (B)*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.64 Power factor (cos phi)

This parameter is used to define the power factor (cos phi).

More information: → [Function Power calculation, Page 53](#).

Option	
0.05 ... 1.00	

### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Power calculation [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Power calculation [channel]* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Power calculation [channel]*.

## 7.4.65 Enable Logic/Threshold x-y

This parameter enables the functions *Logic* and *Threshold* in groups of four.

The functions *Logic* and *Threshold* are configured in the parameter window [Logic/Threshold x](#).

The functions *Logic* and *Threshold* can be used independently or linked with an output.

More information → [Function Logic, Page 44](#), → [Function Threshold, Page 45](#).

### **i** Note

The default value is dependent on the product variant and does not apply to all logic and threshold groups.

#### Option

<i>No</i>	The functions <i>Logic</i> and <i>Threshold</i> are not enabled.
<i>Yes</i>	The following dependent parameter windows are shown: <ul style="list-style-type: none"> <li>• <a href="#">Logic/Threshold</a></li> <li>• <a href="#">Logic/Threshold x</a></li> </ul>

#### Prerequisites for visibility

- The parameter is in the parameter window [Configuration](#).

## 7.4.66 Maximum number of sent telegrams

This parameter is used to define the number of telegrams sent within a period that can be set.

The period is defined in the parameter → [In period \(0 = deactivated\), Page 130](#).

More information: → [Telegram rate limit, Page 234](#).

#### Option

3 ... 20 ... 100

#### Prerequisites for visibility

- The parameter is in the parameter window [Configuration](#).

## 7.4.67 Maximum threshold (IV) [group]

This parameter is used to define the maximum threshold for the group.

The possible option depends on the selection in the parameter [Measurement unit](#).

#### Option

20 ... 16000 ... 240000 mA

10 ... 4000 ... 55200 W

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option Yes
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#) \ Parameter [Enable function Load monitoring \[group\]](#) \ Option Yes
- Parameter window [Energy group X](#) \ Parameter window [Load monitoring \[group\]](#) \ Parameter [Type of monitoring \[group\]](#) \ Options [General threshold monitoring \(A ... F\)](#) / [Maximum threshold monitoring \(F\)](#)
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Load monitoring \[group\]](#).



## 7.4.68 Maximum threshold (IV) [channel]

This parameter is used to define the maximum threshold for the channel.

The possible option depends on the selection in the parameter *Measurement unit*.

Option
20 ... 8000 ... 20000 mA
10 ... 2000 ... 4600 W

### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Options *General threshold monitoring (A ... F) / Maximum threshold monitoring (F)*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.69 Measurement unit

This parameter is used to define whether the thresholds are set as current or power values.

### **i** Note

If the parameterization for the function *Load monitoring* from the template is applied and the thresholds are set as power values in the template, the function *Power calculation* must be enabled in the channel.

### **i** Note

If several channels are combined into energy groups, the setting in the parameter *Measurement unit* in the group and in the related channels must be identical.

---

#### Option

*Current*

*Power*

---

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]*
  - Parameter *Enable function Power calculation [group]* \ Option Yes
  - Parameter *Enable function Load monitoring [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]* \ Parameter *Type of monitoring [group]* \ Options *General threshold monitoring (A ... F) / Maximum threshold monitoring (F) / Operation monitoring (D) / Standby monitoring (B)*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

or

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]*
  - Parameter *Enable function Power calculation [channel]* \ Option Yes
  - Parameter *Enable function Load monitoring [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Options *General threshold monitoring (A ... F) / Maximum threshold monitoring (F) / Operation monitoring (D) / Standby monitoring (B)*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.70 Measurement delay after contact position change

This parameter is used to define a delay for the current measurement after a change in the position of the relay contact. Incorrect measurements due to high inrush or breaking currents can be avoided by means of the measurement delay.

### **i** Note

During the measurement delay, it is not possible to calculate power and energy consumption values.

### **i** Note

If the contacts are switched manually, a measurement delay is not possible.

---

#### Option

3 ... 4 ... 10 s

---

#### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Current measurement \[channel\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Current measurement \[channel\]](#).

## 7.4.71 Min. duration of the overshoot

This parameter is used to define how long the value received at the threshold input must exceed the threshold before the result of the function *Threshold* is updated.

---

#### Option

00:00:00 ... 18:12:15 hh:mm:ss

---

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Option *Threshold*
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

## 7.4.72 Min. duration of the undershoot

This parameter is used to define how long the value received at the threshold input must undershoot the threshold before the result of the function *Threshold* is updated.

---

#### Option

00:00:00 ... 18:12:15 hh:mm:ss

---

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Option *Threshold*
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

### 7.4.73 Minimum dwell time between the thresholds

This parameter is used to define how long the value received at the threshold input must be between the thresholds before an evaluation occurs.

Option
<u>00:00:00</u> ... 18:12:15 hh:mm:ss

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#)
  - Parameter [Function of the logic gate](#) \ Option [Threshold](#)
  - Parameter [Monitor range between thresholds](#) \ Option Yes
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

### 7.4.74 Upper threshold

This parameter is used to define the upper threshold. Default values and units depend on the option selected in the [Data point type of Group Object "Threshold input"](#) parameter.

Option	
0 ... <u>50</u> ... 100 %	Upper threshold on selection of DPT 5.001.
0 ... <u>200</u> ... 255	Upper threshold on selection of DPT 5.010.
0 ... <u>40000</u> ... 65535	Upper threshold on selection of DPT 7.001.
-100 ... <u>22</u> ... 250 °C	Upper threshold on selection of DPT 9.001.
0 ... <u>400</u> ... 100,000 lux	Upper threshold on selection of DPT 9.004.
0 ... <u>16000</u> ... 240000 mA	Upper threshold on selection of DPT 9.021.
0 ... <u>16</u> ... 24 A	Upper threshold on selection of DPT 14.019.
0 ... <u>4000</u> ... 10000 W	Upper threshold on selection of DPT 14.056.
0 ... <u>3</u> ... 10 kW	Upper threshold on selection of DPT 9.024.
0 ... <u>100000</u> ... 2147483647 Wh	Upper threshold on selection of DPT 13.010.
0 ... <u>70</u> ... 2147483647 kWh	Upper threshold on selection of DPT 13.013.

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Option [Threshold](#)
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

### 7.4.75 Parameter setting

This parameter is used to define whether the settings for the parameter window are adopted from the template or each parameter is set individually.

#### Note

If the parameterization for the function *Load monitoring* from the template is applied and the thresholds are set as power values in the template, the function *Power calculation* must be enabled in the channel.

Option	
<u>Apply from template</u>	The settings for the parameters are adopted from the template.
<u>Individual</u>	The parameters can be set individually.

#### Prerequisites for visibility

- The parameter appears at various points in the application. The visibility is dependent on the application and the higher-level parameter.

## 7.4.76 Feedback of contact position via Group Object "Status Switch"

This parameter is used to define whether the position of the relay contact is signaled via the Group Object *Status Switch*.

Option	
<i>No</i>	The position of the relay contact is not signaled.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <i>Value of Group Object "Status Switch"</i></li> <li>• <i>Send value of Group Object "Status Switch"</i></li> </ul> The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <i>Status Switch</i></li> </ul>

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Basic settings [Switch Actuator]* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Basic settings [Switch Actuator]*.

## 7.4.77 Switch output reacts to central Switch Group Object

This parameter can be used to define whether the output can be switched via the central Group Object *Switch*.

Option	
<i>No</i>	
<i>Yes</i>	

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Device settings* \ Parameter *Enable central Group Object "Switch"* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Basic settings [Switch Actuator]* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Basic settings [Switch Actuator]*.

## 7.4.78 Switching reaction on active load shedding stage

This parameter is used to define the position of the relay contact if a load shedding stage is activated.

### **i** Note

Whether the relay contact is opened or closed depends on the setting in the parameter [Reaction of output](#).

#### Option

<i>Off</i>	Parameterization as normally closed contact: The relay contact is closed. Parameterization as normally open contact: The relay contact is opened.
<i>On</i>	Parameterization as normally closed contact: The relay contact is opened. Parameterization as normally open contact: The relay contact is closed.

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Device settings](#) \ Parameter [Enable central Group Object "Receive load shedding stage"](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Load shedding](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Load shedding](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load shedding](#).

## 7.4.79 Switching reaction on bus voltage failure

This parameter is used to define the reaction of the relay contact on bus voltage failure.

### **i** Note

The safety functions have priority over all other functions and priorities.  
More information: → [Priorities, Page 230](#).

#### Option

<i>Contact unchanged</i>	The position of the relay contact remains unchanged.
<i>Contact open</i>	The relay contact is open if no safety function is active.
<i>Contact closed</i>	The relay contact is closed if no safety function is active.

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Basic settings \[Switch Actuator\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Basic settings \[Switch Actuator\]](#).

## 7.4.80 Switching reaction on revoke of load shedding stage

This parameter is used to define the position of the relay contact if a load shedding stage is revoked.

### **i** Note

Whether the relay contact is opened or closed depends on the setting in the parameter [Reaction of output](#).

Option	
<i>No reaction</i>	The position of the relay contact remains unchanged.
<i>On</i>	Parameterization as normally closed contact: The relay contact is opened. Parameterization as normally open contact: The relay contact is closed.
<i>Off</i>	Parameterization as normally closed contact: The relay contact is closed. Parameterization as normally open contact: The relay contact is opened.
<i>Refreshed KNX state</i>	The refreshed KNX state is used. → <a href="#">Refreshed KNX state, Page 233</a>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Device settings](#) \ Parameter [Enable central Group Object "Receive load shedding stage"](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Load shedding](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Load shedding](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load shedding](#).

## 7.4.81 Switching reaction on cancellation of block, forced operation and safety priority

This parameter is used to define the relay contact position after cancellation of safety functions (safety priorities, block or forced operation).

### **i** Note

Whether the relay contact is opened or closed depends on the setting in the parameter [Reaction of output](#).

Option	
<i>No reaction</i>	The position of the relay contact remains unchanged.
<i>On</i>	Parameterization as normally closed contact: The relay contact is opened. Parameterization as normally open contact: The relay contact is closed.
<i>Off</i>	Parameterization as normally closed contact: The relay contact is closed. Parameterization as normally open contact: The relay contact is opened.
<i>Refreshed KNX state</i>	The refreshed KNX state is used. → <a href="#">Refreshed KNX state, Page 233</a>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Safety](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Safety](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Safety](#).

## 7.4.82 Switching reaction on safety priority x

This parameter is used to define the position of the relay contact for a safety priority. The relay contact is switched to the defined position and blocked.

### **i** Note

Whether the relay contact is opened or closed depends on the setting in the parameter *Reaction of output*.

More information: → [Safety priority, Page 43](#).

### **i** Note

If a safety priority is active, the operation of the output via Group Objects and i-bus® Tool is blocked. Higher-priority safety functions continue to run → [Function diagram Switch Actuator, Page 42](#).

Option	
<i>No reaction/deactivated</i>	The position of the relay contact remains unchanged. The output does not react to the safety priority.
<i>On</i>	Parameterization as normally closed contact: The relay contact is opened. Parameterization as normally open contact: The relay contact is closed.
<i>Off</i>	Parameterization as normally closed contact: The relay contact is closed. Parameterization as normally open contact: The relay contact is opened.
<i>Unchanged (block)</i>	The relay contact is blocked in the current position.

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Safety* \ Parameter *Enable Group Object "Safety priority x"* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Functions Switch Actuator* \ Parameter *Enable function Safety* \ Option *Yes*
- Parameter window *Safety* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Safety*.



## 7.4.83 Switching reaction on block

This parameter is used to define the position of the relay contact if blocked. The relay contact is switched to the defined position and blocked.

### **i** Note

Whether the relay contact is opened or closed depends on the setting in the parameter *Reaction of output*.

More information: → [Block, Page 43](#).

### **i** Note

If the safety function is active, the operation of the output via Group Objects and i-bus® Tool is blocked.

Higher-priority safety functions continue to run → [Function diagram Switch Actuator, Page 42](#).

Option	
<i>No reaction/deactivated</i>	The function <i>Block</i> is deactivated.
<i>On</i>	Parameterization as normally closed contact: The relay contact is opened. Parameterization as normally open contact: The relay contact is closed.  The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Block</a></li> </ul>
<i>Off</i>	Parameterization as normally closed contact: The relay contact is closed. Parameterization as normally open contact: The relay contact is opened.  The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Block</a></li> </ul>
<i>Unchanged (block)</i>	The relay contact is blocked in the current position.  The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Block</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Safety](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Safety](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Safety](#).

## 7.4.84 Switching reaction on forced operation

This parameter is used to define the position of the relay contact during forced operation. The relay contact is switched to the defined position and blocked.

### **Note**

Whether the relay contact is opened or closed depends on the setting in the parameter *Reaction of output*.

More information: → [forced operation, Page 44](#).

### **Note**

If the safety function is active, the operation of the output via Group Objects and i-bus® Tool is blocked.

Higher-priority safety functions continue to run → [Function diagram Switch Actuator, Page 42](#).

Option	
<i>On</i>	Parameterization as normally closed contact: The relay contact is opened. Parameterization as normally open contact: The relay contact is closed.
<i>Off</i>	Parameterization as normally closed contact: The relay contact is closed. Parameterization as normally open contact: The relay contact is opened.
<i>Unchanged (block)</i>	The relay contact is blocked in the current position.

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Functions Switch Actuator* \ Parameter *Enable function Safety* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Safety*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Forced operation (1 bit / 2 bit) [Switch Actuator]* \ Options *Activated 1 bit – 0 active / Activated 1 bit – 1 active*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Safety*.

## 7.4.85 Threshold operation/overload (III) [group]

This parameter is used to define the threshold between the operating and overload range for the group.

The possible option depends on the selection in the parameter *Measurement unit*.

Option	
<i>20 ... 2000 ... 240000 mA</i>	
<i>10 ... 500 ... 55200 W</i>	

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option *Yes*
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]* \ Parameter *Enable function Load monitoring [group]* \ Option *Yes*
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]* \ Parameter *Type of monitoring [group]* \ Options *General threshold monitoring (A ... F) / Operation monitoring (D)*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

## 7.4.86 Threshold operation/overload (III) [channel]

This parameter is used to define the threshold between the operating and overload range for the channel.

The possible option depends on the selection in the parameter *Measurement unit*.

Option
20 ... <u>1000</u> ... 20000 mA
10 ... <u>250</u> ... 4600 W

#### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Options *General threshold monitoring (A ... F) / Operation monitoring (D)*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.87

### Threshold Standby/Underload (I) [group]

This parameter is used to define the threshold between the standby and underload range for the group.

The possible option depends on the selection in the parameter *Measurement unit*.

Option
20 ... <u>200</u> ... 240000 mA
10 ... <u>60</u> ... 55200 W

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]* \ Parameter *Enable function Load monitoring [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]* \ Parameter *Type of monitoring [group]* \ Options *General threshold monitoring (A ... F) / Standby monitoring (B)*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

## 7.4.88

### Threshold Standby/Underload (I) [channel]

This parameter is used to define the threshold between the standby and underload range for the channel.

The possible option depends on the selection in the parameter *Measurement unit*.

Option
20 ... 100 ... 20000 mA
10 ... 30 ... 4600 W

#### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Options *General threshold monitoring (A ... F) / Standby monitoring (B)*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.89

### Threshold Underload/Operation (II) [group]

This parameter is used to define the threshold between the underload and operating range for the group.

The possible option depends on the selection in the parameter *Measurement unit*.

Option
20 ... 1000 ... 240000 mA
10 ... 240 ... 55200 W

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]* \ Parameter *Enable function Load monitoring [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]* \ Parameter *Type of monitoring [group]* \ Options *General threshold monitoring (A ... F) / Operation monitoring (D)*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

## 7.4.90

### Threshold Underload/Operation (II) [channel]

This parameter is used to define the threshold between the underload and operating range for the channel.

The possible option depends on the selection in the parameter *Measurement unit*.

Option	
<i>20 ... 500 ... 20000 mA</i>	
<i>10 ... 120 ... 4600 W</i>	

#### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option *Yes*
  - Parameter *Enable energy function x* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Options *General threshold monitoring (A ... F) / Operation monitoring (D)*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.91

### Overwrite thresholds on download

This parameter is used to define whether the thresholds are overwritten while downloading the application to the device.

Option	
<i>No</i>	The existing values in the device are not overwritten.
<i>Yes</i>	The existing values in the device are overwritten with the values defined in ETS.

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable Logic/Threshold x-y* \ Option *Yes*
- Parameter window *Logic/Threshold* \ Parameter window *Logic/Threshold x*
  - Parameter *Function of the logic gate* \ Option *Threshold*
  - Parameter *Change thresholds via Group Objects* \ Option *Yes*
- or
- Parameter *Change thresholds via i-bus® Tool* \ Option *Yes*
- The parameter is in the parameter window *Logic/Threshold* \ parameter window *Logic/Threshold x*.

## 7.4.92

### Change thresholds via i-bus® Tool

This parameter is used to define whether thresholds set in ETS can be changed via i-bus® Tool.

#### **i** Note

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

Option	
<i>No</i>	The values cannot be changed via i-bus® Tool.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <i>Overwrite thresholds on download</i></li> </ul>

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable Logic/Threshold x-y* \ Option *Yes*
- Parameter window *Logic/Threshold* \ Parameter window *Logic/Threshold x* \ Parameter *Function of the logic gate* \ Option *Threshold*
- The parameter is in the parameter window *Logic/Threshold* \ parameter window *Logic/Threshold x*.

## 7.4.93 Change thresholds via Group Objects

This parameter is used to define whether the thresholds set in ETS can be changed via the corresponding Group Objects.

Option	
No	The values cannot be changed via Group Objects.
Yes	<p>The values can be changed via Group Objects.</p> <p>Depending on the setting in the parameter <i>Data point type of Group Object "Threshold input"</i>, the following Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <i>Change upper threshold</i> (DPT 13.010)</li> <li>• <i>Change lower threshold</i> (DPT 13.010)</li> <li>• <i>Change upper threshold</i> (DPT 13.013)</li> <li>• <i>Change lower threshold</i> (DPT 13.013)</li> <li>• <i>Change upper threshold</i> (DPT 14.019)</li> <li>• <i>Change lower threshold</i> (DPT 14.019)</li> <li>• <i>Change upper threshold</i> (DPT 14.056)</li> <li>• <i>Change upper threshold</i> (DPT 14.056)</li> <li>• <i>Change upper threshold</i> (DPT 5.001)</li> <li>• <i>Change lower threshold</i> (DPT 5.001)</li> <li>• <i>Change upper threshold</i> (DPT 5.010)</li> <li>• <i>Change lower threshold</i> (DPT 5.010)</li> <li>• <i>Change upper threshold</i> (DPT 7.001)</li> <li>• <i>Change lower threshold</i> (DPT 7.001)</li> <li>• <i>Change upper threshold</i> (DPT 9.001)</li> <li>• <i>Change lower threshold</i> (DPT 9.001)</li> <li>• <i>Change upper threshold</i> (DPT 9.004)</li> <li>• <i>Change lower threshold</i> (DPT 9.004)</li> <li>• <i>Change upper threshold</i> (DPT 9.021)</li> <li>• <i>Change lower threshold</i> (DPT 9.021)</li> <li>• <i>Change upper threshold</i> (DPT 9.024)</li> <li>• <i>Change lower threshold</i> (DPT 9.024)</li> </ul> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <i>Overwrite thresholds on download</i></li> </ul>

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable Logic/Threshold x-y* \ Option Yes
- Parameter window *Logic/Threshold* \ Parameter window *Logic/Threshold x* \ Parameter *Function of the logic gate* \ Option *Threshold*
- The parameter is in the parameter window *Logic/Threshold* \ parameter window *Logic/Threshold x*.

## 7.4.94 Sending and switching delay after bus voltage recovery

This parameter is used to define the sending and switching delay after bus voltage recovery.

More information: → [Sending and switching delay, Page 233](#).

### **i** Note

The device draws energy for switching the outputs via the bus (ABB i-bus® KNX). After application of the bus voltage and after bus voltage recovery, it takes about 10 ... 30 seconds before sufficient energy is available to switch all relays simultaneously.

The first relay is not switched until the device has stored sufficient energy to place all outputs in a defined contact position if there is a bus voltage failure.

### **i** Note

After bus voltage recovery, the device waits for the sending delay time to elapse before sending telegrams on the bus.

### Option

00:00:02... 00:04:15 hh:mm:ss

### Prerequisites for visibility

- The parameter is in the parameter window *Device settings*.

## 7.4.95 Sending cycle

This parameter is used to define the cycle in which the Group Object *In operation* sends a telegram.

---

### Option

00:00:01 ... 00:10:00 ... 18:12:15 hh:mm:ss

---

#### Prerequisites for visibility

- Parameter window *Device settings* \ Parameter *Enable Group Object "In operation"* \ Options *Yes, send value 0 cyclically / Yes, send value 1 cyclically*
- The parameter is in the parameter window *Device settings*.

## 7.4.96 Read safety Group Objects after bus voltage recovery and download

This parameter is used to define whether the following safety Group Objects are read after bus voltage recovery or download:

- *Safety priority x*

### Note

To update the Group Objects after bus voltage recovery and download, the read flags must be set for the corresponding Group Objects of the sending device.

---

### Option

<i>No</i>	The safety Group Objects are not read after bus voltage recovery and download.
<i>Yes</i>	The safety Group Objects send a Value Read to the sending Group Objects after bus voltage recovery and download. If there are alarms present, the parameterized results are run. → <a href="#">Value Read, Page 235</a>

---

#### Prerequisites for visibility

- The parameter is in the parameter window *Safety*.

## 7.4.97 Voltage

This parameter is used to define the voltage value used for the power calculation.

---

### Option

10 ... 230 ... 264 V

---

#### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option *Yes*
  - Parameter *Enable energy function x* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Power calculation [channel]* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Power calculation [channel]* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Power calculation [channel]*.

## 7.4.98 Send Status Load

This parameter is used to define when the status of the load is sent on the bus (ABB i-bus® KNX).

Option	
<i>No, update only</i>	The value is updated but is not sent.
<i>On change</i>	The value is sent if there is a change.
<i>On request</i>	The value is sent on request.
<i>On change or on request</i>	The value is sent on change or on request.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option *Yes*
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#) \ Parameter [Enable function Load monitoring \[group\]](#) \ Option *Yes*
- Parameter window [Energy group X](#) \ Parameter window [Load monitoring \[group\]](#) \ Parameter [Type of monitoring \[group\]](#) \ all options except *Deactivated*
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Load monitoring \[group\]](#).

or

- Parameter windows
  - Parameter [Enable output X](#) \ Option *Yes*
  - Parameter [Enable energy function x](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Load monitoring \[channel\]](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Load monitoring \[channel\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Type of monitoring \[channel\]](#) \ all options except *Deactivated*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load monitoring \[channel\]](#).



## 7.4.99 Status Send load as [group]

This parameter is used to define how the status of the group load is sent.

More information → [Coding, Group Object "Status Load", Page 232](#), → [Telegram values 1-bit Group Objects "Status Load", Page 234](#).

Option	
<i>1 byte</i>	<p>The status of the load is sent via a common Group Object on the bus (ABB i-bus® KNX).</p> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load</a></li> </ul>
<i>Bits</i>	<p>The status of the load is sent via individual Group Objects on the bus (ABB i-bus® KNX). The telegram values for the Group Objects can be defined individually.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Value of Group Object when maximum threshold exceeded [group]</a></li> <li>• <a href="#">Value of Group Object when load in overload [group]</a></li> <li>• <a href="#">Value of Group Object when load in operation [group]</a></li> <li>• <a href="#">Value of Group Object when load in underload [group]</a></li> <li>• <a href="#">Value of Group Object when load in standby [group]</a></li> <li>• <a href="#">Value of Group Object when load On/Off [group]</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load maximum threshold exceeded</a></li> <li>• <a href="#">Status Load in overload</a></li> <li>• <a href="#">Status Load in operation</a></li> <li>• <a href="#">Status Load in underload</a></li> <li>• <a href="#">Status Load in standby</a></li> <li>• <a href="#">Status Load On/Off</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option Yes
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#)
  - Parameter [Enable function Power calculation \[group\]](#) \ Option Yes
  - Parameter [Enable function Load monitoring \[group\]](#) \ Option Yes
- Parameter window [Energy group X](#) \ Parameter window [Load monitoring \[group\]](#) \ Parameter [Type of monitoring \[group\]](#) \ Option *General threshold monitoring (A ... F)*
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Load monitoring \[group\]](#).

## 7.4.100 Status Send load as [channel]

This parameter is used to define how the status of the channel load is sent.

More information → [Coding, Group Object "Status Load", Page 232](#), → [Telegram values 1-bit Group Objects "Status Load", Page 234](#).

Option	
<u>1 byte</u>	<p>The status of the load is sent via a common Group Object on the bus (ABB i-bus® KNX).</p> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load</a></li> </ul>
<u>Bits</u>	<p>The status of the load is sent via individual Group Objects on the bus (ABB i-bus® KNX). The telegram values for the Group Objects can be defined individually.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Value of Group Object when maximum threshold exceeded [channel]</a></li> <li>• <a href="#">Value of Group Object when load in overload [channel]</a></li> <li>• <a href="#">Value of Group Object when load in operation [channel]</a></li> <li>• <a href="#">Value of Group Object when load in underload [channel]</a></li> <li>• <a href="#">Value of Group Object when load in standby [channel]</a></li> <li>• <a href="#">Value of Group Object when load On/Off [channel]</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load maximum threshold exceeded</a></li> <li>• <a href="#">Status Load in overload</a></li> <li>• <a href="#">Status Load in operation</a></li> <li>• <a href="#">Status Load in underload</a></li> <li>• <a href="#">Status Load in standby</a></li> <li>• <a href="#">Status Load On/Off</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Load monitoring \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Load monitoring \[channel\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Type of monitoring \[channel\]](#) \ Option *General threshold monitoring (A ... F)*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load monitoring \[channel\]](#).

## 7.4.101 Overwrite Scenes on download

This parameter is used to define whether the Scenes saved in the device are overwritten during a download.

Option
<u>No</u>
<u>Yes</u>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Scenes \[Switch Actuator\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Scene assignments \[Switch Actuator\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Scene assignments \[Switch Actuator\]](#).

## 7.4.102 Scene number

This parameter is used to define the Scene number (1 ... 64).

---

### Option

1... 64

---

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Scenes \[Switch Actuator\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Scene assignments \[Switch Actuator\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Enable Scene assignment x \[Switch Actuator\]](#) \ Option Yes
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Scene assignments \[Switch Actuator\]](#).

## 7.4.103 Enable Scene assignment x [Switch Actuator]

This parameter is used to create and enable the Scene assignment x (x = 1 ... 16) and assign the output.

---

### Option

No	Scene assignment x is not used.
Yes	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Recall Scene x also via 1-bit Group Object</a></li> <li>• <a href="#">Scene number</a></li> <li>• <a href="#">Delay</a></li> <li>• <a href="#">Reaction on Scene recall</a></li> </ul>

---

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Scenes \[Switch Actuator\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Scene assignments \[Switch Actuator\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Scene assignments \[Switch Actuator\]](#).

## 7.4.104 GATE blocks if Group Object "Connection A" equals

This parameter is used to define the telegram value on the Group Object [Connection A](#) for which the GATE is blocked. If the GATE is blocked, telegrams received on the Group Object [Connection B](#) are ignored.

---

### Option

1  
0

---

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Option *GATE*
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

## 7.4.105 Block staircase lighting after bus voltage recovery

This parameter is used to define whether the function *Staircase lighting* is blocked after bus voltage recovery.

---

### Option

No

Yes

---

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Staircase lighting*
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Block staircase lighting via Group Object](#) \ Option Yes
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.106 Switching reaction of staircase lighting on telegram value 0/1

This parameter is used to define the telegram value with which the output is switched on and prematurely switched off.

### Note

If the function *Permanent on* is active, the function *Staircase lighting* cannot be switched off prematurely

---

### Option

*On with "1" and off with "0"* The output is switched on with the telegram value 1 and off with the telegram value 0.

*On with "1" and no action for "0"* The output is switched on with the telegram value 1. Premature switch-off is not possible.

*On with "1" or with "0", no switch off* The output is switched on independently of the telegram value. Premature switch-off is not possible.

---

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Staircase lighting*
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.107 Block staircase lighting via Group Object

This parameter is used to define whether the function *Staircase lighting* can be blocked via Group Object. If the function *Staircase lighting* is blocked, the switch-on command is forwarded without time function in the function chain. The output reacts according to its parameterization.

Option	
<u>No</u>	The function <i>Staircase lighting</i> cannot be blocked via a Group Object.
<u>Yes</u>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Block staircase lighting after bus voltage recovery</a></li> </ul> The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Block staircase lighting</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Staircase lighting](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.108 Staircase lighting time

This parameter is used to define how long the output remains switched on after an On telegram.

Option	
00:00:00 ... 00:05:00 ... 18:12:15 hh:mm:ss	

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Staircase lighting](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.109 Overwrite staircase lighting time on download

This parameter is used to define whether the staircase lighting time is overwritten while downloading the application to the device.

Option	
<u>No</u>	The existing values in the device are not overwritten.
<u>Yes</u>	The existing values in the device are overwritten with the values defined in ETS.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Staircase lighting](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#)
  - Parameter [Parameter setting](#) \ Option [Individual](#)
  - Parameter [Change staircase lighting time via Group Object](#) \ Option [Yes](#)
  - or
  - Parameter [Change staircase lighting time via i-bus® Tool](#) \ Option [Yes](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.110 Restart staircase lighting time after permanent on

This parameter is used to define how the staircase lighting time reacts after the function *Permanent on* is restarted.

Option	
<i>No</i>	The output is switched off after the function <i>Permanent on</i> is ended.
<i>Yes</i>	The staircase lighting time is restarted and the output remains switched on after the function <i>Permanent on</i> is ended.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Staircase lighting*
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.111 Staircase lighting time can be started again

This parameter is used to define whether the staircase lighting time is extended by further On telegrams.

Option	
<i>No</i>	Further On telegrams will be ignored. The staircase lighting time will not be extended.
<i>Yes</i>	The staircase lighting time will be extended by additional On telegrams. The number of extensions can be set in the parameter <a href="#">Staircase lighting time extendable (pumping)</a> . More information: → <a href="#">Function Staircase lighting, Page 60</a> .  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Staircase lighting time extendable (pumping)</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Staircase lighting*
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.112 Change staircase lighting time via i-bus® Tool

This parameter is used to define whether the staircase lighting time set in ETS can be changed via i-bus® Tool.

### **i** Note

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

### Option

<i>No</i>	The staircase lighting time can be defined only in ETS.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Overwrite staircase lighting time on download</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Staircase lighting*
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.113 Change staircase lighting time via Group Object

This parameter is used to define whether the staircase lighting time set in ETS can be changed via the Group Object [Staircase lighting time](#).

### **i** Note

The changed staircase lighting time is used only the next time the function [Staircase lighting](#) is retrieved.

### Option

<i>No</i>	The staircase lighting time can be defined only in ETS.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Overwrite staircase lighting time on download</a></li> </ul> The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Staircase lighting time</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Staircase lighting*
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.114 Staircase lighting time extendable (pumping)

This parameter is used to define how often the staircase lighting time can be extended.

Option	
<i>No, can only be started again</i>	The staircase lighting time can be restarted any number of times by further On telegrams.
<i>Up to max. 2x staircase lighting time</i>	The staircase lighting time can be extended up to twice the duration. Extension occurs when further On telegrams are received after switching on.
<i>Up to max. 3x staircase lighting time</i>	The staircase lighting time can be extended up to three times the duration. Extension occurs when further On telegrams are received after switching on.
<i>Up to max. 4x staircase lighting time</i>	The staircase lighting time can be extended up to four times the duration. Extension occurs when further On telegrams are received after switching on.
<i>Up to max. 5x staircase lighting time</i>	The staircase lighting time can be extended up to five times the duration. Extension occurs when further On telegrams are received after switching on.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Staircase lighting](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#)
  - Parameter [Parameter setting](#) \ Option [Individual](#)
  - Parameter [Staircase lighting time can be started again](#) \ Option [Yes](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.115 Type of monitoring [group]

This parameter is used to define whether the load assigned to the group is monitored. Depending on the selection, different thresholds or the status Load On/Off is monitored.



Option	
<i>Deactivated</i>	Load monitoring is deactivated.
<i>General threshold monitoring (A ... F)</i>	<p>All thresholds are monitored.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Measurement unit</a></li> <li>• <a href="#">Maximum threshold (IV) [group]</a></li> <li>• <a href="#">Threshold operation/overload (III) [group]</a></li> <li>• <a href="#">Threshold Underload/Operation (II) [group]</a></li> <li>• <a href="#">Threshold Standby/Underload (I) [group]</a></li> <li>• <a href="#">Change load thresholds via Group Objects [group]</a></li> <li>• <a href="#">Change load thresholds via i-bus® Tool</a></li> <li>• <a href="#">Status Send load as [group]</a></li> <li>• <a href="#">Send Status Load</a></li> </ul>
<i>Maximum threshold monitoring (F)</i>	<p>It is monitored whether the load assigned to the group has exceeded the maximum threshold.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Measurement unit</a></li> <li>• <a href="#">Maximum threshold (IV) [group]</a></li> <li>• <a href="#">Change load thresholds via Group Objects [group]</a></li> <li>• <a href="#">Change load thresholds via i-bus® Tool</a></li> <li>• <a href="#">Send Status Load</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load maximum threshold exceeded</a></li> </ul>
<i>Operation monitoring (D)</i>	<p>It is monitored whether the load assigned to the group is in the operating range.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Measurement unit</a></li> <li>• <a href="#">Threshold operation/overload (III) [group]</a></li> <li>• <a href="#">Change load thresholds via Group Objects [group]</a></li> <li>• <a href="#">Change load thresholds via i-bus® Tool</a></li> <li>• <a href="#">Send Status Load</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load in operation</a></li> </ul>
<i>Standby monitoring (B)</i>	<p>It is monitored whether the load assigned to the group is in the standby range.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Measurement unit</a></li> <li>• <a href="#">Threshold Standby/Underload (I) [group]</a></li> <li>• <a href="#">Change load thresholds via Group Objects [group]</a></li> <li>• <a href="#">Change load thresholds via i-bus® Tool</a></li> <li>• <a href="#">Send Status Load</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load in standby</a></li> </ul>
<i>On/Off status monitoring (A)</i>	<p>The status (On/Off) of the load assigned to the group is monitored.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Send Status Load</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load On/Off</a></li> </ul>

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option [Yes](#)
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#) \ Parameter [Enable function Load monitoring \[group\]](#) \ Option [Yes](#)
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Load monitoring \[group\]](#).

### 7.4.116 Type of monitoring [channel]

This parameter is used to define whether the load connected to the output is monitored. Depending on the selection, different thresholds or the status Load On/Off is monitored.

Option	
<i>Deactivated</i>	Load monitoring is deactivated.
<i>General threshold monitoring (A ... F)</i>	<p>All thresholds are monitored.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Measurement unit</a></li> <li>• <a href="#">Maximum threshold (IV) [channel]</a></li> <li>• <a href="#">Threshold operation/overload (III) [channel]</a></li> <li>• <a href="#">Threshold Underload/Operation (II) [channel]</a></li> <li>• <a href="#">Threshold Standby/Underload (I) [channel]</a></li> <li>• <a href="#">Change load thresholds via Group Objects [channel]</a></li> <li>• <a href="#">Change load thresholds via i-bus® Tool</a></li> <li>• <a href="#">Status Send load as [channel]</a></li> <li>• <a href="#">Send Status Load</a></li> </ul>
<i>Maximum threshold monitoring (F)</i>	<p>It is monitored whether the load connected has exceeded the maximum threshold.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Measurement unit</a></li> <li>• <a href="#">Maximum threshold (IV) [channel]</a></li> <li>• <a href="#">Change load thresholds via Group Objects [channel]</a></li> <li>• <a href="#">Change load thresholds via i-bus® Tool</a></li> <li>• <a href="#">Send Status Load</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load maximum threshold exceeded</a></li> </ul>
<i>Operation monitoring (D)</i>	<p>It is monitored whether the load connected is in the operating range.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Measurement unit</a></li> <li>• <a href="#">Threshold operation/overload (III) [channel]</a></li> <li>• <a href="#">Change load thresholds via Group Objects [channel]</a></li> <li>• <a href="#">Change load thresholds via i-bus® Tool</a></li> <li>• <a href="#">Send Status Load</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load in operation</a></li> </ul>
<i>Standby monitoring (B)</i>	<p>It is monitored whether the load connected is in the standby range.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Measurement unit</a></li> <li>• <a href="#">Threshold Standby/Underload (I) [channel]</a></li> <li>• <a href="#">Change load thresholds via Group Objects [channel]</a></li> <li>• <a href="#">Change load thresholds via i-bus® Tool</a></li> <li>• <a href="#">Send Status Load</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load in standby</a></li> </ul>
<i>On/Off status monitoring (A)</i>	<p>The status (On/Off) of the load connected is monitored.</p> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li>• <a href="#">Send Status Load</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Status Load On/Off</a></li> </ul>

#### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Load monitoring \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Load monitoring \[channel\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load monitoring \[channel\]](#).

### 7.4.117

#### Lower threshold

This parameter is used to define the lower threshold. Default values and units depend on the option selected in the [Data point type of Group Object "Threshold input"](#) parameter.

Option	
0 ... <u>20</u> ... 100 %	Lower threshold on selection of DPT 5.001.
0 ... <u>100</u> ... 255	Lower threshold on selection of DPT 5.010.
0 ... <u>10,000</u> ... 65535	Lower threshold on selection of DPT 7.001.
-100 ... <u>18</u> ... 250 °C	Lower threshold on selection of DPT 9.001.
0 ... <u>100</u> ... 100,000 lux	Lower threshold on selection of DPT 9.004.
0 ... <u>1000</u> ... 240000 mA	Lower threshold on selection of DPT 9.021.
0 ... <u>1</u> ... 24 A	Lower threshold on selection of DPT 14.019.
0 ... <u>40</u> ... 10000 W	Lower threshold on selection of DPT 14.056.
0 ... <u>1</u> ... 10 kW	Lower threshold on selection of DPT 9.024.
0 ... <u>1000</u> ... 2147483647 Wh	Lower threshold on selection of DPT 13.010.
0 ... <u>25</u> ... 2147483647 kWh	Lower threshold on selection of DPT 13.013.

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#) \ Parameter [Function of the logic gate](#) \ Option [Threshold](#)
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

## 7.4.118

### Reaction on result "0" [Switch Actuator]

This parameter is used to define the reaction of the output if the result of the Logic or Threshold function is 0.

The result does not necessarily lead to the position of the relay contact changing.

#### Note

Whether the relay contact is opened or closed depends on the following factors:

- Parameterization of the output → [Function diagram Switch Actuator, Page 42](#)
- Priorities → [Priorities, Page 230](#)
- Setting in the parameter [Reaction of output](#)

Option	
<i>No reaction</i>	The position of the relay contact remains unchanged.
<i>On</i>	This acts like an On telegram on the Group Object <a href="#">Switch</a> .
<i>Off</i>	This acts like an Off telegram on the Group Object <a href="#">Switch</a> .

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Output reacts to](#) \ Option [Logic/Threshold x](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Functions Switch Actuator](#).

## 7.4.119 Reaction on result "1" [Switch Actuator]

This parameter is used to define the reaction of the output if the result of the Logic or Threshold function is 1.

The result does not necessarily lead to the position of the relay contact changing.

### **i** Note

Whether the relay contact is opened or closed depends on the following factors:

- Parameterization of the output → [Function diagram Switch Actuator, Page 42](#)
- Priorities → [Priorities, Page 230](#)
- Setting in the parameter [Reaction of output](#)

### Option

<i>No reaction</i>	The position of the relay contact remains unchanged.
<i>On</i>	This acts like an On telegram on the Group Object <a href="#">Switch</a> .
<i>Off</i>	This acts like an Off telegram on the Group Object <a href="#">Switch</a> .

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Output reacts to](#) \ Option *Logic/Threshold x*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Functions Switch Actuator](#).

## 7.4.120 Reaction on Scene recall

This parameter is used to define the reaction of the output on Scene recall.

The Scene recall does not necessarily lead to the position of the relay contact changing.

### **i** Note

Whether the relay contact is opened or closed depends on the following factors:

- Parameterization of the output → [Function diagram Switch Actuator, Page 42](#)
- Priorities → [Priorities, Page 230](#)
- Setting in the parameter [Reaction of output](#)

### Option

<i>On</i>	This acts like an On telegram on the Group Object <a href="#">Switch</a> .
<i>Off</i>	This acts like an Off telegram on the Group Object <a href="#">Switch</a> .

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Scenes \[Switch Actuator\]](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Scene assignments \[Switch Actuator\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Enable Scene assignment x \[Switch Actuator\]](#) \ Option *Yes*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Scene assignments \[Switch Actuator\]](#).

## 7.4.121 Reaction of output

This parameter is used to define how the output reacts on receipt of a switching telegram on the Group Object *Switch*.

Option	
<i>NC contact</i>	The relay contact is opened with an On telegram (1) and closed with an Off telegram (0).
<i>NO contact</i>	The relay contact is closed with an On telegram (1) and opened with an Off telegram (0).

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Basic settings [Switch Actuator]* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Basic settings [Switch Actuator]*.

## 7.4.122 Reaction after flashing

This parameter is used to define the position of the relay contact after the end of the function *Flashing*.

Ending the function does not necessarily lead to the position of the relay contact changing.

### **i** Note

Whether the relay contact is opened or closed depends on the following factors:

- Parameterization of the output → [Function diagram Switch Actuator, Page 42](#)
- Priorities → [Priorities, Page 230](#)
- Setting in the parameter *Reaction of output*

Option	
<i>Off</i>	This acts like an Off telegram on the Group Object <i>Switch</i> .
<i>On</i>	This acts like an On telegram on the Group Object <i>Switch</i> .
<i>Refreshed KNX state</i>	The refreshed KNX state is used. → <a href="#">Refreshed KNX state, Page 233</a>

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Functions Switch Actuator* \ Parameter *Enable function Time* \ Option *Flashing*
- Parameter window *Switch Actuator X* \ Parameter window *Flashing* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Flashing*.

## 7.4.123 Reaction after bus voltage recovery [Switch Actuator]

This parameter is used to define the reaction after bus voltage recovery.

**CAUTION**

If the function *Logic* or the function *Threshold* is connected to the output, double switching behavior may occur after bus voltage recovery and after ETS download.

- ▶ Select option *Calculate contact position*.

**Note**

Writing to the Group Object *Switch* does not necessarily result in a change to the position of the relay contact due to the priorities and the parameterization of the output.

The value of the Group Object *Switch* can be read correctly only after a new value has been received via the bus (ABB i-bus® KNX).

**Note**

If the relays are switched manually using the toggle switches, KNX operation is overridden. Manually set contact positions are not detected by the device and are not set again automatically after bus voltage recovery or after ETS download.

**Note**

The relay contact position must be known to the device to ensure the following functions:

- Sending the status via the Group Object *Status Switch*
- Value calculation of the functions *Current measurement* and *Power calculation*

The relay contact position is known to the device if one of the following conditions is met after bus voltage recovery or ETS download.

- Reception of a switch telegram via the bus (ABB i-bus® KNX)
- Specification of the value on the Group Object *Switch* with corresponding parametrization
- Specification of the contact position by one of the safety functions or by the function *Load shedding*

**Option**

<i>Write Group Object "Switch" with 0</i>	The value 0 is written to the Group Object.
<i>Write Group Object "Switch" with 1</i>	The value 1 is written to the Group Object.
<u><i>Calculate contact position</i></u>	<p>The position of the relay contact is calculated in the following situations:</p> <ul style="list-style-type: none"> <li>• If the function <i>Staircase lighting</i> was active before bus voltage failure or download, the function is activated, the relay contact switched to the corresponding position and the staircase lighting time restarted.</li> <li>• If a safety function is active, the relay contact is switched to the position specified with the highest priority in the safety function → <a href="#">Switch Actuator safety functions, Page 43</a>.</li> <li>• When a load shedding stage is active, the relay contact is switched to the defined position → Parameter <a href="#">Switching reaction on active load shedding stage</a>.</li> <li>• If the position of the relay contact has been changed by mechanical action or switching via a toggle switch, the last contact position known to the device is set.</li> </ul> <p>In all other cases, the current contact position remains unchanged and the contact position is unknown to the device.</p>
<i>Switching only if safety function active</i>	<p>If a safety function is active, the relay contact is switched to the position specified with the highest priority in the safety function → <a href="#">Switch Actuator safety functions, Page 43</a>.</p> <p>If no safety function is active, the current contact position remains unchanged and the relay contact position is unknown to the device.</p>

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Basic settings \[Switch Actuator\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Basic settings \[Switch Actuator\]](#).

**7.4.124****Reaction after ETS download [Switch Actuator]**

This parameter is used to define the reaction after ETS download.



**CAUTION**

If the function *Logic* or the function *Threshold* is connected to the output, double switching behavior may occur after bus voltage recovery and after ETS download.

- ▶ Select option *Calculate contact position*.

**Note**

Writing to the Group Object *Switch* does not necessarily result in a change to the position of the relay contact due to the priorities and the parameterization of the output.

The value of the Group Object *Switch* can be read correctly only after a new value has been received via the bus (ABB i-bus® KNX).

**Note**

If the relays are switched manually using the toggle switches, KNX operation is overridden. Manually set contact positions are not detected by the device and are not set again automatically after bus voltage recovery or after ETS download.

**Note**

The relay contact position must be known to the device to ensure the following functions:

- Sending the status via the Group Object *Status Switch*
- Value calculation of the functions *Current measurement* and *Power calculation*

The relay contact position is known to the device if one of the following conditions is met after bus voltage recovery or ETS download.

- Reception of a switch telegram via the bus (ABB i-bus® KNX)
- Specification of the value on the Group Object *Switch* with corresponding parametrization
- Specification of the contact position by one of the safety functions or by the function *Load shedding*

Option	
<i>Write Group Object "Switch" with 0</i>	The value 0 is written to the Group Object.
<i>Write Group Object "Switch" with 1</i>	The value 1 is written to the Group Object.
<i>Calculate contact position</i>	<p>The position of the relay contact is calculated in the following situations:</p> <ul style="list-style-type: none"> <li>• If the function <i>Staircase lighting</i> was active before bus voltage failure or download, the function is activated, the relay contact switched to the corresponding position and the staircase lighting time restarted.</li> <li>• If a safety function is active, the relay contact is switched to the position specified with the highest priority in the safety function → <a href="#">Switch Actuator safety functions, Page 43</a>.</li> <li>• When a load shedding stage is active, the relay contact is switched to the defined position → Parameter <a href="#">Switching reaction on active load shedding stage</a>.</li> <li>• If the position of the relay contact has been changed by mechanical action or switching via a toggle switch, the last contact position known to the device is set.</li> </ul> <p>In all other cases, the current contact position remains unchanged and the contact position is unknown to the device.</p>
<u><i>Switching only if safety function active</i></u>	<p>If a safety function is active, the relay contact is switched to the position specified with the highest priority in the safety function → <a href="#">Switch Actuator safety functions, Page 43</a>.</p> <p>If no safety function is active, the current contact position remains unchanged and the relay contact position is unknown to the device.</p>

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Basic settings \[Switch Actuator\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Basic settings \[Switch Actuator\]](#).

## 7.4.125 Delay

This parameter is used to define the delay with which the Scene is run after a Scene recall.

**Note**

If a delay is used for Scene recall (→ parameter [Delay](#)), the output does not react to the functions *Staircase lighting* and *Delay for switching on and off* → [Function diagram Switch Actuator, Page 42](#).

**Note**

The delay can be blocked with the Group Object *Block delay for switching on and off*.

---

**Option**

*00:00:00 ... 12:00:00 hh:mm:ss*

---

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Scenes \[Switch Actuator\]](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Scene assignments \[Switch Actuator\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Enable Scene assignment x \[Switch Actuator\]](#) \ Option *Yes*
- The parameter is in the parameter window [Scene assignments \[Switch Actuator\]](#).

## 7.4.126

### Warning before switching off the staircase lighting

This parameter is used to define whether a warning is provided before switching off the output.

More information: → [Function Staircase lighting, Page 60](#).

---

**Option**

<i>No</i>	The output is switched off after the staircase lighting time has elapsed.
<i>Via Group Object</i>	After the staircase lighting time has elapsed, a warning is provided via Group Object.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Warning time</a></li> </ul> The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Warning staircase lighting</a></li> </ul>
<i>Short switching off</i>	The output is switched off briefly after the staircase lighting time has elapsed.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Number of Off/On changes</a></li> <li>• <a href="#">Warning time</a></li> </ul>
<i>Via Group Object and short switching off</i>	After the staircase lighting time has elapsed, a warning is provided via Group Object and the output switched off briefly.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Number of Off/On changes</a></li> <li>• <a href="#">Warning time</a></li> </ul> The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Warning staircase lighting</a></li> </ul>

---

**Prerequisites for visibility**

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Staircase lighting*
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).



## 7.4.127 Warning time

This parameter is used to define the duration of the warning time. The warning time starts after the staircase lighting time has elapsed.

More information: → [Function Staircase lighting, Page 60](#).

---

### Option

00:00:10 ... 00:00:45 ... 18:12:15 hh:mm:ss

---

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option *Staircase lighting*
- Parameter window [Switch Actuator X](#) \ Parameter window [Staircase lighting](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Warning before switching off the staircase lighting](#) \ all options except *No*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Staircase lighting](#).

## 7.4.128 Send value of Group Object "Contact closed and no current flows"

This parameter is used to define when the value of the following Group Object is sent on the bus (ABB i-bus® KNX):

- [Contact closed and no current flows](#)

### Note

Sending on request can be triggered by the reception of a telegram with the value 0 or 1 on Group Object [Request status values](#).

---

### Option

<i>No, update only</i>	The value is updated but is not sent.
<i>On change</i>	The value is sent if there is a change.
<i>On request</i>	The value is sent on request.
<i>On change or on request</i>	The value is sent on change or on request.

---

#### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option *Yes*
  - Parameter [Enable energy function x](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Contact supervision](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Contact supervision](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Contact supervision](#).

## 7.4.129 Send value of Group Object "Contact open and current flows"

This parameter is used to define when the value of the following Group Object is sent on the bus (ABB i-bus® KNX):

- [Contact open and current flows](#)

### **i** Note

Sending on request can be triggered by the reception of a telegram with the value 0 or 1 on Group Object [Request status values](#).

Option	
<i>No, update only</i>	The value is updated but is not sent.
<i>On change</i>	The value is sent if there is a change.
<i>On request</i>	The value is sent on request.
<i>On change or on request</i>	The value is sent on change or on request.

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Contact supervision](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Contact supervision](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Contact supervision](#).

## 7.4.130 Send value of Group Object "Status Result"

This parameter is used to define when the value of the following Group Object is sent on the bus (ABB i-bus® KNX):

- [Status Result \[Logic\]](#)

### **i** Note

Sending on request can be triggered by the reception of a telegram with the value 0 or 1 on Group Object [Request status values](#).

Option	
<i>No, update only</i>	The value is updated but is not sent.
<i>On change</i>	The value is sent if there is a change.
<i>On request</i>	The value is sent on request.
<i>On change or on request</i>	The value is sent on change or on request.
<i>After receiving input value</i>	The value is sent on the input Group Objects after reception of a telegram. The result is recalculated due to the reception of a telegram on the input Group Objects, the result does not necessarily need to change.
<i>After receiving input value or on request</i>	The value is sent on the input Group Objects after reception of a telegram or on request. The result is recalculated due to the reception of a telegram on the input Group Objects, the result does not necessarily need to change.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option Yes
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#)
  - Parameter [Function of the logic gate](#) \ Options AND / OR / Exclusive OR / GATE / 1 bit Inverter
  - Parameter [Enable Group Object "Status Result"](#) \ Option Yes
- The parameter is in the parameter window [Logic/Threshold](#) \ parameter window [Logic/Threshold x](#).

### 7.4.131 Send value of Group Object "Status Total meter energy consumption"

This parameter is used to define when the values of the following Group Objects are sent on the bus (ABB i-bus® KNX):

- [Status Total meter energy consumption](#) (Channel, DPT 13.001)
- [Status Total meter energy consumption](#) (Channel, DPT 13.013)
- [Status Total meter energy consumption](#) (Group, DPT 13.001)
- [Status Total meter energy consumption](#) (Group, DPT 13.013)

**Note**

If the value *On change*, *On change or cyclically*, *On change or on request* or *On change, on request or cyclically* is sent, the send behavior can be defined more accurately in the following parameters:

- [Evaluate change of value as](#)
- [Value is sent from a change of](#)

**Note**

Sending on request can be triggered by the reception of a telegram with the value 0 or 1 on Group Object [Request status values](#).

Option	
<i>No, update only</i>	The value is updated but is not sent.
<i>On change</i>	The value is sent if there is a change.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> </ul>
<i>Cyclically</i>	The value is sent cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Send cyclically every</a></li> </ul>
<i>On change or cyclically</i>	The value is sent on change or cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> <li>• <a href="#">Send cyclically every</a></li> </ul>
<i>On request</i>	The value is sent on request.
<i>On change or on request</i>	The value is sent on change or on request.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> </ul>
<i>On request or cyclically</i>	The value is sent on request or cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Send cyclically every</a></li> </ul>
<i>On change, on request or cyclically</i>	The value is sent on change, on request or cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> <li>• <a href="#">Send cyclically every</a></li> </ul>

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option Yes
  - Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#)
    - Parameter [Enable function Power calculation \[group\]](#) \ Option Yes
    - Parameter [Enable function Energy consumption \[group\]](#) \ Option Yes
  - Parameter window [Energy group X](#) \ Parameter window [Energy consumption \[group\]](#) \ Parameter [Activate total meter \[group\]](#) \ Option Yes
  - The parameter is in the parameter window [Energy group X](#) \ parameter window [Energy consumption \[group\]](#).
- or
- Parameter window [Configuration](#)
    - Parameter [Enable output X](#) \ Option Yes
    - Parameter [Enable energy function x](#) \ Option Yes
  - Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
    - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
    - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
  - Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#)
    - Parameter [Parameter setting](#) \ Option *Individual*
    - Parameter [Activate total meter \[channel\]](#) \ Option Yes
  - The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Energy consumption \[channel\]](#).

## 7.4.132 Send value of Group Object "Status Load shedding"

This parameter is used to define when the value of the following Group Object is sent on the bus (ABB i-bus® KNX):

- [Status Load shedding](#)

### **i** Note

Sending on request can be triggered by the reception of a telegram with the value 0 or 1 on Group Object [Request status values](#).

Option	
<i>No, update only</i>	The value is updated but is not sent.
<i>On change</i>	The value is sent if there is a change.
<i>On request</i>	The value is sent on request.
<i>On change or on request</i>	The value is sent on change or on request.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Device settings](#) \ Parameter [Enable central Group Object "Receive load shedding stage"](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Load shedding](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Load shedding](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Enable group object "Status Load shedding"](#) \ Option *Yes*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Load shedding](#).

## 7.4.133 Send value of Group Object "Status Power"

This parameter is used to define when the values of the following Group Objects are sent on the bus (ABB i-bus® KNX):

- [Status Power](#) (Channel, DPT 9.024)
- [Status Power](#) (Channel, DPT 14.056)
- [Status Power](#) (Group, DPT 9.024)
- [Status Power](#) (Group, DPT 14.056)

### **i** Note

If the value *On change*, *On change or cyclically*, *On change or on request* or *On change, on request or cyclically* is sent, the send behavior can be defined more accurately in the following parameters:

- [Evaluate change of value as](#)
- [Value is sent from a change of](#)

### **i** Note

Sending on request can be triggered by the reception of a telegram with the value 0 or 1 on Group Object [Request status values](#).

Option	
<i>No, update only</i>	The value is updated but is not sent.
<i>On change</i>	The value is sent if there is a change.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> </ul>
<i>Cyclically</i>	The value is sent cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Send cyclically every</a></li> </ul>
<i>On change or cyclically</i>	The value is sent on change or cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> <li>• <a href="#">Send cyclically every</a></li> </ul>
<i>On request</i>	The value is sent on request.
<i>On change or on request</i>	The value is sent on change or on request.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> </ul>
<i>On request or cyclically</i>	The value is sent on request or cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Send cyclically every</a></li> </ul>
<i>On change, on request or cyclically</i>	The value is sent on change, on request or cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> <li>• <a href="#">Send cyclically every</a></li> </ul>

#### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option [Yes](#)
  - Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#) \ Parameter [Enable function Power calculation \[group\]](#) \ Option [Yes](#)
  - The parameter is in the parameter window [Energy group X](#) \ parameter window [Power calculation \[group\]](#).
- or
- Parameter window [Configuration](#)
    - Parameter [Enable output X](#) \ Option [Yes](#)
    - Parameter [Enable energy function x](#) \ Option [Yes](#)
  - Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Power calculation \[channel\]](#) \ Option [Yes](#)
  - Parameter window [Switch Actuator X](#) \ Parameter window [Power calculation \[channel\]](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
  - The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Power calculation \[channel\]](#).

## 7.4.134 Value of Group Object "Status Switch"

This parameter is used to define the value adopted by the Group Object *Status Switch* depending on the position of the relay contact.

Option	
<i>1: closed, 0: open</i>	The Group Object has the value 1 when the relay contact is closed. The Group Object has the value 0 when the relay contact is open.
<i>0: closed, 1: open</i>	The Group Object has the value 0 when the relay contact is closed. The Group Object has the value 1 when the relay contact is open.

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Basic settings [Switch Actuator]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Feedback of contact position via Group Object "Status Switch"* \ Option *Yes*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Basic settings [Switch Actuator]*.

## 7.4.135 Send value of Group Object "Status Switch"

This parameter is used to define when the value of the following Group Object is sent on the bus (ABB i-bus® KNX):

- *Status Switch*

### **i** Note

If one of the following options is selected, the value of the Group Object is sent for each switching operation:

- *On change*
- *On change or on request*

### **i** Note

Sending on request can be triggered by the reception of a telegram with the value 0 or 1 on Group Object *Request status values*.

Option	
<i>No, update only</i>	The value is updated but is not sent.
<i>On change</i>	The value is sent if there is a change.
<i>On request</i>	The value is sent on request.
<i>On change or on request</i>	The value is sent on change or on request.

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Basic settings [Switch Actuator]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Feedback of contact position via Group Object "Status Switch"* \ Option *Yes*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Basic settings [Switch Actuator]*.

## 7.4.136 Send value of Group Object "Status Current"

This parameter is used to define when the values of the following Group Objects are sent on the bus (ABB i-bus® KNX):

- [Status Current](#) (Channel, DPT 9.021)
- [Status Current](#) (Channel, DPT 14.019)
- [Status Current](#) (Group, DPT 9.021)
- [Status Current](#) (Group, DPT 14.019)

### **i** Note

If the value *On change*, *On change or cyclically*, *On change or on request* or *On change, on request or cyclically* is sent, the send behavior can be defined more accurately in the following parameters:

- [Evaluate change of value as](#)
- [Value is sent from a change of](#)

### **i** Note

Sending on request can be triggered by the reception of a telegram with the value 0 or 1 on Group Object [Request status values](#).

Option	
<i>No, update only</i>	The value is updated but is not sent.
<i>On change</i>	The value is sent if there is a change.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> </ul>
<i>Cyclically</i>	The value is sent cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Send cyclically every</a></li> </ul>
<i>On change or cyclically</i>	The value is sent on change or cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> <li>• <a href="#">Send cyclically every</a></li> </ul>
<i>On request</i>	The value is sent on request.
<i>On change or on request</i>	The value is sent on change or on request.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> </ul>
<i>On request or cyclically</i>	The value is sent on request or cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Send cyclically every</a></li> </ul>
<i>On change, on request or cyclically</i>	The value is sent on change, on request or cyclically. The cycle time can be set.  The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Evaluate change of value as</a></li> <li>• <a href="#">Value is sent from a change of</a></li> <li>• <a href="#">Send cyclically every</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option *Yes*
  - The parameter is in the parameter window [Energy group X](#) \ parameter window [Current measurement \[group\]](#).
- or
- Parameter window [Configuration](#)
    - Parameter [Enable output X](#) \ Option *Yes*
    - Parameter [Enable energy function x](#) \ Option *Yes*
  - Parameter window [Switch Actuator X](#) \ Parameter window [Current measurement \[channel\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
  - The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Current measurement \[channel\]](#).



### 7.4.137 Value of Group Object "Connection A" after bus voltage recovery

This parameter is used to define the value that is written to the Group Object *Connection A* after bus voltage recovery.

Option	
1	The value 1 is written to the Group Object. Writing the Group Object does not affect the result of the function <i>Logic</i> .
0	The value 0 is written to the Group Object. Writing the Group Object does not affect the result of the function <i>Logic</i> .

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable Logic/Threshold x-y* \ Option Yes
- Parameter window *Logic/Threshold* \ Parameter window *Logic/Threshold x* \ Parameter *Function of the logic gate* \ Options *AND / OR / Exclusive OR / GATE / 1 bit Inverter*
- The parameter is in the parameter window *Logic/Threshold* \ parameter window *Logic/Threshold x*.

### 7.4.138 Value of Group Object "Connection B" after bus voltage recovery

This parameter is used to define the value that is written to the Group Object *Connection B* after bus voltage recovery.

Option	
1	The value 1 is written to the Group Object. Writing the Group Object does not affect the result of the function <i>Logic</i> .
0	The value 0 is written to the Group Object. Writing the Group Object does not affect the result of the function <i>Logic</i> .

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable Logic/Threshold x-y* \ Option Yes
- Parameter window *Logic/Threshold* \ Parameter window *Logic/Threshold x* \ Parameter *Function of the logic gate* \ Options *AND / OR / Exclusive OR / GATE*
- The parameter is in the parameter window *Logic/Threshold* \ parameter window *Logic/Threshold x*.

### 7.4.139 Value of Group Object when contact closed and no current flows

This parameter is used to define the telegram value that the Group Object *Contact closed and no current flows* sends if the relay contact is closed and no current is flowing.

More information: → [Function Contact supervision, Page 58](#).

Option	
0	
1	

#### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Contact supervision* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Contact supervision* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Contact supervision*.

## 7.4.140 Value of Group Object when contact open and current flows

This parameter is used to define the telegram value that the Group Object *Contact open and current flows* sends if the relay contact is open and current is flowing.

More information: → [Function Contact supervision, Page 58](#).

---

### Option

0

1

---

### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Contact supervision* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Contact supervision* \ Parameter *Parameter setting* \ Option *Individual*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Contact supervision*.

## 7.4.141 Value of Group Object when load On/Off [group]

This parameter is used to define the telegram value that the Group Object *Status Load On/Off* for the group sends if the load assigned is switched On/Off.

---

### Option

0/1

0 = Load switched off, 1 = Load switched on

1/0

1 = Load switched off, 0 = Load switched on

---

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]*
  - Parameter *Enable function Power calculation [group]* \ Option Yes
  - Parameter *Enable function Load monitoring [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]*
  - Parameter *Type of monitoring [group]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [group]* \ Option *Bits*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

## 7.4.142 Value of Group Object when load On/Off [channel]

This parameter is used to define the telegram value that the Group Object *Status Load On/Off* for the channel sends if the load connected is switched On/Off.

Option	
<i>0/1</i>	0 = Load switched off, 1 = Load switched on
<i>1/0</i>	1 = Load switched off, 0 = Load switched on

### Prerequisites for visibility

- Parameter window *Configuration*
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [channel]* \ Option *Bits*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.143 Value of Group Object when load in operation [group]

This parameter is used to define the telegram value that the Group Object *Status Load in operation* for the group sends if the load assigned is in the operating range.

Option	
<i>1</i>	
<i>0</i>	

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]*
  - Parameter *Enable function Power calculation [group]* \ Option Yes
  - Parameter *Enable function Load monitoring [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]*
  - Parameter *Type of monitoring [group]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [group]* \ Option *Bits*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

## 7.4.144 Value of Group Object when load in operation [channel]

This parameter is used to define the telegram value that the Group Object *Status Load in operation* for the channel sends if the load connected is in the operating range.

---

Option

1

0

---

### Prerequisites for visibility

- Parameter windows
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [channel]* \ Option *Bits*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.145 Value of Group Object when load in standby [group]

This parameter is used to define the telegram value that the Group Object *Status Load in standby* for the group sends if the load assigned is in the standby range.

---

Option

1

0

---

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]*
  - Parameter *Enable function Power calculation [group]* \ Option Yes
  - Parameter *Enable function Load monitoring [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]*
  - Parameter *Type of monitoring [group]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [group]* \ Option *Bits*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

## 7.4.146 Value of Group Object when load in standby [channel]

This parameter is used to define the telegram value that the Group Object *Status Load in standby* for the channel sends if the load connected is in the standby range.

---

Option

1

0

---

### Prerequisites for visibility

- Parameter windows
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [channel]* \ Option *Bits*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.147 Value of Group Object when load in overload [group]

This parameter is used to define the telegram value that the Group Object *Status Load in overload* for the group sends if the load assigned is in the overload range.

---

Option

1

0

---

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]*
  - Parameter *Enable function Power calculation [group]* \ Option Yes
  - Parameter *Enable function Load monitoring [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]*
  - Parameter *Type of monitoring [group]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [group]* \ Option *Bits*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

## 7.4.148 Value of Group Object when load in overload [channel]

This parameter is used to define the telegram value that the Group Object *Status Load in overload* for the channel sends if the load connected is in the overload range.

---

Option

1

0

---

### Prerequisites for visibility

- Parameter windows
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [channel]* \ Option *Bits*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.149 Value of Group Object when load in underload [group]

This parameter is used to define the telegram value that the Group Object *Status Load in underload* for the group sends if the load assigned is in the underload range.

---

Option

1

0

---

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]*
  - Parameter *Enable function Power calculation [group]* \ Option Yes
  - Parameter *Enable function Load monitoring [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]*
  - Parameter *Type of monitoring [group]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [group]* \ Option *Bits*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

## 7.4.150 Value of Group Object when load in underload [channel]

This parameter is used to define the telegram value that the Group Object *Status Load in underload* for the channel sends if the load connected is in the underload range.

---

Option

1

0

---

### Prerequisites for visibility

- Parameter windows
  - Parameter *Enable output X* \ Option Yes
  - Parameter *Enable energy function x* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option Yes
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [channel]* \ Option *Bits*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.151 Value of Group Object when maximum threshold exceeded [group]

This parameter is used to define the telegram value that the Group Object *Status Load maximum threshold exceeded* for the group sends if the load assigned has exceeded the maximum threshold.

---

Option

1

0

---

### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable energy group x* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Energy functions [group]*
  - Parameter *Enable function Power calculation [group]* \ Option Yes
  - Parameter *Enable function Load monitoring [group]* \ Option Yes
- Parameter window *Energy group X* \ Parameter window *Load monitoring [group]*
  - Parameter *Type of monitoring [group]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [group]* \ Option *Bits*
- The parameter is in the parameter window *Energy group X* \ parameter window *Load monitoring [group]*.

## 7.4.152 Value of Group Object when maximum threshold exceeded [channel]

This parameter is used to define the telegram value that the Group Object *Status Load maximum threshold exceeded* for the channel sends if the load connected has exceeded the maximum threshold.

---

### Option

---

*1*

---

*0*

---

#### Prerequisites for visibility

- Parameter windows
  - Parameter *Enable output X* \ Option *Yes*
  - Parameter *Enable energy function x* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Energy functions [channel]* \ Parameter *Enable function Load monitoring [channel]* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Load monitoring [channel]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Type of monitoring [channel]* \ Option *General threshold monitoring (A ... F)*
  - Parameter *Status Send load as [channel]* \ Option *Bits*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Load monitoring [channel]*.

## 7.4.153 Send value of Group Objects "Status byte" [Switch Actuator]

This parameter is used to define when the values of the following Group Objects are sent on the bus (ABB i-bus® KNX):

- *Status byte all active priorities*
- *Status byte highest active priority*

### Note

If one of the following options is selected, the value of the Group Object is sent for each change in a value:

- *On change*
- *On change or on request*

### Note

Sending on request can be triggered by the reception of a telegram with the value 0 or 1 on Group Object *Request status values*.

---

### Option

---

*No, update only*                      The value is updated but is not sent.

---

*On change*                              The value is sent if there is a change.

---

*On request*                              The value is sent on request.

---

*On change or on request*              The value is sent on change or on request.

---

#### Prerequisites for visibility

- Parameter window *Configuration* \ Parameter *Enable output X* \ Option *Yes*
- Parameter window *Switch Actuator X* \ Parameter window *Basic settings [Switch Actuator]*
  - Parameter *Parameter setting* \ Option *Individual*
  - Parameter *Enable Group Objects "Status byte" [Switch Actuator]* \ Options *Yes, all active priorities / Yes, highest active priority*
- The parameter is in the parameter window *Switch Actuator X* \ parameter window *Basic settings [Switch Actuator]*.



### 7.4.154 Value after sending and switching delay has expired

This parameter is used to define the values that are applicable at the inputs and outputs after expiration of the sending and switching delay.

Option	
<i>Last value received</i>	The inputs and outputs react to the last value received.
<i>Ignore received values</i>	The state of the inputs and outputs remains unchanged until a new value is received after the sending and switching delays have elapsed.

#### Prerequisites for visibility

- The parameter is in the parameter window [Device settings](#).

### 7.4.155 Value is sent from a change of

This parameter is used to define the minimum change in the input value for sending the output value on the bus (ABB i-bus® KNX).

The possible options depend on the following settings:

- Function (Current measurement, Power calculation or Energy consumption)
- The option selected in the parameter [Evaluate change of value as](#)

Option	
<i>1 ... 10 ... 100 %</i>	
<i>10 ... 100 ... 10000 mA</i>	
<i>1 ... 100 ... 4600 W</i>	
<i>1 ... 100 ... 10000 Wh</i>	

#### Prerequisites for visibility

- The parameter appears at various points in the application. The visibility is dependent on the application and the higher-level parameter.

### 7.4.156 Evaluate change of value as

This parameter is used to define whether the change to the value sent last is evaluated as a percentage or absolute value. If the new value has changed by the value set in the parameter [Value is sent from a change of](#), the new value is sent on the bus (ABB i-bus® KNX) depending on the send behavior set.

Option	
<i>Percentage</i>	The measured values must differ by the percentage set in the parameter Change defined in
<i>Change absolute</i>	The measured values must differ by the absolute value set in the parameter Change defined in.

#### Prerequisites for visibility

- The parameter appears at various points in the application. The visibility is dependent on the application and the higher-level parameter.

## 7.4.157 Send values of Group Objects "Status Result" and "Status Input value between thresholds"

This parameter is used to define when the values of the following Group Objects are sent on the bus (ABB i-bus® KNX):

- [Status Result \[Threshold\]](#)
- [Status Input value between thresholds](#)

### **i** Note

Sending on request can be triggered by the reception of a telegram with the value 0 or 1 on Group Object [Request status values](#).

Option	
<i>No, update only</i>	The value is updated but is not sent.
<i>On change</i>	The value is sent if there is a change.
<i>On request</i>	The value is sent on request.
<i>On change or on request</i>	The value is sent on change or on request.
<i>After receiving input value</i>	The value is sent on the input Group Objects after reception of a telegram. The result is recalculated due to the reception of a telegram on the input Group Objects, the result does not necessarily need to change.
<i>After receiving input value or on request</i>	The value is sent on the input Group Objects after reception of a telegram or on request. The result is recalculated due to the reception of a telegram on the input Group Objects, the result does not necessarily need to change.

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable Logic/Threshold x-y](#) \ Option *Yes*
- Parameter window [Logic/Threshold](#) \ Parameter window [Logic/Threshold x](#)
  - Parameter [Function of the logic gate](#) \ Option *Threshold*
  - Parameter [Enable Group Objects "Status Result" and "Status Input value between thresholds"](#) \ Option *Yes*
- The parameter is in the parameter window [Logic/Threshold](#) \ [Logic/Threshold x](#).

## 7.4.158 Overwrite values Voltage/Power factor on download

This parameter is used to define whether the values for voltage and power factor are overwritten while downloading the application to the device.

Option	
<i>No</i>	The existing values in the device are not overwritten.
<i>Yes</i>	The existing values in the device are overwritten with the values defined in ETS.

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option *Yes*
  - Parameter [Enable energy function x](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Power calculation \[channel\]](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Power calculation \[channel\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Change values Voltage/Power factor via Group Objects](#) \ Option *Yes*
  - or
  - Parameter [Change values Voltage/Power factor via i-bus® Tool](#) \ Option *Yes*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Power calculation \[channel\]](#).

## 7.4.159 Change values Voltage/Power factor via i-bus® Tool

This parameter is used to define whether the values for voltage and power factor set in ETS can be changed via i-bus® Tool.

### **i** Note

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

Option	
No	The values cannot be changed via i-bus® Tool.
Yes	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Overwrite values Voltage/Power factor on download</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Power calculation \[channel\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Power calculation \[channel\]](#).

## 7.4.160 Change values Voltage/Power factor via Group Objects

This parameter is used to define whether the values for voltage and power factor (cos phi) set in ETS can be changed via the corresponding Group Objects.

Option	
No	The values cannot be changed via Group Objects.
Yes	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Overwrite values Voltage/Power factor on download</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Voltage value</a></li> <li>• <a href="#">Power factor (cos phi)</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#) \ Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Power calculation \[channel\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Power calculation \[channel\]](#).

## 7.4.161 Time for off

This parameter is used to define how long the output remains switched off during a flashing cycle.

---

### Option

00:00:01 ... 00:00:05 ... 18:12:15 hh:mm:ss

---

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Flashing](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Flashing](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Flashing](#).

## 7.4.162 Time for on

This parameter is used to define how long the output remains switched on during a flashing cycle.

---

### Option

00:00:01 ... 00:00:05 ... 18:12:15 hh:mm:ss

---

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option [Yes](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Time](#) \ Option [Flashing](#)
- Parameter window [Switch Actuator X](#) \ Parameter window [Flashing](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Flashing](#).

## 7.4.163 Send timestamp of total meter start [group]

This parameter is used to define whether the start time for the group energy consumption calculation is saved in the device and sent on the bus (ABB i-bus® KNX).

---

### Option

[No](#) The start time for the energy consumption calculation is not saved.

[Yes](#) The following dependent parameters are shown:

- [Data point type timestamp \[group\]](#)

---

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable energy group x](#) \ Option [Yes](#)
- Parameter window [Energy group X](#) \ Parameter window [Energy functions \[group\]](#)
  - Parameter [Enable function Power calculation \[group\]](#) \ Option [Yes](#)
  - Parameter [Enable function Energy consumption \[group\]](#) \ Option [Yes](#)
- Parameter window [Energy group X](#) \ Parameter window [Energy consumption \[group\]](#) \ Parameter [Activate total meter \[group\]](#) \ Option [Yes](#)
- The parameter is in the parameter window [Energy group X](#) \ parameter window [Energy consumption \[group\]](#).

## 7.4.164 Send timestamp of total meter start [channel]

This parameter is used to define whether the start time for the channel energy consumption calculation is saved in the device and sent on the bus (ABB i-bus® KNX).

Option	
<i>No</i>	The start time for the energy consumption calculation is not saved.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Data point type timestamp [channel]</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
  - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Activate total meter \[channel\]](#) \ Option Yes
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Energy consumption \[channel\]](#).

## 7.4.165 Enable central Group Object "Receive load shedding stage"

This parameter enables the central Group Object [Receive load shedding stage](#). The device can receive load shedding stages from a master via this Group Object.

All assigned outputs can be activated together with the central Group Object.

### Note

Observe the maximum number of switching cycles per minute when using central Group Objects → Technical data.

Option	
<i>No</i>	The Group Object is not enabled.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Enable function Load shedding</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li>• <a href="#">Receive load shedding stage</a></li> </ul>

### Prerequisites for visibility

- The parameter is in the parameter window [Device settings](#).

## 7.4.166 Enable central Group Object "Switch"

This parameter enables the central Group Object [Switch](#).

All assigned outputs can be activated together with the central Group Object.

### **i** Note

Observe the maximum number of switching cycles per minute when using central Group Objects → [Technical data](#).

#### Option

<i>No</i>	The Group Object is not enabled.
<i>Yes</i>	The following dependent parameters are shown: <ul style="list-style-type: none"> <li>• <a href="#">Switch output reacts to central Switch Group Object</a></li> </ul> The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Switch</a></li> </ul>

#### Prerequisites for visibility

- The parameter is in the parameter window [Device settings](#).

## 7.4.167 Enable central Group Object "Scene 1 ... 64"

This parameter enables the central Group Object [Scene 1 ... 64](#).

All outputs assigned to the Scene can be activated together with the central Group Object.

### **i** Note

Observe the maximum number of switching cycles per minute when using central Group Objects → [Technical data](#).

#### Option

<i>No</i>	The Group Object is not enabled.
<i>Yes</i>	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Scene 1 ... 64</a></li> </ul>

#### Prerequisites for visibility

- The parameter is in the parameter window [Device settings](#).

## 7.4.168 i-bus® Tool access

This parameter is used to define whether the device can be accessed via i-bus® Tool.

More information: → [Integration into i-bus® Tool, Page 64](#).

#### Option

<i>Deactivated</i>	Access via i-bus® Tool is deactivated.
<i>Value display only</i>	Values can be displayed via the i-bus® Tool.
<i>Full access</i>	Values can be displayed and changed i-bus® Tool.

#### Prerequisites for visibility

- The parameter is in the parameter window [Configuration](#).

## 7.4.169 Assign to energy group x

This parameter is used to assign the channel to the energy groups.

Option
<u>No</u>
Yes

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Energy functions \[channel\]](#).

## 7.4.170 Forced operation (1 bit / 2 bit) [Switch Actuator]

This parameter is used to Activate/Deactivate 1-bit or 2-bit forced operation.

More information: → [forced operation, Page 44](#).

Option	
<u>Deactivated</u>	Forced operation is deactivated.
<u>Activated 1 bit – 0 active</u>	Forced operation is activated by the reception of a telegram with the value 0. <ul style="list-style-type: none"> <li><a href="#">Forced operation, 1-bit</a></li> </ul> <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li><a href="#">Switching reaction on forced operation</a></li> </ul>
<u>Activated 1 bit – 1 active</u>	Forced operation is activated by the reception of a telegram with the value 0. <p>The following dependent parameters are shown:</p> <ul style="list-style-type: none"> <li><a href="#">Switching reaction on forced operation</a></li> </ul> <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li><a href="#">Forced operation, 1-bit</a></li> </ul>
<u>Activated 2 bit</u>	2-bit forced operation is used. <p>The following dependent Group Objects are displayed:</p> <ul style="list-style-type: none"> <li><a href="#">Forced operation, 2-bit</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Safety](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Safety](#) \ Parameter [Parameter setting](#) \ Option [Individual](#)
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Safety](#).

## 7.4.171 Activate intermediate meter

This parameter is used to define whether an energy consumption calculation can be performed during an interval. The energy consumption calculation can be started and stopped via the Group Object [Start/Stop intermediate meter](#).

Option	
No	The meter is not activated.
Yes	The following dependent Group Objects are displayed: <ul style="list-style-type: none"> <li>• <a href="#">Start/Stop intermediate meter</a></li> </ul>

### Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
  - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#) \ Parameter [Parameter setting](#) \ Option *Individual*
- The parameter is in the parameter window [Switch Actuator X](#) \ parameter window [Energy consumption \[channel\]](#).

## 7.4.172 Send cyclically every

This parameter is used to define the cycle in which the value of the measurement or calculation is sent on the bus (ABB i-bus® KNX).

### Note

The possible options and default values depend on the higher-level parameter.

Option	
00:00:30 ... <a href="#">24:00:00</a> ... 99:59:59	hh:mm:ss
00:00:30 ... <a href="#">00:01:00</a> ... 18:12:15	hh:mm:ss

### Prerequisites for visibility

- The parameter appears at various points in the application. The visibility is dependent on the application and the higher-level parameter.



## 7.4.173 Cyclical monitoring

This parameter is used to activate the cyclical monitoring and to define the monitoring cycle for the safety Group Objects. If the monitoring cycle is specified with the value 00:00:00, the cyclical monitoring is deactivated.

More information: → [Cyclical monitoring, Page 235](#).

### Note

The monitoring cycle in the device should be at least quadruple the cyclical sending time of the sending device. As a result, the reactions set will not be triggered immediately if a signal is missing, e.g. due to high bus load.

---

### Option

---

*00:00:00... 12:00:00 hh:mm:ss*

---

### Prerequisites for visibility

- Parameter window [Safety](#) \ Parameter [Enable Group Object "Safety priority x"](#) \ Option Yes
- The parameter is in the parameter window [Safety](#).

# 8 Group Objects

## 8.1 Overview of Group Objects

Function	Group Object name	Data point type	Length	Flags
Block	Channel X: Switch	DPT 1.003	1 bit	C W
Block delay for switching on and off	Channel X: Switch	DPT 1.003	1 bit	C W
Block staircase lighting	Channel X: Switch	DPT 1.003	1 bit	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 13.010	4 bytes	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 13.013	4 bytes	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 14.019	4 bytes	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 14.056	4 bytes	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 5.001	1 byte	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 5.010	1 byte	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 7.001	2 bytes	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 9.001	2 bytes	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 9.004	2 bytes	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 9.021	2 bytes	C W
Change lower threshold	Logic/Threshold X: Threshold	DPT 9.024	2 bytes	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 13.010	4 bytes	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 13.013	4 bytes	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 14.019	4 bytes	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 14.056	4 bytes	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 5.001	1 byte	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 5.010	1 byte	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 7.001	2 bytes	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 9.001	2 bytes	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 9.004	2 bytes	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 9.021	2 bytes	C W
Change upper threshold	Logic/Threshold X: Threshold	DPT 9.024	2 bytes	C W
Connection A	Logic/Threshold X: Logic	DPT 1.002	1 bit	C W
Connection B	Logic/Threshold X: Logic	DPT 1.002	1 bit	C W
Contact closed and no current flows	Channel X: Contact supervision	DPT 1.005	1 bit	C R T
Contact open and current flows	Channel X: Contact supervision	DPT 1.005	1 bit	C R T
Flashing	Channel X: Switch	DPT 1.001	1 bit	C W
Forced operation, 1-bit	Channel X: Switch	DPT 1.003	1 bit	C W
Forced operation, 2-bit	Channel X: Switch	DPT 2.001	2 bit	C W
In operation	Central: General	DPT 1.002	1 bit	C R T
Power factor (cos phi)	Channel X: Power calculation	DPT 14.057	4 bytes	C W
Recall Scene assignment x	Channel X: Switch	DPT 1.017	1 bit	C W
Receive load shedding stage	Central: Load shedding	DPT 236.001	1 byte	C W
Request Date/Time	Central: Date/Time	DPT 1.017	1 bit	C T
Request status values	Central: General	DPT 1.017	1 bit	C W
Reset alarm	Channel X: Contact supervision	DPT 1.016	1 bit	C W
Reset total meter	Channel X: Energy consumption	DPT 1.015	1 bit	C W
Reset total meter	Energy group X: Energy consumption	DPT 1.015	1 bit	C W
Safety priority x	Safety: Switch	DPT 1.005	1 bit	C W T U
Scene 1 ... 64	Central: Scene	DPT 18.001	1 byte	C W
Scene 1...64	Channel X: Switch	DPT 18.001	1 byte	C W
Set date	Central: Date/Time	DPT 11.001	3 bytes	C W
Set date/time	Central: Date/Time	DPT 19.001	8 bytes	C W
Set load shedding stage	Channel X: Load shedding	DPT 236.001	1 byte	C W
Set maximum threshold	Channel X: Load monitoring	DPT 14.019	4 bytes	C W
Set maximum threshold	Channel X: Load monitoring	DPT 14.056	4 bytes	C W
Set maximum threshold	Energy group X: Load monitoring	DPT 14.019	4 bytes	C W
Set maximum threshold	Energy group X: Load monitoring	DPT 14.056	4 bytes	C W
Set threshold Operation/Overload	Channel X: Load monitoring	DPT 14.019	4 bytes	C W
Set threshold Operation/Overload	Channel X: Load monitoring	DPT 14.056	4 bytes	C W
Set threshold Operation/Overload	Energy group X: Load monitoring	DPT 14.019	4 bytes	C W
Set threshold Operation/Overload	Energy group X: Load monitoring	DPT 14.056	4 bytes	C W
Set threshold Standby/Underload	Channel X: Load monitoring	DPT 14.019	4 bytes	C W
Set threshold Standby/Underload	Channel X: Load monitoring	DPT 14.056	4 bytes	C W
Set threshold Standby/Underload	Energy group X: Load monitoring	DPT 14.019	4 bytes	C W
Set threshold Standby/Underload	Energy group X: Load monitoring	DPT 14.056	4 bytes	C W
Set threshold Underload/Operation	Channel X: Load monitoring	DPT 14.019	4 bytes	C W
Set threshold Underload/Operation	Channel X: Load monitoring	DPT 14.056	4 bytes	C W
Set threshold Underload/Operation	Energy group X: Load monitoring	DPT 14.019	4 bytes	C W

Function	Group Object name	Data point type	Length	Flags
Set threshold Underload/Operation	Energy group X: Load monitoring	DPT 14.056	4 bytes	C W
Set time	Central: Date/Time	DPT 10.001	3 bytes	C W
Staircase lighting permanent on	Channel X: Switch	DPT 1.001	1 bit	C W
Staircase lighting time	Channel X: Switch	DPT 7.005	2 bytes	C W
Start total meter date	Channel X: Energy consumption	DPT 11.001	3 bytes	C R T
Start total meter date	Energy group X: Energy consumption	DPT 11.001	3 bytes	C R T
Start total meter Date/Time	Channel X: Energy consumption	DPT 19.001	8 bytes	C R T
Start total meter Date/Time	Energy group X: Energy consumption	DPT 19.001	8 bytes	C R T
Start total meter time	Channel X: Energy consumption	DPT 10.001	3 bytes	C R T
Start total meter time	Energy group X: Energy consumption	DPT 10.001	3 bytes	C R T
Start/Stop intermediate meter	Channel X: Energy consumption	DPT 1.010	1 bit	C W
Status byte all active priorities	Channel X: Switch	nonDPT	1 byte	C R T
Status byte highest active priority	Channel X: Switch	nonDPT	1 byte	C R T
Status Current	Channel X: Current measurement	DPT 14.019	4 bytes	C R T
Status Current	Channel X: Current measurement	DPT 9.021	2 bytes	C R T
Status Current	Energy group X: Current measurement	DPT 14.019	4 bytes	C R T
Status Current	Energy group X: Current measurement	DPT 9.021	2 bytes	C R T
Status Input value between thresholds	Logic/Threshold X: Threshold	DPT 1.002	1 bit	C R T
Status Intermediate meter energy consumption	Channel X: Energy consumption	DPT 13.010	4 bytes	C R T
Status Intermediate meter energy consumption	Channel X: Energy consumption	DPT 13.013	4 bytes	C R T
Status Load	Channel X: Load monitoring	Non DPT	1 byte	C R T
Status Load	Energy group X: Load monitoring	Non DPT	1 byte	C R T
Status Load in operation	Channel X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load in operation	Energy group X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load in overload	Channel X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load in overload	Energy group X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load in standby	Channel X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load in standby	Energy group X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load in underload	Channel X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load in underload	Energy group X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load maximum threshold exceeded	Channel X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load maximum threshold exceeded	Energy group X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load On/Off	Channel X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load On/Off	Energy group X: Load monitoring	DPT 1.002	1 bit	C R T
Status Load shedding	Channel X: Load shedding	DPT 1.011	1 bit	C R T
Status Power	Channel X: Power calculation	DPT 14.056	4 bytes	C R T
Status Power	Channel X: Power calculation	DPT 9.024	2 bytes	C R T
Status Power	Energy group X: Power calculation	DPT 14.056	4 bytes	C R T
Status Power	Energy group X: Power calculation	DPT 9.024	2 bytes	C R T
Status Result [Logic]	Logic/Threshold X: Logic	DPT 1.002	1 bit	C R T
Status Result [Threshold]	Logic/Threshold X: Threshold	DPT 1.002	1 bit	C R T
Status Switch	Channel X: Switch	DPT 1.011	1 bit	C R T
Status Total meter energy consumption	Channel X: Energy consumption	DPT 13.010	4 bytes	C R T
Status Total meter energy consumption	Channel X: Energy consumption	DPT 13.013	4 bytes	C R T
Status Total meter energy consumption	Energy group X: Energy consumption	DPT 13.010	4 bytes	C R T
Status Total meter energy consumption	Energy group X: Energy consumption	DPT 13.013	4 bytes	C R T
Switch	Central: Switch	DPT 1.001	1 bit	C W
Switch	Channel X: Switch	DPT 1.001	1 bit	C W
Threshold input	Logic/Threshold X: Threshold	DPT 13.010	4 bytes	C W T U
Threshold input	Logic/Threshold X: Threshold	DPT 13.013	4 bytes	C W T U
Threshold input	Logic/Threshold X: Threshold	DPT 14.019	4 bytes	C W T U
Threshold input	Logic/Threshold X: Threshold	DPT 14.056	4 bytes	C W T U
Threshold input	Logic/Threshold X: Threshold	DPT 5.001	1 byte	C W T U
Threshold input	Logic/Threshold X: Threshold	DPT 5.010	1 byte	C W T U
Threshold input	Logic/Threshold X: Threshold	DPT 7.001	2 bytes	C W T U
Threshold input	Logic/Threshold X: Threshold	DPT 9.001	2 bytes	C W T U
Threshold input	Logic/Threshold X: Threshold	DPT 9.004	2 bytes	C W T U
Threshold input	Logic/Threshold X: Threshold	DPT 9.021	2 bytes	C W T U
Threshold input	Logic/Threshold X: Threshold	DPT 9.024	2 bytes	C W T U
Voltage value	Channel X: Power calculation	DPT 14.027	4 bytes	C W
Warning staircase lighting	Channel X: Switch	DPT 1.001	1 bit	C R T

## 8.2 Group Objects "Central"

Function	Group Object name	Data point type	Length	Flags
<b>Set date</b>	<b>Central: Date/Time</b>	<b>DPT 11.001</b>	<b>3 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the date. Telegram value:</p> <ul style="list-style-type: none"> <li>• DD.MM.YYYY</li> </ul>				
<p><b>Note</b> If this Group Object is read, it indicates the last value received. The value may vary from the current device time.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Device settings</a> \ Parameter <a href="#">Enable Time Group Objects for setting of device time</a> \ Option <i>Date (DPT 11.001)/time (10.001)</i></li> </ul>				
<b>Request Date/Time</b>	<b>Central: Date/Time</b>	<b>DPT 1.017</b>	<b>1 bit</b>	<b>C T</b>
<p>This Group Object sends a date and time request on the bus (ABB i-bus® KNX). The request is sent 30 seconds after switching on the device. An active send and switching delay is not taken into account. Telegram value:</p> <ul style="list-style-type: none"> <li>• 1 = Trigger</li> <li>• 0 = Is not sent</li> </ul>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Device settings</a> \ Parameter <a href="#">Enable Time Group Objects for setting of device time</a> \ Option <i>Date (DPT 11.001)/time (10.001) / Date/Time (DPT 19.001)</i></li> </ul>				
<b>Set date/time</b>	<b>Central: Date/Time</b>	<b>DPT 19.001</b>	<b>8 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive via the bus (ABB i-bus® KNX) the weekday, date and time. The telegram also contains information about the validity of the individual values. Telegram value:</p> <ul style="list-style-type: none"> <li>• Coded 8-byte value</li> </ul>				
<p><b>Note</b> If this Group Object is read, it indicates the last value received. The value may vary from the current device time.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Device settings</a> \ Parameter <a href="#">Enable Time Group Objects for setting of device time</a> \ Option <i>Date/Time (DPT 19.001)</i></li> </ul>				
<b>In operation</b>	<b>Central: General</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object cyclically sends an In operation telegram on the bus (ABB i-bus® KNX). The sending cycle is set in parameter <a href="#">Sending cycle</a>. The telegram value depends on the setting in the parameter <a href="#">Enable Group Object "In operation"</a>. Telegram value:</p> <ul style="list-style-type: none"> <li>• 1 = Device in operation</li> <li>• 0 = Device in operation</li> </ul>				
<p><b>Note</b> Readiness can be monitored by another KNX device using this Group Object. If a telegram is not received, the sending device could be faulty or the bus cable to the transmitting device could be interrupted.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Device settings</a> \ Parameter <a href="#">Enable Group Object "In operation"</a> \ Option <i>Yes, send value 0 cyclically / Yes, send value 1 cyclically</i></li> </ul>				
<b>Receive load shedding stage</b>	<b>Central: Load shedding</b>	<b>DPT 236.001</b>	<b>1 byte</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the current load shedding stage. The Group Object applies to the entire device. The load shedding can be set individually for each output. More information: → <a href="#">Function Load shedding, Page 47</a>. Telegram value:</p> <ul style="list-style-type: none"> <li>• → <a href="#">Coding, Group Object "Receive load shedding stage", Page 231</a></li> </ul>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Device settings</a> \ Parameter <a href="#">Enable central Group Object "Receive load shedding stage"</a> \ Option <i>Yes</i></li> </ul>				
<b>Switch</b>	<b>Central: Switch</b>	<b>DPT 1.001</b>	<b>1 bit</b>	<b>C W</b>
<p>This Group Object can be used to switch several outputs of the device under central control. In the parameter <a href="#">Switch output reacts to central Switch Group Object</a>, it can be defined individually for each output whether the output reacts to this Group Object. The switching behavior of the outputs is dependent on the settings in the related parameters <a href="#">Reaction of output</a>. NO contact telegram value:</p> <ul style="list-style-type: none"> <li>• 1 = Close relay contact</li> <li>• 0 = Open relay contact</li> </ul> <p>NC contact telegram value:</p> <ul style="list-style-type: none"> <li>• 1 = Open relay contact</li> <li>• 0 = Close relay contact</li> </ul>				
<p><b>Note</b> Due to the priorities, a switching command does not necessarily change the position of the relay contact. Each relay can perform only a limited number of switching operations per minute. Frequent switching can cause a switching delay. More information → <a href="#">Technical data</a>.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Device settings</a> \ Parameter <a href="#">Enable central Group Object "Switch"</a> \ Option <i>Yes</i></li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Request status values</b>	<b>Central: General</b>	<b>DPT 1.017</b>	<b>1 bit</b>	<b>C W</b>

If a telegram is received on this Group Object, the values of the status Group Objects are sent on the bus (ABB i-bus® KNX).

Telegram value:

- 1 = Send status values
- 0 = Send status values

**Note**

The values of the status Group Objects are sent only if sending on request is set in the related parameters.

Prerequisites for visibility

- Parameter window [Device settings](#) \ Parameter [Enable Group Object "Request status values"](#) \ Option *Yes*

<b>Scene 1 ... 64</b>	<b>Central: Scene</b>	<b>DPT 18.001</b>	<b>1 byte</b>	<b>C W</b>
-----------------------	-----------------------	-------------------	---------------	------------

This Group Object can be used to activate several outputs of the device under central control.

This Group Object is used to receive, via the bus (ABB i-bus® KNX), a Scene telegram.

The Scene telegram includes the Scene number and information about whether the Scene is recalled or the position of the relay contact is saved in the Scene.

A Scene number is assigned in the parameter window [Scene assignments \[Switch Actuator\]](#). If the corresponding Scene number is parametrized for an output, the Scene is recalled or saved, depending on the telegram value.

Telegram value:

- 0 ... 63 = Recall Scene x (x = 1 ... 64)
- 128 ... 191 = Save Scene x (x = 1 ... 64)

For more information, see:

- [Function Scenes, Page 59](#)
- [Function diagram Switch Actuator, Page 42](#)
- [Table of values, Group Object "Scene 1 ... 64", Page 239](#)

**Note**

A telegram does not necessarily result in a change to the position of the relay contact due to the priorities.

Prerequisites for visibility

- Parameter window [Device settings](#) \ Parameter [Enable central Group Object "Scene 1 ... 64"](#) \ Option *Yes*

<b>Set time</b>	<b>Central: Date/Time</b>	<b>DPT 10.001</b>	<b>3 bytes</b>	<b>C W</b>
-----------------	---------------------------	-------------------	----------------	------------

This Group Object is used to receive via the bus (ABB i-bus® KNX) the weekday and time.

Telegram value:

- DD:hh:mm:ss

**Note**

If this Group Object is read, it indicates the last value received. The value may vary from the current device time.

Prerequisites for visibility

- Parameter window [Device settings](#) \ Parameter [Enable Time Group Objects for setting of device time](#) \ Option *Date (DPT 11.001)/time (10.001)*

## 8.3 Group Objects "Safety"

Function	Group Object name	Data point type	Length	Flags
<b>Safety priority x</b>	<b>Safety: Switch</b>	<b>DPT 1.005</b>	<b>1 bit</b>	<b>C W T U</b>

These Group Objects are used to receive, via the bus (ABB i-bus® KNX), a safety priority.

An active safety priority overrides the operation of the device → [Switch Actuator safety functions, Page 43](#).

Telegram value:

- 1 = Alarm
- 0 = No alarm

**Note**

It is necessary to select in the parameter [Read safety Group Objects after bus voltage recovery and download](#) the option *Yes* to update automatically the Group Objects.

**Note**

To update the safety Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.

Prerequisites for visibility

- Parameter window [Safety](#) \ Parameter [Enable Group Object "Safety priority x"](#) \ Option *Yes*

## 8.4 Group Objects Logic/Threshold X

Function	Group Object name	Data point type	Length	Flags
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 13.010</b>	<b>4 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold.            The data point type for the Group Object depends on the option selected in the parameter <i>Data point type of Group Object "Threshold input"</i>.            Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 2147483647 Wh</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> <ul style="list-style-type: none"> <li>Parameter <i>Function of the logic gate</i> \ Option <i>Threshold</i></li> <li>Parameter <i>Data point type of Group Object "Threshold input"</i> \ Option <i>Wh (DPT 13.010)</i></li> <li>Parameter <i>Change thresholds via Group Objects</i> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 13.013</b>	<b>4 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold.            The data point type for the Group Object depends on the option selected in the parameter <i>Data point type of Group Object "Threshold input"</i>.            Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 2147483647 kWh</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> <ul style="list-style-type: none"> <li>Parameter <i>Function of the logic gate</i> \ Option <i>Threshold</i></li> <li>Parameter <i>Data point type of Group Object "Threshold input"</i> \ Option <i>kWh (DPT 13.013)</i></li> <li>Parameter <i>Change thresholds via Group Objects</i> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold.            The data point type for the Group Object depends on the option selected in the parameter <i>Data point type of Group Object "Threshold input"</i>.            Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 24 A</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> <ul style="list-style-type: none"> <li>Parameter <i>Function of the logic gate</i> \ Option <i>Threshold</i></li> <li>Parameter <i>Data point type of Group Object "Threshold input"</i> \ Option <i>A (DPT 14.019)</i></li> <li>Parameter <i>Change thresholds via Group Objects</i> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold.            The data point type for the Group Object depends on the option selected in the parameter <i>Data point type of Group Object "Threshold input"</i>.            Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 10000 W</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> <ul style="list-style-type: none"> <li>Parameter <i>Function of the logic gate</i> \ Option <i>Threshold</i></li> <li>Parameter <i>Data point type of Group Object "Threshold input"</i> \ Option <i>W (DPT 14.056)</i></li> <li>Parameter <i>Change thresholds via Group Objects</i> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 5.001</b>	<b>1 byte</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold.            The data point type for the Group Object depends on the option selected in the parameter <i>Data point type of Group Object "Threshold input"</i>.            Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 100 %</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> <ul style="list-style-type: none"> <li>Parameter <i>Function of the logic gate</i> \ Option <i>Threshold</i></li> <li>Parameter <i>Data point type of Group Object "Threshold input"</i> \ Option <i>Percent (DPT 5.001)</i></li> <li>Parameter <i>Change thresholds via Group Objects</i> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 5.010</b>	<b>1 byte</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold.            The data point type for the Group Object depends on the option selected in the parameter <i>Data point type of Group Object "Threshold input"</i>.            Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 255</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> <ul style="list-style-type: none"> <li>Parameter <i>Function of the logic gate</i> \ Option <i>Threshold</i></li> <li>Parameter <i>Data point type of Group Object "Threshold input"</i> \ Option <i>Meter pulses (DPT 5.010)</i></li> <li>Parameter <i>Change thresholds via Group Objects</i> \ Option <i>Yes</i></li> </ul> </li> </ul>				



Function	Group Object name	Data point type	Length	Flags
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 7.001</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold. The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• 0 ... 65535</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">Meter pulses (DPT 7.001)</a></li> <li>– Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.001</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold. The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• -273 ... 670760 °C</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">Temperature (DPT 9.001)</a></li> <li>– Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.004</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold. The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• 0 ... 670760 lux</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">Lux (DPT 9.004)</a></li> <li>– Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.021</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold. The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• 0 ... 240000 mA</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">mA (DPT 9.021)</a></li> <li>– Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change upper threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.024</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the upper threshold. The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• 0 ... 10 kW</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">kW (DPT 9.024)</a></li> <li>– Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 13.010</b>	<b>4 bytes</b>	<b>C W T U</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i> . The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• 0 ... 2147483647 Wh</li> </ul>				
<b>Note</b> It is necessary to select in the parameter <a href="#">Read input Group Objects after bus voltage recovery and download</a> the option <a href="#">Yes</a> to update automatically the Group Object.				
<b>Note</b> To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.				
Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">Wh (DPT 13.010)</a></li> </ul> </li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 13.013</b>	<b>4 bytes</b>	<b>C W T U</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i>.                      The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.                      Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 2147483647 kWh</li> </ul>				
<p><b>Note</b>                      It is necessary to select in the parameter <a href="#">Read input Group Objects after bus voltage recovery and download</a> the option <i>Yes</i> to update automatically the Group Object.</p>				
<p><b>Note</b>                      To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <i>Threshold</i></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <i>kWh (DPT 13.013)</i></li> </ul> </li> </ul>				
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C W T U</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i>.                      The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.                      Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 24 A</li> </ul>				
<p><b>Note</b>                      It is necessary to select in the parameter <a href="#">Read input Group Objects after bus voltage recovery and download</a> the option <i>Yes</i> to update automatically the Group Object.</p>				
<p><b>Note</b>                      To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <i>Threshold</i></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <i>A (DPT 14.019)</i></li> </ul> </li> </ul>				
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C W T U</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i>.                      The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.                      Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 10000 W</li> </ul>				
<p><b>Note</b>                      It is necessary to select in the parameter <a href="#">Read input Group Objects after bus voltage recovery and download</a> the option <i>Yes</i> to update automatically the Group Object.</p>				
<p><b>Note</b>                      To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <i>Threshold</i></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <i>W (DPT 14.056)</i></li> </ul> </li> </ul>				
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 5.001</b>	<b>1 byte</b>	<b>C W T U</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i>.                      The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.                      Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 100 %</li> </ul>				
<p><b>Note</b>                      It is necessary to select in the parameter <a href="#">Read input Group Objects after bus voltage recovery and download</a> the option <i>Yes</i> to update automatically the Group Object.</p>				
<p><b>Note</b>                      To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <i>Threshold</i></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <i>Percent (DPT 5.001)</i></li> </ul> </li> </ul>				



Function	Group Object name	Data point type	Length	Flags
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 5.010</b>	<b>1 byte</b>	<b>C W T U</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i>.  The data point type for the Group Object depends on the option selected in the parameter <i>Data point type of Group Object "Threshold input"</i>.  Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 255</li> </ul>				
<p><b>Note</b>  It is necessary to select in the parameter <i>Read input Group Objects after bus voltage recovery and download</i> the option <i>Yes</i> to update automatically the Group Object.</p>				
<p><b>Note</b>  To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> <ul style="list-style-type: none"> <li>Parameter <i>Function of the logic gate</i> \ Option <i>Threshold</i></li> <li>Parameter <i>Data point type of Group Object "Threshold input"</i> \ Option <i>Meter pulses (DPT 5.010)</i></li> </ul> </li> </ul>				
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 7.001</b>	<b>2 bytes</b>	<b>C W T U</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i>.  The data point type for the Group Object depends on the option selected in the parameter <i>Data point type of Group Object "Threshold input"</i>.  Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 65535</li> </ul>				
<p><b>Note</b>  It is necessary to select in the parameter <i>Read input Group Objects after bus voltage recovery and download</i> the option <i>Yes</i> to update automatically the Group Object.</p>				
<p><b>Note</b>  To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> <ul style="list-style-type: none"> <li>Parameter <i>Function of the logic gate</i> \ Option <i>Threshold</i></li> <li>Parameter <i>Data point type of Group Object "Threshold input"</i> \ Option <i>Meter pulses (DPT 7.001)</i></li> </ul> </li> </ul>				
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.001</b>	<b>2 bytes</b>	<b>C W T U</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i>.  The data point type for the Group Object depends on the option selected in the parameter <i>Data point type of Group Object "Threshold input"</i>.  Telegram value:</p> <ul style="list-style-type: none"> <li>-273 ... 670760 °C</li> </ul>				
<p><b>Note</b>  It is necessary to select in the parameter <i>Read input Group Objects after bus voltage recovery and download</i> the option <i>Yes</i> to update automatically the Group Object.</p>				
<p><b>Note</b>  To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> <ul style="list-style-type: none"> <li>Parameter <i>Function of the logic gate</i> \ Option <i>Threshold</i></li> <li>Parameter <i>Data point type of Group Object "Threshold input"</i> \ Option <i>Temperature (DPT 9.001)</i></li> </ul> </li> </ul>				
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.004</b>	<b>2 bytes</b>	<b>C W T U</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i>.  The data point type for the Group Object depends on the option selected in the parameter <i>Data point type of Group Object "Threshold input"</i>.  Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 670760 lux</li> </ul>				
<p><b>Note</b>  It is necessary to select in the parameter <i>Read input Group Objects after bus voltage recovery and download</i> the option <i>Yes</i> to update automatically the Group Object.</p>				
<p><b>Note</b>  To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> <ul style="list-style-type: none"> <li>Parameter <i>Function of the logic gate</i> \ Option <i>Threshold</i></li> <li>Parameter <i>Data point type of Group Object "Threshold input"</i> \ Option <i>Lux (DPT 9.004)</i></li> </ul> </li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.021</b>	<b>2 bytes</b>	<b>C W T U</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i>.                      The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.                      Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 240000 mA</li> </ul>				
<p><b>Note</b>                      It is necessary to select in the parameter <a href="#">Read input Group Objects after bus voltage recovery and download</a> the option <i>Yes</i> to update automatically the Group Object.</p>				
<p><b>Note</b>                      To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <i>Threshold</i></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <i>mA (DPT 9.021)</i></li> </ul> </li> </ul>				
<b>Threshold input</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.024</b>	<b>2 bytes</b>	<b>C W T U</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the input value for the function <i>Threshold</i>.                      The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.                      Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 10 kW</li> </ul>				
<p><b>Note</b>                      It is necessary to select in the parameter <a href="#">Read input Group Objects after bus voltage recovery and download</a> the option <i>Yes</i> to update automatically the Group Object.</p>				
<p><b>Note</b>                      To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <i>Threshold</i></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <i>kW (DPT 9.024)</i></li> </ul> </li> </ul>				
<b>Status input value between thresholds</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the value 1 on the bus (ABB i-bus® KNX) if the input value for the function <i>Threshold</i> is between the thresholds.                      More information: → <a href="#">Function Threshold, Page 45</a>.                      Telegram value:</p> <ul style="list-style-type: none"> <li>1 = Input value is between the thresholds (logically true)</li> <li>0 = Input value is not between the thresholds (logically false)</li> </ul>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <i>Threshold</i></li> <li>Parameter <a href="#">Monitor range between thresholds</a> \ Option <i>Yes</i></li> <li>Parameter <a href="#">Enable Group Objects "Status Result" and "Status Input value between thresholds"</a> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Status Result [Logic]</b>	<b>Logic/Threshold X: Logic</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the result of the function <i>Logic</i> on the bus (ABB i-bus® KNX).                      More information: → <a href="#">Function Logic, Page 44</a>.                      Telegram value:</p> <ul style="list-style-type: none"> <li>1 = Logically true</li> <li>0 = Logically false</li> </ul>				
<p><b>Note</b>                      The result can be inverted → parameter <a href="#">Invert result</a>.</p>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <i>AND / OR / Exclusive OR / GATE / 1 bit Inverter</i></li> <li>Parameter <a href="#">Enable Group Object "Status Result"</a> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Status Result [Threshold]</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the result of the function <i>Threshold</i> on the bus (ABB i-bus® KNX).                      More information: → <a href="#">Function Threshold, Page 45</a>.                      Telegram value:</p> <ul style="list-style-type: none"> <li>Dependent on the settings in the following parameters:                             <ul style="list-style-type: none"> <li><a href="#">Result if upper threshold is exceeded</a></li> <li><a href="#">Result if lower threshold is dropped below</a></li> </ul> </li> </ul>				
<p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <i>Threshold</i></li> <li>Parameter <a href="#">Enable Group Objects "Status Result" and "Status Input value between thresholds"</a> \ Option <i>Yes</i></li> </ul> </li> </ul>				


Function	Group Object name	Data point type	Length	Flags
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 13.010</b>	<b>4 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold.  The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.  Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 2147483647 Wh</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">Wh (DPT 13.010)</a></li> <li>Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 13.013</b>	<b>4 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold.  The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.  Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 2147483647 kWh</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">kWh (DPT 13.013)</a></li> <li>Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold.  The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.  Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 24 A</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">A (DPT 14.019)</a></li> <li>Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold.  The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.  Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 10000 W</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">W (DPT 14.056)</a></li> <li>Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 5.001</b>	<b>1 byte</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold.  The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.  Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 100 %</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">Percent (DPT 5.001)</a></li> <li>Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 5.010</b>	<b>1 byte</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold.  The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a>.  Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 255</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">Meter pulses (DPT 5.010)</a></li> <li>Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 7.001</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold. The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• 0 ... 65535</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">Meter pulses (DPT 7.001)</a></li> <li>– Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.001</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold. The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• -273 ... 670760 °C</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">Temperature (DPT 9.001)</a></li> <li>– Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.004</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold. The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• 0 ... 670760 lux</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">Lux (DPT 9.004)</a></li> <li>– Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.021</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold. The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• 0 ... 240000 mA</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">mA (DPT 9.021)</a></li> <li>– Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Change lower threshold</b>	<b>Logic/Threshold X: Threshold</b>	<b>DPT 9.024</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the lower threshold. The data point type for the Group Object depends on the option selected in the parameter <a href="#">Data point type of Group Object "Threshold input"</a> . Telegram value: <ul style="list-style-type: none"> <li>• 0 ... 10 kW</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">Threshold</a></li> <li>– Parameter <a href="#">Data point type of Group Object "Threshold input"</a> \ Option <a href="#">kW (DPT 9.024)</a></li> <li>– Parameter <a href="#">Change thresholds via Group Objects</a> \ Option <a href="#">Yes</a></li> </ul> </li> </ul>				
<b>Connection A</b>	<b>Logic/Threshold X: Logic</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), an input value for the function <a href="#">Logic</a> . More information: → <a href="#">Function Logic, Page 44</a> . Telegram value: <ul style="list-style-type: none"> <li>• 1 = Logically true</li> <li>• 0 = Logically false</li> </ul>				
<p><b>Note</b></p> <p>It is necessary to select in the parameter <a href="#">Read input Group Objects after bus voltage recovery and download</a> the option <a href="#">Yes</a> to update automatically the Group Object.</p>				
<p><b>Note</b></p> <p>To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p>				
Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable Logic/Threshold x-y</a> \ Option <a href="#">Yes</a></li> <li>• Parameter window <a href="#">Logic/Threshold</a> \ Parameter window <a href="#">Logic/Threshold x</a> \ Parameter <a href="#">Function of the logic gate</a> \ Option <a href="#">AND / OR / Exclusive OR / GATE / 1 bit Inverter</a></li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Connection B</b>	<b>Logic/Threshold X: Logic</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), an input value for the function <i>Logic</i>.                      More information: → <a href="#">Function Logic, Page 44</a>.                      Telegram value:</p> <ul style="list-style-type: none"> <li>• 1 = Logically true</li> <li>• 0 = Logically false</li> </ul> <p><b>Note</b>                      It is necessary to select in the parameter <i>Read input Group Objects after bus voltage recovery and download</i> the option <i>Yes</i> to update automatically the Group Object.</p> <p><b>Note</b>                      To update the input Group Objects after bus voltage recovery or download, the read flags must be set for the corresponding Group Objects of the sending device.</p> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>• Parameter window <i>Configuration</i> \ Parameter <i>Enable Logic/Threshold x-y</i> \ Option <i>Yes</i></li> <li>• Parameter window <i>Logic/Threshold</i> \ Parameter window <i>Logic/Threshold x</i> \ Parameter <i>Function of the logic gate</i> \ Option <i>AND / OR / Exclusive OR / GATE</i></li> </ul>				

## 8.5 Group Objects Energy group X

Function	Group Object name	Data point type	Length	Flags
<b>Reset total meter</b>	<b>Energy group X: Energy consumption</b>	<b>DPT 1.015</b>	<b>1 bit</b>	<b>C W</b>
<p>This Group Object is used to reset the total meter for the group to 0. The energy consumption calculation is restarted.                      Telegram value:</p> <ul style="list-style-type: none"> <li>• 1 = Reset meter</li> <li>• 0 = No function</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>• Parameter window <i>Configuration</i> \ Parameter <i>Enable energy group x</i> \ Option <i>Yes</i></li> <li>• Parameter window <i>Energy group X</i> \ Parameter window <i>Energy functions [group]</i> <ul style="list-style-type: none"> <li>– Parameter <i>Enable function Power calculation [group]</i> \ Option <i>Yes</i></li> <li>– Parameter <i>Enable function Energy consumption [group]</i> \ Option <i>Yes</i></li> </ul> </li> <li>• Parameter window <i>Energy group X</i> \ Parameter window <i>Energy consumption [group]</i> <ul style="list-style-type: none"> <li>– Parameter <i>Activate total meter [group]</i> \ Option <i>Yes</i></li> <li>– Parameter <i>Reset total meter via Group Object [Group]</i> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Set maximum threshold</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the maximum threshold.                      Telegram value:</p> <ul style="list-style-type: none"> <li>• 0.02 ... 240 A</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>• Parameter window <i>Configuration</i> \ Parameter <i>Enable energy group x</i> \ Option <i>Yes</i></li> <li>• Parameter window <i>Energy group X</i> \ Parameter window <i>Energy functions [group]</i> <ul style="list-style-type: none"> <li>– Parameter <i>Enable function Power calculation [group]</i> \ Option <i>Yes</i></li> <li>– Parameter <i>Enable function Load monitoring [group]</i> \ Option <i>Yes</i></li> </ul> </li> <li>• Parameter window <i>Energy group X</i> \ Parameter window <i>Load monitoring [group]</i> <ul style="list-style-type: none"> <li>– Parameter <i>Type of monitoring [group]</i> \ Option <i>General threshold monitoring (A ... F) / Maximum threshold monitoring (F)</i></li> <li>– Parameter <i>Measurement unit</i> \ Option <i>Current</i></li> <li>– Parameter <i>Change load thresholds via Group Objects [group]</i> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Set maximum threshold</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the maximum threshold.                      Telegram value:</p> <ul style="list-style-type: none"> <li>• 10 ... 55200 W</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>• Parameter window <i>Configuration</i> \ Parameter <i>Enable energy group x</i> \ Option <i>Yes</i></li> <li>• Parameter window <i>Energy group X</i> \ Parameter window <i>Energy functions [group]</i> <ul style="list-style-type: none"> <li>– Parameter <i>Enable function Power calculation [group]</i> \ Option <i>Yes</i></li> <li>– Parameter <i>Enable function Load monitoring [group]</i> \ Option <i>Yes</i></li> </ul> </li> <li>• Parameter window <i>Energy group X</i> \ Parameter window <i>Load monitoring [group]</i> <ul style="list-style-type: none"> <li>– Parameter <i>Type of monitoring [group]</i> \ Option <i>General threshold monitoring (A ... F) / Maximum threshold monitoring (F)</i></li> <li>– Parameter <i>Measurement unit</i> \ Option <i>Power</i></li> <li>– Parameter <i>Change load thresholds via Group Objects [group]</i> \ Option <i>Yes</i></li> </ul> </li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Set threshold Operation/Overload</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the Threshold Operation/Overload. Telegram value: <ul style="list-style-type: none"> <li>0.02 ... 240 A</li> </ul>				
 <b>Note</b> Optional				
Prerequisites for visibility <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F) / Operation monitoring (D)</i></li> <li>Parameter <a href="#">Measurement unit</a> \ Option <i>Current</i></li> <li>Parameter <a href="#">Change load thresholds via Group Objects [group]</a> \ Option Yes</li> </ul> </li> </ul>				
<b>Set threshold Operation/Overload</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the Threshold Operation/Overload. Telegram value: <ul style="list-style-type: none"> <li>10 ... 55200 W</li> </ul>				
Prerequisites for visibility <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F) / Operation monitoring (D)</i></li> <li>Parameter <a href="#">Measurement unit</a> \ Option <i>Power</i></li> <li>Parameter <a href="#">Change load thresholds via Group Objects [group]</a> \ Option Yes</li> </ul> </li> </ul>				
<b>Set threshold Standby/Underload</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the threshold Standby/Underload. Telegram value: <ul style="list-style-type: none"> <li>0.02 ... 240 A</li> </ul>				
Prerequisites for visibility <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F) / Standby monitoring (B)</i></li> <li>Parameter <a href="#">Measurement unit</a> \ Option <i>Current</i></li> <li>Parameter <a href="#">Change load thresholds via Group Objects [group]</a> \ Option Yes</li> </ul> </li> </ul>				
<b>Set threshold Standby/Underload</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the threshold Standby/Underload. Telegram value: <ul style="list-style-type: none"> <li>10 ... 55200 W</li> </ul>				
Prerequisites for visibility <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F) / Standby monitoring (B)</i></li> <li>Parameter <a href="#">Measurement unit</a> \ Option <i>Power</i></li> <li>Parameter <a href="#">Change load thresholds via Group Objects [group]</a> \ Option Yes</li> </ul> </li> </ul>				
<b>Set threshold Underload/Operation</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the threshold Underload/Operation. Telegram value: <ul style="list-style-type: none"> <li>0.02 ... 240 A</li> </ul>				
Prerequisites for visibility <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F) / Operation monitoring (D)</i></li> <li>Parameter <a href="#">Measurement unit</a> \ Option <i>Current</i></li> <li>Parameter <a href="#">Change load thresholds via Group Objects [group]</a> \ Option Yes</li> </ul> </li> </ul>				



Function	Group Object name	Data point type	Length	Flags
<b>Set threshold Underload/Operation</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the threshold Underload/Operation. Telegram value: <ul style="list-style-type: none"> <li>• 10 ... 55200 W</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>• Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>– Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> </ul> </li> <li>• Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F) / Operation monitoring (D)</i></li> <li>– Parameter <a href="#">Measurement unit</a> \ Option <i>Power</i></li> <li>– Parameter <a href="#">Change load thresholds via Group Objects [group]</a> \ Option Yes</li> </ul> </li> </ul>				
<b>Start total meter date</b>	<b>Energy group X: Energy consumption</b>	<b>DPT 11.001</b>	<b>3 bytes</b>	<b>C R T</b>
This Group Object sends the start date of the group energy consumption calculation on the bus (ABB i-bus® KNX). Telegram value: <ul style="list-style-type: none"> <li>• DD.MM.YYYY</li> </ul> <div style="background-color: #f0f0f0; padding: 5px;"> <p><b>Note</b></p> <p>For this function, the device time must be synchronized via one of the following Group Objects via the bus (ABB i-bus® KNX):</p> <ul style="list-style-type: none"> <li>• <a href="#">Set date</a></li> <li>• <a href="#">Set date/time</a></li> </ul> <p>If valid device time is not available, this Group Object sends the date 01.01.2000.</p> </div> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>• Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>– Parameter <a href="#">Enable function Energy consumption [group]</a> \ Option Yes</li> </ul> </li> <li>• Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy consumption [group]</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Activate total meter [group]</a> \ Option Yes</li> <li>– Parameter <a href="#">Send timestamp of total meter start [group]</a> \ Option Yes</li> <li>– Parameter <a href="#">Data point type timestamp [group]</a> \ Option <i>Date (DPT 11.001)/time (10.001)</i></li> </ul> </li> </ul>				
<b>Start total meter Date/Time</b>	<b>Energy group X: Energy consumption</b>	<b>DPT 19.001</b>	<b>8 bytes</b>	<b>C R T</b>
This Group Object sends the start date and the start time of the group energy consumption calculation on the bus (ABB i-bus® KNX). Telegram value: <ul style="list-style-type: none"> <li>• Coded 8-byte value</li> </ul> <div style="background-color: #f0f0f0; padding: 5px;"> <p><b>Note</b></p> <p>For this function, the device time must be synchronized via one of the following Group Objects via the bus (ABB i-bus® KNX):</p> <ul style="list-style-type: none"> <li>• <a href="#">Set date</a> and <a href="#">Set time</a></li> <li>• <a href="#">Set date/time</a></li> </ul> <p>If a valid device time is not available, this Group Object sends the value \$00 \$00 \$00 \$00 \$00 \$00 \$BE \$00 (hex).</p> </div> <div style="background-color: #f0f0f0; padding: 5px;"> <p><b>Note</b></p> <p>The weekday is not output by the device (bit 10 = value 0 = invalid). The information "Weekday invalid" is output via the bits 33 ... 35 (value 000).</p> </div> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>• Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>– Parameter <a href="#">Enable function Energy consumption [group]</a> \ Option Yes</li> </ul> </li> <li>• Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy consumption [group]</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Activate total meter [group]</a> \ Option Yes</li> <li>– Parameter <a href="#">Send timestamp of total meter start [group]</a> \ Option Yes</li> <li>– Parameter <a href="#">Data point type timestamp [group]</a> \ Option <i>Date/Time (DPT 19.001)</i></li> </ul> </li> </ul>				
<b>Start total meter time</b>	<b>Energy group X: Energy consumption</b>	<b>DPT 10.001</b>	<b>3 bytes</b>	<b>C R T</b>
This Group Object sends the start time for the group energy consumption calculation on the bus (ABB i-bus® KNX). Telegram value: <ul style="list-style-type: none"> <li>• DD:hh:mm:ss</li> </ul> <div style="background-color: #f0f0f0; padding: 5px;"> <p><b>Note</b></p> <p>For this function, the device time must be synchronized via one of the following Group Objects via the bus (ABB i-bus® KNX):</p> <ul style="list-style-type: none"> <li>• <a href="#">Set time</a></li> <li>• <a href="#">Set date/time</a></li> </ul> <p>If valid device time is not available, this Group Object sends the time 00:00:00.</p> </div> <div style="background-color: #f0f0f0; padding: 5px;"> <p><b>Note</b></p> <p>The weekday (DD) is not output by the device (value 00 = invalid).</p> </div> Prerequisites for visibility <ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>• Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>– Parameter <a href="#">Enable function Energy consumption [group]</a> \ Option Yes</li> </ul> </li> <li>• Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy consumption [group]</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Activate total meter [group]</a> \ Option Yes</li> <li>– Parameter <a href="#">Send timestamp of total meter start [group]</a> \ Option Yes</li> <li>– Parameter <a href="#">Data point type timestamp [group]</a> \ Option <i>Date (DPT 11.001)/time (10.001)</i></li> </ul> </li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Status Total meter energy consumption</b>	<b>Energy group X: Energy consumption</b>	<b>DPT 13.010</b>	<b>4 bytes</b>	<b>C R T</b>
<p>This Group Object sends the calculated energy consumption from the energy group on the bus (ABB i-bus® KNX). The energy consumption from the energy group corresponds to the total of all the energy values for the channels assigned.</p> <p>Telegram value:</p> <ul style="list-style-type: none"> <li>Complete range DPT 13.010</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Energy consumption [group]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy consumption [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Activate total meter [group]</a> \ Option Yes</li> <li>Parameter <a href="#">Energy displaying unit [group]</a> \ Option <i>Wh (DPT 13.010)</i></li> </ul> </li> </ul>				
<b>Status Total meter energy consumption</b>	<b>Energy group X: Energy consumption</b>	<b>DPT 13.013</b>	<b>4 bytes</b>	<b>C R T</b>
<p>This Group Object sends the energy consumption from the energy group on the bus (ABB i-bus® KNX). The energy consumption from the energy group corresponds to the total of all the energy values for the channels assigned.</p> <p>Telegram value:</p> <ul style="list-style-type: none"> <li>Complete range DPT 13.013</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Energy consumption [group]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy consumption [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Activate total meter [group]</a> \ Option Yes</li> <li>Parameter <a href="#">Energy displaying unit [group]</a> \ Option <i>kWh (DPT 13.013)</i></li> </ul> </li> </ul>				
<b>Status Load</b>	<b>Energy group X: Load monitoring</b>	<b>Non DPT</b>	<b>1 byte</b>	<b>C R T</b>
<p>This Group Object sends the status of the group load on the bus (ABB i-bus® KNX).</p> <p>Telegram value:</p> <ul style="list-style-type: none"> <li>→ <a href="#">Coding, Group Object "Status Load", Page 232</a></li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> \ Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [group]</a> \ Option <i>1 byte</i></li> </ul> </li> </ul>				
<b>Status Load On/Off</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the status of the group load (load On/Off) on the bus (ABB i-bus® KNX).</p> <p>Telegram value for option <i>General threshold monitoring (A ... F)</i>:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when load On/Off [group]</a></li> </ul> <p>Telegram value for option <i>On/Off status monitoring (A)</i>:</p> <ul style="list-style-type: none"> <li>1 = On</li> <li>0 = Off</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> \ Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>On/Off status monitoring (A)</i></li> </ul> </li> <li>or</li> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [group]</a> \ Option <i>Bits</i></li> </ul>				
<b>Status Load in operation</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the status of the group load (load in operation yes/no) on the bus (ABB i-bus® KNX).</p> <p>Telegram value for option <i>General threshold monitoring (A ... F)</i>:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when load in operation [group]</a></li> </ul> <p>Telegram value for option <i>Operation monitoring (D)</i>:</p> <ul style="list-style-type: none"> <li>1 = Yes</li> <li>0 = No</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> \ Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>Operation monitoring (D)</i></li> </ul> </li> <li>or</li> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [group]</a> \ Option <i>Bits</i></li> </ul>				



Function	Group Object name	Data point type	Length	Flags
<b>Status Load in standby</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the status of the group load (load in standby yes/no) on the bus (ABB i-bus® KNX).            Telegram value for option <i>General threshold monitoring (A ... F)</i>:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when load in standby [group]</a></li> </ul> <p>Telegram value for option <i>Standby monitoring (B)</i>:</p> <ul style="list-style-type: none"> <li>1 = Yes</li> <li>0 = No</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> \ Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>Standby monitoring (B)</i></li> </ul> </li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [group]</a> \ Option <i>Bits</i></li> </ul>				
<b>Status Load in overload</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the status of the group load (load in overload yes/no) on the bus (ABB i-bus® KNX).            Telegram value:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when load in overload [group]</a></li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> \ Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [group]</a> \ Option <i>Bits</i></li> </ul> </li> </ul>				
<b>Status Load in underload</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the status of the group load (load in underload yes/no) on the bus (ABB i-bus® KNX).            Telegram value:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when load in underload [group]</a></li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> \ Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [group]</a> \ Option <i>Bits</i></li> </ul> </li> </ul>				
<b>Status Load maximum threshold exceeded</b>	<b>Energy group X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the status of the group load (load has exceeded maximum threshold yes/no) on the bus (ABB i-bus® KNX).            Telegram value for option <i>General threshold monitoring (A ... F)</i>:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when maximum threshold exceeded [group]</a></li> </ul> <p>Telegram value for option <i>Maximum threshold monitoring (F)</i>:</p> <ul style="list-style-type: none"> <li>1 = Yes</li> <li>0 = No</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> \ Parameter <a href="#">Enable function Load monitoring [group]</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Load monitoring [group]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>Maximum threshold monitoring (F)</i></li> </ul> </li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [group]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [group]</a> \ Option <i>Bits</i></li> </ul>				
<b>Status Power</b>	<b>Energy group X: Power calculation</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C R T</b>
<p>This Group Object sends the power value from the energy group on the bus (ABB i-bus® KNX). The power value from the energy group corresponds to the total of all the power values for the channels assigned.            Telegram value:</p> <ul style="list-style-type: none"> <li>Complete range DPT 14.056</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> \ Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Power calculation [group]</a> \ Parameter <a href="#">Power displaying unit [group]</a> \ Option <i>W (DPT 14.056)</i></li> </ul>				
<b>Status Power</b>	<b>Energy group X: Power calculation</b>	<b>DPT 9.024</b>	<b>2 bytes</b>	<b>C R T</b>
<p>This Group Object sends the power value from the energy group on the bus (ABB i-bus® KNX). The power value from the energy group corresponds to the total of all the power values for the channels assigned.            Telegram value:</p> <ul style="list-style-type: none"> <li>Complete range DPT 9.024</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Energy functions [group]</a> \ Parameter <a href="#">Enable function Power calculation [group]</a> \ Option Yes</li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Power calculation [group]</a> \ Parameter <a href="#">Power displaying unit [group]</a> \ Option <i>kW (DPT 9.024)</i></li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Status Current</b>	<b>Energy group X: Current measurement</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C R T</b>
This Group Object sends the current from the energy group on the bus (ABB i-bus® KNX). The current from the energy group corresponds to the total of all the currents for the channels assigned. Telegram value: <ul style="list-style-type: none"> <li>Complete range DPT 14.019</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Current measurement [group]</a> \ Parameter <a href="#">Current displaying unit [group]</a> \ Option <i>A (DPT 14.019)</i></li> </ul>				
<b>Status Current</b>	<b>Energy group X: Current measurement</b>	<b>DPT 9.021</b>	<b>2 bytes</b>	<b>C R T</b>
This Group Object sends the current from the energy group on the bus (ABB i-bus® KNX). The current from the energy group corresponds to the total of all the currents for the channels assigned. Telegram value: <ul style="list-style-type: none"> <li>Complete range DPT 9.021</li> </ul> Prerequisites for visibility <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable energy group x</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Energy group X</a> \ Parameter window <a href="#">Current measurement [group]</a> \ Parameter <a href="#">Current displaying unit [group]</a> \ Option <i>mA (DPT 9.021)</i></li> </ul>				

## 8.6 Group Objects "Channel X": Switch

Function	Group Object name	Data point type	Length	Flags
<b>Flashing</b>	<b>Channel X: Switch</b>	<b>DPT 1.001</b>	<b>1 bit</b>	<b>C W</b>
This Group Object is used to start/stop, via the bus (ABB i-bus® KNX), the flashing. More information: → <a href="#">Function Flashing, Page 63</a> . Telegram value: <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Flashing if Group Object "Flashing" is</a></li> </ul> <div style="background-color: #f0f0f0; padding: 5px;"> <p><b>Note</b> The relays can perform only a limited number of switching operations per minute. Frequent switching can cause a switching delay. More information → <a href="#">Technical data</a>.</p> </div> Prerequisites for visibility <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Time</a> \ Option <i>Flashing</i></li> </ul>				
<b>Block delay for switching on and off</b>	<b>Channel X: Switch</b>	<b>DPT 1.003</b>	<b>1 bit</b>	<b>C W</b>
This Group Object is used to enable or block, via the bus (ABB i-bus® KNX), the function <a href="#">Delay for switching on and off</a> . Telegram value: <ul style="list-style-type: none"> <li>1 = Block function <a href="#">Delay for switching on and off</a></li> <li>0 = Enable function <a href="#">Delay for switching on and off</a></li> </ul> <div style="background-color: #f0f0f0; padding: 5px;"> <p><b>Note</b> If a delay was set in a Scene assignment in the parameter <a href="#">Delay</a>, this Group Object is also used to block the delay of the execution of the Scene.</p> </div> Prerequisites for visibility <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Time</a> \ Option <i>Delay for switching on and off</i></li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Delay for switching on and off</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Block delay for switching on and off via Group Object</a> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Switch</b>	<b>Channel X: Switch</b>	<b>DPT 1.001</b>	<b>1 bit</b>	<b>C W</b>
This Group Object is used to receive a switch telegram via the bus (ABB i-bus® KNX). The switching behavior depends on the setting in the parameter <a href="#">Reaction of output</a> . NO contact telegram value: <ul style="list-style-type: none"> <li>1 = Close relay contact</li> <li>0 = Open relay contact</li> </ul> NC contact telegram value: <ul style="list-style-type: none"> <li>1 = Open relay contact</li> <li>0 = Close relay contact</li> </ul> <div style="background-color: #f0f0f0; padding: 5px;"> <p><b>Note</b> Due to the priorities, a switching command does not necessarily change the position of the relay contact. Each relay can perform only a limited number of switching operations per minute. Frequent switching can cause a switching delay. More information → <a href="#">Technical data</a>.</p> </div> Prerequisites for visibility <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Block</b>	<b>Channel X: Switch</b>	<b>DPT 1.003</b>	<b>1 bit</b>	<b>C W</b>

This Group Object is used to Activate/Deactivate the safety function *Block*.

More information: → [Block, Page 43](#).

Telegram value:

- 1 = Activate block
- 0 = Deactivate block

**Note**

The safety function can also be activated/deactivated via i-bus® Tool.

Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Functions Switch Actuator](#) \ Parameter [Enable function Safety](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Safety](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Switching reaction on block](#) \ Option *On / Off / Unchanged (block)*

<b>Status Switch</b>	<b>Channel X: Switch</b>	<b>DPT 1.011</b>	<b>1 bit</b>	<b>C R T</b>
----------------------	--------------------------	------------------	--------------	--------------

This Group Object sends the position of the relay contact on the bus (ABB i-bus® KNX).

The send behavior depends on the setting in the parameter [Send value of Group Object "Status Switch"](#).

Telegram value:

- Depends on the setting in the parameter [Value of Group Object "Status Switch"](#)

Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Basic settings \[Switch Actuator\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Feedback of contact position via Group Object "Status Switch"](#) \ Option *Yes*

<b>Status byte all active priorities</b>	<b>Channel X: Switch</b>	<b>nonDPT</b>	<b>1 byte</b>	<b>C R T</b>
--	--------------------------	---------------	---------------	--------------

This Group Object sends the status of all active priorities on the bus (ABB i-bus® KNX).

The send behavior depends on the setting in the parameter [Send value of Group Objects "Status byte" \[Switch Actuator\]](#).

Telegram value:

- Bit 0: not used
  - Telegram value is always 0
- Bit 1: Block
  - 1 = Active
  - 0 = Inactive
- Bit 2: forced operation
  - 1 = Active
  - 0 = Inactive
- Bit 3: Safety priority 1
  - 1 = Active
  - 0 = Inactive
- Bit 4: Safety priority 2
  - 1 = Active
  - 0 = Inactive
- Bit 5: Safety priority 3
  - 1 = Active
  - 0 = Inactive
- Bit 6: Load shedding
  - 1 = Active
  - 0 = Inactive
- Bit 7: i-bus® Tool
  - 1 = Active
  - 0 = Inactive

More information: → [Table of values, Group Object "Status byte all active priorities", Page 237](#).

Prerequisites for visibility

- Parameter window [Configuration](#) \ Parameter [Enable output X](#) \ Option *Yes*
- Parameter window [Switch Actuator X](#) \ Parameter window [Basic settings \[Switch Actuator\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Enable Group Objects "Status byte" \[Switch Actuator\]](#) \ Option *Yes, all active priorities*

Function	Group Object name	Data point type	Length	Flags
<b>Status byte highest active priority</b>	<b>Channel X: Switch</b>	<b>nonDPT</b>	<b>1 byte</b>	<b>C R T</b>
<p>This Group Object sends the status of the highest active priority on the bus (ABB i-bus® KNX).            The send behavior depends on the setting in the parameter <a href="#">Send value of Group Objects "Status byte" [Switch Actuator]</a>.            Telegram value:</p> <ul style="list-style-type: none"> <li>0: No priority active (operating mode <i>KNX operation</i>)</li> <li>1: Not used</li> <li>2: Block active</li> <li>3: Forced operation active</li> <li>4: Safety priority 1 active</li> <li>5: Safety priority 2 active</li> <li>6: Safety priority 3 active</li> <li>7: Load shedding active</li> <li>8: i-bus® Tool active</li> <li>9: Staircase lighting permanent on active</li> <li>10: Flashing active</li> <li>11 ... 255: Not used</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Basic settings [Switch Actuator]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Enable Group Objects "Status byte" [Switch Actuator]</a> \ Option <i>Yes, highest active priority</i></li> </ul> </li> </ul>				
<b>Scene 1...64</b>	<b>Channel X: Switch</b>	<b>DPT 18.001</b>	<b>1 byte</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a Scene telegram.            The Scene telegram includes the Scene number and information about whether the Scene is recalled or the position of the relay contact is saved in the Scene.            A Scene number is assigned in the parameter window <a href="#">Scene assignments [Switch Actuator]</a>. If the corresponding Scene number is parametrized for an output, the Scene is recalled or saved, depending on the telegram value.            Telegram value:</p> <ul style="list-style-type: none"> <li>0 ... 63 = Recall Scene x (x = 1 ... 64)</li> <li>128 ... 191 = Save Scene x (x = 1 ... 64)</li> </ul> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>→ <a href="#">Function Scenes, Page 59</a></li> <li>→ <a href="#">Function diagram Switch Actuator, Page 42</a></li> <li>→ <a href="#">Table of values, Group Object "Scene 1 ... 64", Page 239</a></li> </ul> <p><b>Note</b>            A telegram does not necessarily result in a change to the position of the relay contact due to the priorities.</p> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Scenes [Switch Actuator]</a> \ Option <i>Yes</i></li> </ul>				
<b>Recall Scene assignment x</b>	<b>Channel X: Switch</b>	<b>DPT 1.017</b>	<b>1 bit</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a Scene assignment.            Telegram value:</p> <ul style="list-style-type: none"> <li>1 = Recall scene assignment x (x = 1 ... 4)</li> <li>0 = Recall Scene assignment x (x = 1 ... 4)</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Scenes [Switch Actuator]</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Scene assignments [Switch Actuator]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Enable Scene assignment x [Switch Actuator]</a> \ Option <i>Yes</i></li> <li>Parameter <a href="#">Recall Scene x also via 1-bit Group Object</a> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Staircase lighting permanent on</b>	<b>Channel X: Switch</b>	<b>DPT 1.001</b>	<b>1 bit</b>	<b>C W</b>
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), the command to start/stop permanent on operation.            If the function <a href="#">Staircase lighting</a> is active, the output can be permanently switched on via this Group Object. Other functions continue to run in the background, but they do not trigger any switching action.            Telegram value:</p> <ul style="list-style-type: none"> <li>1 = Start permanent on operation</li> <li>0 = End permanent on operation</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Time</a> \ Option <a href="#">Staircase lighting</a></li> </ul>				
<b>Warning staircase lighting</b>	<b>Channel X: Switch</b>	<b>DPT 1.001</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends a pre-warning on the bus (ABB i-bus® KNX) before switching off the output.            More information: → <a href="#">Function Staircase lighting, Page 60</a>.            Telegram value:</p> <ul style="list-style-type: none"> <li>1 = Warning staircase lighting active</li> <li>0 = Warning staircase lighting inactive</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Time</a> \ Option <a href="#">Staircase lighting</a></li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Staircase lighting</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Warning before switching off the staircase lighting</a> \ Options <i>Via Group Object / Via Group Object and short switching off</i></li> </ul> </li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Block staircase lighting</b>	<b>Channel X: Switch</b>	<b>DPT 1.003</b>	<b>1 bit</b>	<b>C W</b>
This Group Object is used to enable or block, via the bus (ABB i-bus® KNX), the function <i>Staircase lighting</i> . Telegram value:				
<ul style="list-style-type: none"> <li>• 1 = Block function <i>Staircase lighting</i></li> <li>• 0 = Enable function <i>Staircase lighting</i></li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>• Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Time</a> \ Option <i>Staircase lighting</i></li> <li>• Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Staircase lighting</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>– Parameter <a href="#">Block staircase lighting via Group Object</a> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Staircase lighting time</b>	<b>Channel X: Switch</b>	<b>DPT 7.005</b>	<b>2 bytes</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), the duration of the staircase lighting time. Telegram value:				
<ul style="list-style-type: none"> <li>• 0 ... 65,535 s</li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>• Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Time</a> \ Option <i>Staircase lighting</i></li> <li>• Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Staircase lighting</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>– Parameter <a href="#">Change staircase lighting time via Group Object</a> \ Option <i>Yes</i></li> </ul> </li> </ul>				
<b>Forced operation, 1-bit</b>	<b>Channel X: Switch</b>	<b>DPT 1.003</b>	<b>1 bit</b>	<b>C W</b>
This Group Object is used to Activate/Deactivate 1-bit forced operation via the bus (ABB i-bus® KNX). For more information, see: → <a href="#">forced operation, Page 44</a> . Telegram value:				
<ul style="list-style-type: none"> <li>• Depends on the setting in the parameter <a href="#">Forced operation (1 bit / 2 bit) [Switch Actuator]</a></li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>• Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Safety</a> \ Option <i>Yes</i></li> <li>• Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Safety</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>– Parameter <a href="#">Forced operation (1 bit / 2 bit) [Switch Actuator]</a> \ Options <i>Activated 1 bit – 0 active / Activated 1 bit – 1 active</i></li> </ul> </li> </ul>				
<b>Forced operation, 2-bit</b>	<b>Channel X: Switch</b>	<b>DPT 2.001</b>	<b>2 bit</b>	<b>C W</b>
This Group Object is used to Activate/Deactivate 2-bit forced operation via the bus (ABB i-bus® KNX). For more information, see: → <a href="#">forced operation, Page 44</a> . Telegram value (bit 1   bit 0):				
<ul style="list-style-type: none"> <li>• 0   0 = Forced operation inactive</li> <li>• 0   1 = Forced operation inactive</li> <li>• 1   0 = Forced operation active "OFF"</li> <li>• 1   1 = Forced operation active "ON"</li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>• Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Safety</a> \ Option <i>Yes</i></li> <li>• Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Safety</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>– Parameter <a href="#">Forced operation (1 bit / 2 bit) [Switch Actuator]</a> \ Option <i>Activated 2 bit</i></li> </ul> </li> </ul>				

## 8.7 Group Objects "Channel X": Load shedding

Function	Group Object name	Data point type	Length	Flags
<b>Set load shedding stage</b>	<b>Channel X: Load shedding</b>	<b>DPT 236.001</b>	<b>1 byte</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), the load shedding stage for the channel. More information: → <a href="#">Function Load shedding, Page 47</a> . Telegram value:				
<ul style="list-style-type: none"> <li>• → <a href="#">Coding, Group Object "Set load shedding stage", Page 232</a></li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>• Parameter window <a href="#">Configuration</a> \ Parameter <a href="#">Enable output X</a> \ Option <i>Yes</i></li> <li>• Parameter window <a href="#">Device settings</a> \ Parameter <a href="#">Enable central Group Object "Receive load shedding stage"</a> \ Option <i>Yes</i></li> <li>• Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Functions Switch Actuator</a> \ Parameter <a href="#">Enable function Load shedding</a> \ Option <i>Yes</i></li> <li>• Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load shedding</a> <ul style="list-style-type: none"> <li>– Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>– Parameter <a href="#">Change load shedding stage via Group Object</a> \ Option <i>Yes</i></li> </ul> </li> </ul>				

Function	Group Object name	Data point type	Length	Flags
Status Load shedding	Channel X: Load shedding	DPT 1.011	1 bit	C R T
<p>This Group Object sends the status of the load shedding on the bus (ABB i-bus® KNX).            The send behavior depends on the setting in the parameter <i>Send value of Group Object "Status Load shedding"</i>.            Telegram value:</p> <ul style="list-style-type: none"> <li>1 = Load shedding active</li> <li>0 = Load shedding inactive</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> \ Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter window <i>Device settings</i> \ Parameter <i>Enable central Group Object "Receive load shedding stage"</i> \ Option Yes</li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Functions Switch Actuator</i> \ Parameter <i>Enable function Load shedding</i> \ Option Yes</li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Load shedding</i> <ul style="list-style-type: none"> <li>Parameter <i>Parameter setting</i> \ Option <i>Individual</i></li> <li>Parameter <i>Enable group object "Status Load shedding"</i> \ Option Yes</li> </ul> </li> </ul>				

## 8.8 Group Objects "Channel X": Current measurement

Function	Group Object name	Data point type	Length	Flags
Status Current	Channel X: Current measurement	DPT 14.019	4 bytes	C R T
<p>This Group Object sends the current for the channel measured on the bus (ABB i-bus® KNX).            Telegram value:</p> <ul style="list-style-type: none"> <li>Complete range DPT 14.019</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter <i>Enable energy function x</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Current measurement [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Parameter setting</i> \ Option <i>Individual</i></li> <li>Parameter <i>Current displaying unit [channel]</i> \ Option <i>A (DPT 14.019)</i></li> </ul> </li> </ul>				
Status Current	Channel X: Current measurement	DPT 9.021	2 bytes	C R T
<p>This Group Object sends the current for the channel measured on the bus (ABB i-bus® KNX).            Telegram value:</p> <ul style="list-style-type: none"> <li>Complete range DPT 9.021</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter <i>Enable energy function x</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Current measurement [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Parameter setting</i> \ Option <i>Individual</i></li> <li>Parameter <i>Current displaying unit [channel]</i> \ Option <i>mA (DPT 9.021)</i></li> </ul> </li> </ul>				

## 8.9 Group Objects "Channel X": Power calculation

Function	Group Object name	Data point type	Length	Flags
Status Power	Channel X: Power calculation	DPT 14.056	4 bytes	C R T
<p>This Group Object sends the calculated power value for the channel on the bus (ABB i-bus® KNX).            Telegram value:</p> <ul style="list-style-type: none"> <li>Complete range DPT 14.056</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter <i>Enable energy function x</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Energy functions [channel]</i> \ Parameter <i>Enable function Power calculation [channel]</i> \ Option Yes</li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Power calculation [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Parameter setting</i> \ Option <i>Individual</i></li> <li>Parameter <i>Power displaying unit [channel]</i> \ Option <i>W (DPT 14.056)</i></li> </ul> </li> </ul>				
Status Power	Channel X: Power calculation	DPT 9.024	2 bytes	C R T
<p>This Group Object sends the calculated power value for the channel on the bus (ABB i-bus® KNX).            Telegram value:</p> <ul style="list-style-type: none"> <li>Complete range DPT 9.024</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter <i>Enable energy function x</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Energy functions [channel]</i> \ Parameter <i>Enable function Power calculation [channel]</i> \ Option Yes</li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Power calculation [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Parameter setting</i> \ Option <i>Individual</i></li> <li>Parameter <i>Power displaying unit [channel]</i> \ Option <i>kW (DPT 9.024)</i></li> </ul> </li> </ul>				



Function	Group Object name	Data point type	Length	Flags
<b>Voltage value</b>	<b>Channel X: Power calculation</b>	DPT 14.027	4 bytes	C W
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new voltage value.</p> <p>Telegram value:</p> <ul style="list-style-type: none"> <li>Complete range DPT 14.027</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> \ Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Power calculation [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Change values Voltage/Power factor via Group Objects</a> \ Option Yes</li> </ul> </li> </ul>				
<b>Power factor (cos phi)</b>	<b>Channel X: Power calculation</b>	DPT 14.057	4 bytes	C W
<p>This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the power factor.</p> <p>Telegram value:</p> <ul style="list-style-type: none"> <li>Complete range DPT 14.057</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> \ Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Power calculation [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Change values Voltage/Power factor via Group Objects</a> \ Option Yes</li> </ul> </li> </ul>				

## 8.10 Group Objects "Channel X": Energy consumption

Function	Group Object name	Data point type	Length	Flags
<b>Reset total meter</b>	<b>Channel X: Energy consumption</b>	DPT 1.015	1 bit	C W
<p>This Group Object is used to reset the total meter for the channel to 0. The energy consumption calculation is restarted.</p> <p>Telegram value:</p> <ul style="list-style-type: none"> <li>1 = Reset meter</li> <li>0 = No function</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Energy consumption [channel]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy consumption [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Activate total meter [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Reset total meter via Group Object [channel]</a> \ Option Yes</li> </ul> </li> </ul>				
<b>Start total meter date</b>	<b>Channel X: Energy consumption</b>	DPT 11.001	3 bytes	C R T
<p>This Group Object sends the start date for the channel energy consumption calculation on the bus (ABB i-bus® KNX).</p> <p>Telegram value:</p> <ul style="list-style-type: none"> <li>DD.MM.YYYY</li> </ul> <div style="background-color: #f0f0f0; padding: 5px;"> <p><b>Note</b></p> <p>For this function, the device time must be synchronized via one of the following Group Objects via the bus (ABB i-bus® KNX):</p> <ul style="list-style-type: none"> <li><a href="#">Set time</a></li> <li><a href="#">Set date/time</a></li> </ul> <p>If valid device time is not available, this Group Object sends the date 01.01.2000.</p> </div> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Energy consumption [channel]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy consumption [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Activate total meter [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Send timestamp of total meter start [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Data point type timestamp [channel]</a> \ Option <i>Date (DPT 11.001)/time (10.001)</i></li> </ul> </li> </ul>				

Function	Group Object name	Data point type	Length	Flags
Start total meter Date/Time	Channel X: Energy consumption	DPT 19.001	8 bytes	C R T

This Group Object sends the start date for the channel energy consumption calculation on the bus (ABB i-bus® KNX).

Telegram value:

- Coded 8-byte value

**Note**  
For this function, the device time must be synchronized via one of the following Group Objects via the bus (ABB i-bus® KNX):

- [Set date](#) and [Set time](#)
- [Set date/time](#)

If a valid device time is not available, this Group Object sends the value \$00 \$00 \$00 \$00 \$00 \$00 \$BE \$00 (hex).

**Note**  
The weekday is not output by the device (bit 10 = value 0 = invalid). The information "Weekday invalid" is output via the bits 33 ... 35 (value 000).

Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
  - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Activate total meter \[channel\]](#) \ Option Yes
  - Parameter [Send timestamp of total meter start \[channel\]](#) \ Option Yes
  - Parameter [Data point type timestamp \[channel\]](#) \ Option Date/Time (DPT 19.001)

Function	Group Object name	Data point type	Length	Flags
Start total meter time	Channel X: Energy consumption	DPT 10.001	3 bytes	C R T

This Group Object sends the start time for the channel energy consumption calculation on the bus (ABB i-bus® KNX).

Telegram value:

- DD:hh:mm:ss

**Note**  
For this function, the device time must be synchronized via one of the following Group Objects via the bus (ABB i-bus® KNX):

- [Set time](#)
- [Set date/time](#)

If valid device time is not available, this Group Object sends the time 00:00:00.

**Note**  
The weekday (DD) is not output by the device (value 00 = invalid).

Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
  - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Activate total meter \[channel\]](#) \ Option Yes
  - Parameter [Send timestamp of total meter start \[channel\]](#) \ Option Yes
  - Parameter [Data point type timestamp \[channel\]](#) \ Option Date (DPT 11.001)/time (10.001)

Function	Group Object name	Data point type	Length	Flags
Start/Stop intermediate meter	Channel X: Energy consumption	DPT 1.010	1 bit	C W

This Group Object is used to receive, via the bus (ABB i-bus® KNX), a telegram for controlling the intermediate meter.

More information: → [Function Energy consumption, Page 54](#).

Telegram value:

- 1 = Start/send value
- 0 = Stop/send value

Prerequisites for visibility

- Parameter window [Configuration](#)
  - Parameter [Enable output X](#) \ Option Yes
  - Parameter [Enable energy function x](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy functions \[channel\]](#)
  - Parameter [Enable function Power calculation \[channel\]](#) \ Option Yes
  - Parameter [Enable function Energy consumption \[channel\]](#) \ Option Yes
- Parameter window [Switch Actuator X](#) \ Parameter window [Energy consumption \[channel\]](#)
  - Parameter [Parameter setting](#) \ Option *Individual*
  - Parameter [Activate total meter \[channel\]](#) \ Option Yes
  - Parameter [Activate intermediate meter](#) \ Option Yes



Function	Group Object name	Data point type	Length	Flags
<b>Status Total meter energy consumption</b>	<b>Channel X: Energy consumption</b>	<b>DPT 13.010</b>	<b>4 bytes</b>	<b>C R T</b>
This Group Object sends the calculated energy consumption for the channel on the bus (ABB i-bus® KNX). Telegram value:				
<ul style="list-style-type: none"> <li>Complete range DPT 13.010</li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Energy consumption [channel]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy consumption [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Activate total meter [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Energy displaying unit [channel]</a> \ Option <i>Wh (DPT 13.010)</i></li> </ul> </li> </ul>				
<b>Status Total meter energy consumption</b>	<b>Channel X: Energy consumption</b>	<b>DPT 13.013</b>	<b>4 bytes</b>	<b>C R T</b>
This Group Object sends the calculated energy consumption for the channel on the bus (ABB i-bus® KNX). Telegram value:				
<ul style="list-style-type: none"> <li>Complete range DPT 13.013</li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Energy consumption [channel]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy consumption [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Activate total meter [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Energy displaying unit [channel]</a> \ Option <i>kWh (DPT 13.013)</i></li> </ul> </li> </ul>				
<b>Status Intermediate meter energy consumption</b>	<b>Channel X: Energy consumption</b>	<b>DPT 13.010</b>	<b>4 bytes</b>	<b>C R T</b>
This Group Object sends the energy consumption calculated within an interval on the bus (ABB i-bus® KNX). More information: → <a href="#">Function Energy consumption, Page 54</a> . Telegram value:				
<ul style="list-style-type: none"> <li>Complete range DPT 13.010</li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Energy consumption [channel]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy consumption [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Activate total meter [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Activate intermediate meter</a> \ Option Yes</li> <li>Parameter <a href="#">Energy displaying unit [channel]</a> \ Option <i>Wh (DPT 13.010)</i></li> </ul> </li> </ul>				
<b>Status Intermediate meter energy consumption</b>	<b>Channel X: Energy consumption</b>	<b>DPT 13.013</b>	<b>4 bytes</b>	<b>C R T</b>
This Group Object sends the energy consumption calculated within an interval on the bus (ABB i-bus® KNX). More information: → <a href="#">Function Energy consumption, Page 54</a> . Telegram value:				
<ul style="list-style-type: none"> <li>Complete range DPT 13.013</li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Energy consumption [channel]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy consumption [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Activate total meter [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Activate intermediate meter</a> \ Option Yes</li> <li>Parameter <a href="#">Energy displaying unit [channel]</a> \ Option <i>kWh (DPT 13.013)</i></li> </ul> </li> </ul>				

## 8.11 Group Objects "Channel X": Load monitoring

Function	Group Object name	Data point type	Length	Flags	
<b>Set maximum threshold</b>	<b>Channel X: Load monitoring</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C</b>	<b>W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the maximum threshold.					
Telegram value:					
<ul style="list-style-type: none"> <li>0.02 ... 20 A</li> </ul>					
Prerequisites for visibility					
<ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter <i>Enable energy function x</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Energy functions [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable function Power calculation [channel]</i> \ Option Yes</li> <li>Parameter <i>Enable function Load monitoring [channel]</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Load monitoring [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Parameter setting</i> \ Option <i>Individual</i></li> <li>Parameter <i>Type of monitoring [channel]</i> \ Option <i>General threshold monitoring (A ... F) / Maximum threshold monitoring (F)</i></li> <li>Parameter <i>Measurement unit</i> \ Option <i>Current</i></li> <li>Parameter <i>Change load thresholds via Group Objects [channel]</i> \ Option Yes</li> </ul> </li> </ul>					
<b>Set maximum threshold</b>	<b>Channel X: Load monitoring</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C</b>	<b>W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the maximum threshold.					
Telegram value:					
<ul style="list-style-type: none"> <li>10 ... 4600 W</li> </ul>					
Prerequisites for visibility					
<ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter <i>Enable energy function x</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Energy functions [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable function Power calculation [channel]</i> \ Option Yes</li> <li>Parameter <i>Enable function Load monitoring [channel]</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Load monitoring [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Parameter setting</i> \ Option <i>Individual</i></li> <li>Parameter <i>Type of monitoring [channel]</i> \ Option <i>General threshold monitoring (A ... F) / Maximum threshold monitoring (F)</i></li> <li>Parameter <i>Measurement unit</i> \ Option <i>Power</i></li> <li>Parameter <i>Change load thresholds via Group Objects [channel]</i> \ Option Yes</li> </ul> </li> </ul>					
<b>Set threshold Operation/Overload</b>	<b>Channel X: Load monitoring</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C</b>	<b>W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the Threshold Operation/Overload.					
Telegram value:					
<ul style="list-style-type: none"> <li>0.02 ... 20 A</li> </ul>					
Prerequisites for visibility					
<ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter <i>Enable energy function x</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Energy functions [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable function Power calculation [channel]</i> \ Option Yes</li> <li>Parameter <i>Enable function Load monitoring [channel]</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Load monitoring [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Parameter setting</i> \ Option <i>Individual</i></li> <li>Parameter <i>Type of monitoring [channel]</i> \ Option <i>General threshold monitoring (A ... F) / Operation monitoring (D)</i></li> <li>Parameter <i>Measurement unit</i> \ Option <i>Current</i></li> <li>Parameter <i>Change load thresholds via Group Objects [channel]</i> \ Option Yes</li> </ul> </li> </ul>					
<b>Set threshold Operation/Overload</b>	<b>Channel X: Load monitoring</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C</b>	<b>W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the Threshold Operation/Overload.					
Telegram value:					
<ul style="list-style-type: none"> <li>10 ... 4600 W</li> </ul>					
Prerequisites for visibility					
<ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter <i>Enable energy function x</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Energy functions [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable function Power calculation [channel]</i> \ Option Yes</li> <li>Parameter <i>Enable function Load monitoring [channel]</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Load monitoring [channel]</i> <ul style="list-style-type: none"> <li>Parameter <i>Parameter setting</i> \ Option <i>Individual</i></li> <li>Parameter <i>Type of monitoring [channel]</i> \ Option <i>General threshold monitoring (A ... F) / Operation monitoring (D)</i></li> <li>Parameter <i>Measurement unit</i> \ Option <i>Power</i></li> <li>Parameter <i>Change load thresholds via Group Objects [channel]</i> \ Option Yes</li> </ul> </li> </ul>					

Function	Group Object name	Data point type	Length	Flags	
<b>Set threshold Standby/Underload</b>	<b>Channel X: Load monitoring</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C</b>	<b>W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the threshold Standby/Underload.					
Telegram value:					
<ul style="list-style-type: none"> <li>0.02 ... 20 A</li> </ul>					
Prerequisites for visibility					
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F) / Standby monitoring (B)</i></li> <li>Parameter <a href="#">Measurement unit</a> \ Option <i>Current</i></li> <li>Parameter <a href="#">Change load thresholds via Group Objects [channel]</a> \ Option Yes</li> </ul> </li> </ul>					
<b>Set threshold Standby/Underload</b>	<b>Channel X: Load monitoring</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C</b>	<b>W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the threshold Standby/Underload.					
Telegram value:					
<ul style="list-style-type: none"> <li>10 ... 4600 W</li> </ul>					
Prerequisites for visibility					
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F) / Standby monitoring (B)</i></li> <li>Parameter <a href="#">Measurement unit</a> \ Option <i>Power</i></li> <li>Parameter <a href="#">Change load thresholds via Group Objects [channel]</a> \ Option Yes</li> </ul> </li> </ul>					
<b>Set threshold Underload/Operation</b>	<b>Channel X: Load monitoring</b>	<b>DPT 14.019</b>	<b>4 bytes</b>	<b>C</b>	<b>W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the threshold Underload/Operation.					
Telegram value:					
<ul style="list-style-type: none"> <li>0.02 ... 20 A</li> </ul>					
Prerequisites for visibility					
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F) / Operation monitoring (D)</i></li> <li>Parameter <a href="#">Measurement unit</a> \ Option <i>Current</i></li> <li>Parameter <a href="#">Change load thresholds via Group Objects [channel]</a> \ Option Yes</li> </ul> </li> </ul>					
<b>Set threshold Underload/Operation</b>	<b>Channel X: Load monitoring</b>	<b>DPT 14.056</b>	<b>4 bytes</b>	<b>C</b>	<b>W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), a new value for the threshold Underload/Operation.					
Telegram value:					
<ul style="list-style-type: none"> <li>10 ... 4600 W</li> </ul>					
Prerequisites for visibility					
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable function Power calculation [channel]</a> \ Option Yes</li> <li>Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F) / Operation monitoring (D)</i></li> <li>Parameter <a href="#">Measurement unit</a> \ Option <i>Power</i></li> <li>Parameter <a href="#">Change load thresholds via Group Objects [channel]</a> \ Option Yes</li> </ul> </li> </ul>					

Function	Group Object name	Data point type	Length	Flags
<b>Status Load</b>	<b>Channel X: Load monitoring</b>	<b>Non DPT</b>	<b>1 byte</b>	<b>C R T</b>
<p>This Group Object sends the status of the channel load on the bus (ABB i-bus® KNX). telegram value</p> <ul style="list-style-type: none"> <li>→ <a href="#">Coding, Group Object "Status Load", Page 232</a></li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> \ Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [channel]</a> \ Option <i>1 byte</i></li> </ul> </li> </ul>				
<b>Status Load On/Off</b>	<b>Channel X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the status of the load connected (load On/Off) on the bus (ABB i-bus® KNX). Telegram value for option <i>General threshold monitoring (A ... F)</i>:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when load On/Off [channel]</a></li> </ul> <p>Telegram value for option <i>On/Off status monitoring (A)</i>:</p> <ul style="list-style-type: none"> <li>1 = On</li> <li>0 = Off</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> \ Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>On/Off status monitoring (A)</i></li> </ul> </li> <li>or <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [channel]</a> \ Option <i>Bits</i></li> </ul> </li> </ul>				
<b>Status Load in operation</b>	<b>Channel X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the status of the load connected (load in operation yes/no) on the bus (ABB i-bus® KNX). Telegram value for option <i>General threshold monitoring (A ... F)</i>:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when load in operation [channel]</a></li> </ul> <p>Telegram value for option <i>Operation monitoring (D)</i>:</p> <ul style="list-style-type: none"> <li>1 = Yes</li> <li>0 = No</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> \ Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>Operation monitoring (D)</i></li> </ul> </li> <li>or <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [channel]</a> \ Option <i>Bits</i></li> </ul> </li> </ul>				
<b>Status Load in standby</b>	<b>Channel X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends the status of the load connected (load in standby yes/no) on the bus (ABB i-bus® KNX). Telegram value for option <i>General threshold monitoring (A ... F)</i>:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when load in standby [channel]</a></li> </ul> <p>Telegram value for option <i>Standby monitoring (B)</i>:</p> <ul style="list-style-type: none"> <li>1 = Yes</li> <li>0 = No</li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> \ Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>Standby monitoring (B)</i></li> </ul> </li> <li>or <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [channel]</a> \ Option <i>Bits</i></li> </ul> </li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Status Load in overload</b>	<b>Channel X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
This Group Object sends the status of the load connected (load in overload yes/no) on the bus (ABB i-bus® KNX). Telegram value:				
<ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when load in overload [channel]</a></li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> \ Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [channel]</a> \ Option <i>Bits</i></li> </ul> </li> </ul>				
<b>Status Load in underload</b>	<b>Channel X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
This Group Object sends the status of the load connected (load in underload yes/no) on the bus (ABB i-bus® KNX). Telegram value:				
<ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when load in underload [channel]</a></li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> \ Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [channel]</a> \ Option <i>Bits</i></li> </ul> </li> </ul>				
<b>Status Load maximum threshold exceeded</b>	<b>Channel X: Load monitoring</b>	<b>DPT 1.002</b>	<b>1 bit</b>	<b>C R T</b>
This Group Object sends the status of the load connected (load has exceeded maximum threshold yes/no) on the bus (ABB i-bus® KNX). Telegram value for option <i>General threshold monitoring (A ... F)</i> :				
<ul style="list-style-type: none"> <li>Depends on the setting in the parameter <a href="#">Value of Group Object when maximum threshold exceeded [channel]</a></li> </ul>				
Telegram value for option <i>Maximum threshold monitoring (F)</i> :				
<ul style="list-style-type: none"> <li>1 = Yes</li> <li>0 = No</li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> \ Parameter <a href="#">Enable function Load monitoring [channel]</a> \ Option Yes</li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Load monitoring [channel]</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Individual</i></li> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>Maximum threshold monitoring (F)</i></li> </ul> </li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>Parameter <a href="#">Type of monitoring [channel]</a> \ Option <i>General threshold monitoring (A ... F)</i></li> <li>Parameter <a href="#">Status Send load as [channel]</a> \ Option <i>Bits</i></li> </ul>				

## 8.12 Group Objects "Channel X": Contact supervision

Function	Group Object name	Data point type	Length	Flags
<b>Reset alarm</b>	<b>Channel X: Contact supervision</b>	<b>DPT 1.016</b>	<b>1 bit</b>	<b>C W</b>
This Group Object is used to receive, via the bus (ABB i-bus® KNX), the command to reset the contact supervision alarms. The alarms can be reset only if all errors have been rectified. Telegram value:				
<ul style="list-style-type: none"> <li>1 = Reset</li> <li>0 = No reaction</li> </ul>				
Prerequisites for visibility				
<ul style="list-style-type: none"> <li>Parameter window <a href="#">Configuration</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Enable output X</a> \ Option Yes</li> <li>Parameter <a href="#">Enable energy function x</a> \ Option Yes</li> </ul> </li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Energy functions [channel]</a> \ Parameter <a href="#">Enable function Contact supervision</a> \ Option Yes</li> <li>Parameter window <a href="#">Switch Actuator X</a> \ Parameter window <a href="#">Contact supervision</a> <ul style="list-style-type: none"> <li>Parameter <a href="#">Parameter setting</a> \ Option <i>Apply from template</i></li> <li>Parameter <a href="#">Reset alarm via Group Object</a> \ Option Yes</li> </ul> </li> </ul>				

Function	Group Object name	Data point type	Length	Flags
<b>Contact open and current flows</b>	<b>Channel X: Contact supervision</b>	<b>DPT 1.005</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends an alarm telegram on the bus (ABB i-bus® KNX) if the relay contact for the output is open and current is flowing.</p> <p>Telegram value:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <i>Value of Group Object when contact open and current flows</i></li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter <i>Enable energy function x</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Energy functions [channel]</i> \ Parameter <i>Enable function Contact supervision</i> \ Option Yes</li> </ul>				
<b>Contact closed and no current flows</b>	<b>Channel X: Contact supervision</b>	<b>DPT 1.005</b>	<b>1 bit</b>	<b>C R T</b>
<p>This Group Object sends an alarm telegram on the bus (ABB i-bus® KNX) if the relay contact for the output is closed and no current is flowing.</p> <p>Telegram value:</p> <ul style="list-style-type: none"> <li>Depends on the setting in the parameter <i>Value of Group Object when contact closed and no current flows</i></li> </ul> <p>Prerequisites for visibility</p> <ul style="list-style-type: none"> <li>Parameter window <i>Configuration</i> <ul style="list-style-type: none"> <li>Parameter <i>Enable output X</i> \ Option Yes</li> <li>Parameter <i>Enable energy function x</i> \ Option Yes</li> </ul> </li> <li>Parameter window <i>Switch Actuator X</i> \ Parameter window <i>Energy functions [channel]</i> \ Parameter <i>Enable function Contact supervision</i> \ Option Yes</li> </ul>				

## 9 Operation

### 9.1 Manual operation

The relays for the outputs can be switched On (I) and Off (O) manually using the toggle switches. The relays can also be switched if there is a bus voltage failure and by active safety functions.



**DANGER – Accidents due to unexpected reaction of the devices connected**

If the relays are switched, devices further away or idle devices may react unexpectedly.

Before the toggle switches are operated:

- ▶ Identify locations and areas of action of the devices connected
- ▶ Tell persons to leave possible hazardous zones and cordon off hazardous zones.

**i Note**

If the relays are switched manually using the toggle switches, KNX operation is overridden. Manually set contact positions are not detected by the device and are not set again automatically after bus voltage recovery or after ETS download.

## **10 Maintenance and cleaning**

### **10.1 Maintenance**

The device is maintenance-free if used properly. In the event of damage, e.g. during transport and/or storage, repairs are not allowed to be made.

### **10.2 Cleaning**

1. Disconnect the device from the electrical power supply before cleaning.
2. Clean dirty devices using a dry cloth or a slightly damp cloth.



# 11 Removal and disposal

## 11.1 Removal

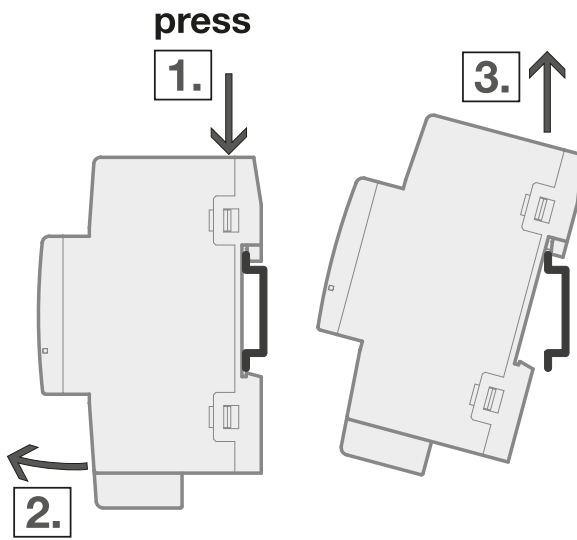


Fig. 46: Removing from the mounting rail

1. Press on the top of the device.
2. Release the bottom of the device from the mounting rail.
3. Lift the device up and off the mounting rail.

## 11.2 Environment

Consider environmental protection.

Electrical and electronic devices must not be disposed of as domestic waste.



The device contains valuable resources that can be recycled. Therefore, please take the device to a suitable recycling center. All packaging materials and devices are provided with markings and test seals for proper disposal. Always dispose of packaging material and electrical devices or their components at collection points or disposal companies authorized for this purpose. The products comply with the statutory requirements, particularly the law on electrical and electronic equipment and the REACH regulation. (EU directive 2012/19/EU WEEE and 2011/65/EU RoHS) (EU REACH regulation and the law implementing the regulation (EC) no.1907/2006)

## 12 Planning and application

### 12.1 Priorities

#### 12.1.1 Priorities for Switch Actuator

- a) Manual operation via toggle switches
- b) Safety functions:
  - Safety priority 1 (device)
  - Forced operation (output)
  - Safety priority 2 (device)
  - Safety priority 3 (device)
  - Block (output)
- c) Bus voltage failure
- d) i-bus® Tool
- e) Load shedding
- f) Operating mode *KNX operation*
- g) Bus voltage recovery

More information: → [Function diagram Switch Actuator, Page 42.](#)

#### **i** Note

The interface to i-bus® Tool is available from the following software versions:

- Application from V1.2
- Firmware from V0.2.0

## 12.2 Basic knowledge

### 12.2.1 AC-1, AC-3, AC-5, AX and C load

In Intelligent Building Control, different switching capacities and performance specifications required by special applications have become established for the industrial area and for building control. These performance specifications are rooted in the respective national and international standards. The tests are defined to simulate typical applications, e.g. motor loads (industrial) or fluorescent lamps (residential).

#### **Industrial area**

Specifications AC-1 and AC-3 are switching capacity specifications that have become established in the industrial field. These switching capacities are defined in the standard EN IEC 60947-4-1 "Low-voltage switchgear and controlgear – Part 4-1: Contactors and motor-starters – Electromechanical contactors and motor-starters". The standard describes starters and/or contactors that are used mainly in industrial applications.

Typical applications:

- AC-1 – non-inductive or slightly inductive load, resistance furnaces (relates to switching of ohmic loads,  $\cos \varphi = 0.8$ )
- AC-3 – squirrel-cage motors: starting, switching off motors during running (relates to (inductive) motor load,  $\cos \varphi = 0.45$ )
- AC-5a – switching of electric discharge lamps

### Building control

The AX designation has come into use in the field of building control. AX refers to a (capacitive) fluorescent lighting load. The term "switchable capacitive loads" (200 µF, 140 µF, 70 µF or 35 µF) is used in connection with fluorescent lighting loads. These switching capacities are defined in the standard EN 60669 "Switches for household and similar fixed electrical installations". The standard describes switches that are used mainly in industrial applications. Testing with 70 µF is required for devices with a rated current of 6 A, testing with 140 µF for devices with a rated current > 6 A.

### Comparison of AC and AX

The switching capacity specifications AC and AX are not directly comparable with each other. The following switching capacity qualities can be identified:

- Low switching capacity: AC-1 – primarily resistive loads
- Medium switching capacity: AX - fluorescent lighting loads according to EN 60669: 70 µF (6 A), 140 µF (10 A, 16 A)
- High switching capacity:
  - AC-3 - motor loads
  - C load - fluorescent lighting loads (200 µF)

The specifications AC-3 and AX are almost equivalent. A device that passed the test for AC3 according to DIN 60947 will very likely also pass the tests according to EN 60669 with 200 µF.

In summary the following can be stated:

- In the industrial area, the common designation is "AC-3 load".
- In building control, the common designation is "AX load" or "C load".

The switching capacity differences must be taken into account while selecting a Switch Actuator.

## 12.2.2 Coding, Group Object "Receive load shedding stage"

The information in the Group Object *Receive load shedding stage* is coded as follows:




Fig. 47: Coding, data point type 236.001

The bit fields d and p contain information for the central load control.

Bit d<sup>0</sup> activates or deactivates the central load control priority:

- 1 = Central load control priority is not active
- 0 = Central load control priority is active

The bits p<sup>2</sup> to p<sup>0</sup> contain the central load control priorities. The bits must be set to 000, because the device only supports this priority.

The bits m<sup>3</sup> to m<sup>0</sup> contain the number of the load shedding stage (1 ... 15).

This produces the following coding:

- 1000mmmm or 00000000 = Load shedding stage not active
- 00000001 = Load shedding stage 1 (lowest priority)
- ...
- 00001111 = Load shedding stage 15 (highest priority)

All other values are not evaluated and discarded.

### 12.2.3 Coding, Group Object "Set load shedding stage"

The information in the Group Object *Set load shedding stage* is coded as follows:




Fig. 48: Coding, data point type 236.001

The bit fields d and p contain information for the central load control. This information is not relevant for the device, the bits must be set to 0000.

The bits m<sup>3</sup> to m<sup>0</sup> contain the number of the load shedding stage (1 ... 15).

This produces the following coding:

- 00000001 = Set load shedding stage 1
- ...
- 00001111 = Set load shedding stage 15

All other values are not evaluated and discarded.

### 12.2.4 Coding, Group Object "Status Load"

The information in the Group Objects *Status Load* (channel) and *Status Load* (group) is coded as follows:

status	DEC	BIN
Off	0	00000000
Standby	1	00000001
Underload	2	00000010
Operation	3	00000011
Overload	4	00000100
Overload & maximum threshold exceeded	5	00000101

Tab. 30: Coding, Group Object "Status Load"

### 12.2.5 Ballast calculation

A ballast is used to operate gas-discharge lamps, e.g. fluorescent lamps. A ballast converts the mains voltage to the optimal operating voltage for the lamp and allows the lamp to strike (switch on). With the choke starter circuit, the lamps strike with a time offset, with the ballast circuit the lamps strike almost simultaneously.

For LED lamps the ballast is termed the LED driver or LED converter. The LED driver provides constant direct current or smoothed direct current for operating the lamps connected.

Input capacitors in the ballast's electronic circuit are required for storing charge to rectify and stabilize the alternating voltage or current on the primary side. The input capacitors charge at the moment of switch-on. The charging of the capacitors briefly generates a very high inrush current  $I_{peak}$ . If several ballasts are used in the same circuit, simultaneous charging of the capacitors can cause very high inrush currents to flow. The individual inrush currents must be taken into account in the design of the switching contacts and the selection of the back-up fuse. The inrush current is dependent on the ballast power, types and number of elements.

To determine the maximum number of ballasts that can be connected per output, the inrush current  $I_{\text{peak}}$  and the associated pulse width of the ballast must be known → Technical data for the ballast.

Typical values for the inrush current  $I_{\text{peak}}$ :

- Single-element ballast with T5/T8 fluorescent lamps: 15 ... 50 A, pulse time 120 ... 200  $\mu\text{s}$
- LED driver: 3 ... 50 A, pulse time 40 ... 250  $\mu\text{s}$

Refer to the related device's technical data for the maximum inrush current  $I_{\text{peak}}$  of the switching outputs → [Product overview, Page 11](#).

#### Example

Sample calculation for determining the maximum number of ballasts that can be connected per output:

- Ballast: ABB i-bus® KNX Ballast 1 x 58 CF, inrush current  $I_{\text{peak}} = 33.9 \text{ A}$  (147.1  $\mu\text{s}$ )
- Maximum permissible inrush current  $I_{\text{peak}}$  of the output = 200 A (150  $\mu\text{s}$ )
- Calculation:  $200 \text{ A} / 33.9 \text{ A} = 5.89$

Result: Five ballasts can be connected per output.

## 12.2.6 Refreshed KNX state

If an input or an output is blocked by device-specific functions (e.g. manual operation, alarms, block, forced operation, switching delay), it will not react to telegrams received via the bus (ABB i-bus® KNX) while the block is active.

While a block is active, the device processes the telegrams received in the background. Active functions (e.g. staircase lighting, logic, position, brightness value) are executed in the background, but the results are not sent. The actual value is sent to the input or output when the block is canceled.

If the input or output has not received any telegrams via the bus (ABB i-bus® KNX) while a block is active, the input or output will assume the state it was in before the block.

## 12.2.7 Sending and switching delay

No telegrams are sent on the bus during the sending and switching delay (ABB i-bus® KNX).

Telegrams received (e.g. requests from a visualization system) are sent to the outputs after the sending and switching delay expires. The state of the outputs is set according to the settings in the ETS application or the telegram values of the Group Objects.

Time sequences (e.g. staircase lighting time) are started immediately during the sending and switching delay. If, at the time of reception, the staircase lighting time is smaller than the remaining sending and switching delay, the staircase lighting time elapses during the sending and switching delay. After the sending and switching delay has elapsed there is no switching command, the staircase lighting is not switched on.

#### Example

The delay time avoids unnecessary relay switching operations.

If an Off telegram is received during the sending and switching delay, the On telegram is overwritten and the relay is not switched.

#### **i** Note

The sending and switching delay includes the device initialization time.

## 12.2.8 Telegram rate limit

The bus load generated by the device can be limited using the telegram rate limit. This limit relates to all telegrams sent by the device.

The device counts the number of telegrams sent within the parameterized period. As soon as the maximum number of sent telegrams is reached, no further telegrams are sent on the bus (ABB i-bus® KNX) until the end of the period. A new period commences automatically at the end of the previous period. The telegram counter is reset to zero. Telegrams can be sent again. The Group Object always sends the current telegram value.

The first period (break time) is not precisely predefined. The break time can be anywhere between 0 seconds and the parameterized period. The subsequent periods correspond to the parameterized time → parameter *In period (0 = deactivated)*.

### Example

- Number of telegrams = 20
- Maximum number of telegrams per period = 5
- Period = 5 s

The device immediately sends 5 telegrams. The next 5 telegrams are sent after a maximum of 5 seconds. From this point, a further 5 telegrams are sent via the bus (ABB i-bus® KNX) every 5 seconds.

## 12.2.9 Telegram values 1-bit Group Objects "Status Load"

The following tables show the dependencies and the telegram values for the 1-bit Group Objects "Status Load":

Group Object	Telegram value depends on setting in the parameter	Example telegram value
<i>Status Load maximum threshold exceeded</i>	<i>Value of Group Object when maximum threshold exceeded [channel]</i>	1
<i>Status Load in overload</i>	<i>Value of Group Object when load in overload [channel]</i>	1
<i>Status Load in operation</i>	<i>Value of Group Object when load in operation [channel]</i>	1
<i>Status Load in underload</i>	<i>Value of Group Object when load in underload [channel]</i>	1
<i>Status Load in standby</i>	<i>Value of Group Object when load in standby [channel]</i>	1
<i>Status Load On/Off</i>	<i>Value of Group Object when load On/Off [channel]</i>	1 (On)/0 (Off)

Tab. 31: Dependencies values, 1-bit Group Objects "Status Load"

status	<i>Status Load maximum threshold exceeded</i>	<i>Status Load in overload</i>	<i>Status Load in operation</i>	<i>Status Load in underload</i>	<i>Status Load in standby</i>	<i>Status Load On/Off</i>
Load maximum threshold exceeded	1	1	0	0	0	1
Load in overload	0	1	0	0	0	1
Load in operation	0	0	1	0	0	1
Load in underload	0	0	0	1	0	1
Load in standby	0	0	0	0	1	1
Load On	0	0	0	0	0	1
Load Off	0	0	0	0	0	0

Tab. 32: Telegram values 1-bit Group Objects "Status Load"

## 12.2.10 Value Read

Using the command "Value Read" the value of the state of a group address in a Group Object can be read. A Group Object can only reply if the "Read" flag is set. The group address first in the Group Object (sending group address) is always sent. The reply is only sent once and can only be understood by the Group Object that triggered the "Value Read" command. The value received is written to the reading Group Object.

## 12.2.11 Central Group Objects

The central Group Objects of the device can be used to switch several device outputs at the same time.

The following Group Object is available for central control of the Switch Actuator outputs:

- [Switch](#)

### **i** Note

In the parameter [Switch output reacts to central Switch Group Object](#), it can be defined for each Switch Actuator output whether the output reacts to the central Group Object.

The following Group Object is available for central control of the Scenes:

- [Scene 1 ... 64](#)

## 12.2.12 Cyclical monitoring

The reception of a telegram on a Group Object can be monitored using the cyclical monitoring. If a telegram is not received on the Group Object within a parameterizable time (monitoring cycle), the sending device may be faulty or the bus cable to the sending device may be interrupted. The reaction to the loss of a telegram can be set in the application-specific parameters for the device.

After the receipt of a telegram, ETS download or bus voltage recovery, the monitoring cycle is restarted.

### **i** Note

The monitoring cycle in the device should be at least quadruple the cyclical sending time of the sending device. As a result, the reactions set will not be triggered immediately if a signal is missing, e.g. due to high bus load.

## 13 Appendix

### 13.1 Scope of delivery

The device is supplied together with the following components:

- 1x Switch Actuator
- 1 x installation and operating instructions
- 1 x bus connection terminal (red/black)
- 1 x KNX connection cover cap



## 13.2 Table of values, Group Object "Status byte all active priorities"

The following code table contains the telegram code of the Group Object *Status byte all active priorities* for a switching output.

All active priorities that affect the switching of the output are indicated in the status byte.

x = Value 1

Empty = Value 0

Bit no.	Hexadecimal	7	6	5	4	3	2	1	0
8-bit value	Hexadecimal	i-bus® Tool	Load shedding	Safety priority 3	Safety priority 2	Safety priority 1	forced operation	Block	Not used
0	00								
1	01								
2	02							x	
3	03							x	
4	04						x		
5	05						x		
6	06						x	x	
7	07						x	x	
8	08					x			
9	09					x			
10	0A					x		x	
11	0B					x		x	
12	0C					x	x		
13	0D					x	x		
14	0E					x	x	x	
15	0F					x	x	x	
16	10			x					
17	11			x					
18	12			x				x	
19	13			x				x	
20	14			x			x		
21	15			x			x		
22	16			x			x	x	
23	17			x			x	x	
24	18			x	x				
25	19			x	x				
26	1A			x	x			x	
27	1B			x	x			x	
28	1C			x	x	x			
29	1D			x	x	x			
30	1E			x	x	x	x	x	
31	1F			x	x	x	x	x	
32	20			x					
33	21			x					
34	22			x				x	
35	23			x				x	
36	24			x			x		
37	25			x			x		
38	26			x			x	x	
39	27			x			x	x	
40	28			x		x			
41	29			x		x			
42	2A			x		x		x	
43	2B			x		x		x	
44	2C			x		x	x		
45	2D			x		x	x		
46	2E			x		x	x	x	
47	2F			x		x	x	x	
48	30			x	x				
49	31			x	x				
50	32			x	x			x	
51	33			x	x			x	
52	34			x	x		x		
53	35			x	x		x		
54	36			x	x		x	x	
55	37			x	x		x	x	
56	38			x	x	x			
57	39			x	x	x			
58	3A			x	x	x		x	
59	3B			x	x	x		x	
60	3C			x	x	x	x		
61	3D			x	x	x	x		
62	3E			x	x	x	x	x	
63	3F			x	x	x	x	x	

Bit no.	Hexadecimal	7	6	5	4	3	2	1	0
8-bit value	Hexadecimal	i-bus® Tool	Load shedding	Safety priority 3	Safety priority 2	Safety priority 1	forced operation	Block	Not used
64	40		x						
65	41		x						
66	42		x						x
67	43		x						x
68	44		x						x
69	45		x						x
70	46		x						x
71	47		x						x
72	48		x						x
73	49		x						x
74	4A		x						x
75	4B		x						x
76	4C		x						x
77	4D		x						x
78	4E		x						x
79	4F		x						x
80	50		x						x
81	51		x						x
82	52		x						x
83	53		x						x
84	54		x						x
85	55		x						x
86	56		x						x
87	57		x						x
88	58		x						x
89	59		x						x
90	5A		x						x
91	5B		x						x
92	5C		x						x
93	5D		x						x
94	5E		x						x
95	5F		x						x
96	60		x						x
97	61		x						x
98	62		x						x
99	63		x						x
100	64		x						x
101	65		x						x
102	66		x						x
103	67		x						x
104	68		x						x
105	69		x						x
106	6A		x						x
107	6B		x						x
108	6C		x						x
109	6D		x						x
110	6E		x						x
111	6F		x						x
112	70		x						x
113	71		x						x
114	72		x						x
115	73		x						x
116	74		x						x
117	75		x						x
118	76		x						x
119	77		x						x
120	78		x						x
121	79		x						x
122	7A		x						x
123	7B		x						x
124	7C		x						x
125	7D		x						x
126	7E		x						x
127	7F		x						x

Bit no.		7	6	5	4	3	2	1	0
8-bit value	Hexadecimal	i-bus® Tool	Load shedding	Safety priority 3	Safety priority 2	Safety priority 1	forced operation	Block	Not used
128	80	x							
129	81	x							
130	82	x						x	
131	83	x						x	
132	84	x					x		
133	85	x					x		
134	86	x					x	x	
135	87	x					x	x	
136	88	x				x			
137	89	x				x			
138	8A	x				x		x	
139	8B	x				x		x	
140	8C	x				x	x		
141	8D	x				x	x		
142	8E	x				x	x	x	
143	8F	x				x	x	x	
144	90	x			x				
145	91	x			x				
146	92	x			x			x	
147	93	x			x			x	
148	94	x			x		x		
149	95	x			x		x		
150	96	x			x		x	x	
151	97	x			x		x	x	
152	98	x			x	x			
153	99	x			x	x			
154	9A	x			x	x		x	
155	9B	x			x	x		x	
156	9C	x			x	x	x		
157	9D	x			x	x	x		
158	9E	x			x	x	x	x	
159	9F	x			x	x	x	x	
160	A0	x		x					
161	A1	x		x					
162	A2	x		x				x	
163	A3	x		x				x	
164	A4	x		x			x		
165	A5	x		x			x		
166	A6	x		x			x	x	
167	A7	x		x			x	x	
168	A8	x		x		x			
169	A9	x		x		x			
170	AA	x		x		x		x	
171	AB	x		x		x		x	
172	AC	x		x		x	x		
173	AD	x		x		x	x		
174	AE	x		x		x	x	x	
175	AF	x		x		x	x	x	
176	B0	x		x	x				
177	B1	x		x	x				
178	B2	x		x	x			x	
179	B3	x		x	x			x	
180	B4	x		x	x		x		
181	B5	x		x	x		x		
182	B6	x		x	x		x	x	
183	B7	x		x	x		x	x	
184	B8	x		x	x	x			
185	B9	x		x	x	x			
186	BA	x		x	x	x		x	
187	BB	x		x	x	x		x	
188	BC	x		x	x	x	x		
189	BD	x		x	x	x	x		
190	BE	x		x	x	x	x	x	
191	BF	x		x	x	x	x	x	

Bit no.		7	6	5	4	3	2	1	0
8-bit value	Hexadecimal	i-bus® Tool	Load shedding	Safety priority 3	Safety priority 2	Safety priority 1	forced operation	Block	Not used
192	C0	x	x						
193	C1	x	x						
194	C2	x	x						x
195	C3	x	x						x
196	C4	x	x				x		
197	C5	x	x				x		
198	C6	x	x				x	x	
199	C7	x	x				x	x	
200	C8	x	x			x			
201	C9	x	x			x			
202	CA	x	x			x			x
203	CB	x	x			x			x
204	CC	x	x			x	x		
205	CD	x	x			x	x		
206	CE	x	x			x	x	x	
207	CF	x	x			x	x	x	
208	D0	x	x		x				
209	D1	x	x		x				
210	D2	x	x		x				x
211	D3	x	x		x				x
212	D4	x	x		x		x		
213	D5	x	x		x		x		
214	D6	x	x		x		x	x	
215	D7	x	x		x		x	x	
216	D8	x	x		x	x			
217	D9	x	x		x	x			
218	DA	x	x		x	x			x
219	DB	x	x		x	x			x
220	DC	x	x		x	x	x		
221	DD	x	x		x	x	x		
222	DE	x	x		x	x	x	x	
223	DF	x	x		x	x	x	x	
224	E0	x	x	x					
225	E1	x	x	x					
226	E2	x	x	x					x
227	E3	x	x	x					x
228	E4	x	x	x			x		
229	E5	x	x	x			x		
230	E6	x	x	x			x	x	
231	E7	x	x	x			x	x	
232	E8	x	x	x		x			
233	E9	x	x	x		x			
234	EA	x	x	x		x			x
235	EB	x	x	x		x			x
236	EC	x	x	x		x	x		
237	ED	x	x	x		x	x		
238	EE	x	x	x		x	x	x	
239	EF	x	x	x		x	x	x	
240	F0	x	x	x	x				
241	F1	x	x	x	x				
242	F2	x	x	x	x				x
243	F3	x	x	x	x				x
244	F4	x	x	x	x		x		
245	F5	x	x	x	x		x		
246	F6	x	x	x	x		x	x	
247	F7	x	x	x	x		x	x	
248	F8	x	x	x	x	x			
249	F9	x	x	x	x	x			
250	FA	x	x	x	x	x			x
251	FB	x	x	x	x	x			x
252	FC	x	x	x	x	x	x		
253	FD	x	x	x	x	x	x		
254	FE	x	x	x	x	x	x	x	
255	FF	x	x	x	x	x	x	x	

Tab. 37: Table of values, Group Object "Status information"

### 13.3 Table of values, Group Object "Scene 1 ... 64"

The following table contains the telegram code of the 64 Scenes. Each 8-bit Scene is indicated in hexadecimal and binary codes. The 8-bit value is sent when a Scene is recalled/stored.

x = Value 1

Empty = Value 0

Bit no.	7	6	5	4	3	2	1	0		
8-bit value	Hexadecimal	Recall/store	Not defined	Binary number codes	Binary number codes	Binary number codes	Binary number codes	Binary number codes	Scene number	Recall A Store S No reaction -
0	00								1	A
1	01							x	2	A
2	02						x		3	A
3	03						x	x	4	A
4	04					x			5	A
5	05					x		x	6	A
6	06					x	x		7	A
7	07					x	x	x	8	A
8	08				x				9	A
9	09				x			x	10	A
10	0A				x		x		11	A
11	0B				x		x	x	12	A
12	0C				x	x			13	A
13	0D				x	x		x	14	A
14	0E				x	x	x		15	A
15	0F				x	x	x	x	16	A
16	10			x					17	A
17	11			x				x	18	A
18	12			x			x		19	A
19	13			x			x	x	20	A
20	14			x		x			21	A
21	15			x		x		x	22	A
22	16			x		x	x		23	A
23	17			x		x	x	x	24	A
24	18			x	x				25	A
25	19			x	x			x	26	A
26	1A			x	x		x		27	A
27	1B			x	x		x	x	28	A
28	1C			x	x	x			29	A
29	1D			x	x	x		x	30	A
30	1E			x	x	x	x		31	A
31	1F			x	x	x	x	x	32	A
32	20			x					33	A
33	21			x				x	34	A
34	22			x					35	A
35	23			x			x	x	36	A
36	24			x		x			37	A
37	25			x		x		x	38	A
38	26			x		x	x		39	A
39	27			x		x	x	x	40	A
40	28			x		x			41	A
41	29			x		x		x	42	A
42	2A			x		x		x	43	A
43	2B			x		x		x	44	A
44	2C			x		x	x		45	A
45	2D			x		x	x		46	A
46	2E			x		x	x	x	47	A
47	2F			x		x	x	x	48	A
48	30			x	x				49	A
49	31			x	x			x	50	A
50	32			x	x			x	51	A
51	33			x	x			x	52	A
52	34			x	x			x	53	A
53	35			x	x			x	54	A
54	36			x	x			x	55	A
55	37			x	x			x	56	A
56	38			x	x			x	57	A
57	39			x	x			x	58	A
58	3A			x	x			x	59	A
59	3B			x	x			x	60	A
60	3C			x	x			x	61	A
61	3D			x	x			x	62	A
62	3E			x	x			x	63	A

Bit no.	7	6	5	4	3	2	1	0		
8-bit value	Hexadecimal	Recall/store	Not defined	Binary number codes	Binary number codes	Binary number codes	Binary number codes	Binary number codes	Scene number	Recall A Store S No reaction -
63	3F			x	x	x	x	x	64	A
64	40		x						-	-
65	41		x					x	-	-
66	42		x				x		-	-
67	43		x				x	x	-	-
68	44		x			x			-	-
69	45		x			x		x	-	-
70	46		x			x	x		-	-
71	47		x			x	x	x	-	-
72	48		x			x			-	-
73	49		x			x		x	-	-
74	4A		x			x		x	-	-
75	4B		x			x		x	-	-
76	4C		x			x	x		-	-
77	4D		x			x	x	x	-	-
78	4E		x			x	x	x	-	-
79	4F		x			x	x	x	-	-
80	50		x		x				-	-
81	51		x		x			x	-	-
82	52		x		x			x	-	-
83	53		x		x			x	-	-
84	54		x		x			x	-	-
85	55		x		x			x	-	-
86	56		x		x			x	-	-
87	57		x		x			x	-	-
88	58		x		x		x		-	-
89	59		x		x			x	-	-
90	5A		x		x			x	-	-
91	5B		x		x			x	-	-
92	5C		x		x			x	-	-
93	5D		x		x			x	-	-
94	5E		x		x			x	-	-
95	5F		x		x			x	-	-
96	60		x		x				-	-
97	61		x		x			x	-	-
98	62		x		x			x	-	-
99	63		x		x			x	-	-
100	64		x		x			x	-	-
101	65		x		x			x	-	-
102	66		x		x			x	-	-
103	67		x		x			x	-	-
104	68		x		x			x	-	-
105	69		x		x			x	-	-
106	6A		x		x			x	-	-
107	6B		x		x			x	-	-
108	6C		x		x			x	-	-
109	6D		x		x			x	-	-
110	6E		x		x			x	-	-
111	6F		x		x			x	-	-
112	70		x		x			x	-	-
113	71		x		x			x	-	-
114	72		x		x			x	-	-
115	73		x		x			x	-	-
116	74		x		x			x	-	-
117	75		x		x			x	-	-
118	76		x		x			x	-	-
119	77		x		x			x	-	-
120	78		x		x			x	-	-
121	79		x		x			x	-	-
122	7A		x		x			x	-	-
123	7B		x		x			x	-	-
124	7C		x		x			x	-	-
125	7D		x		x			x	-	-

Bit no.	7	6	5	4	3	2	1	0		
8-bit value	Hexadecimal	Recall/store	Not defined	Binary number codes	Binary number codes	Binary number codes	Binary number codes	Binary number codes	Scene number	Recall A Store S No reaction –
126	7E		x	x	x	x	x	x	-	-
127	7F		x	x	x	x	x	x	-	-
128	80	x							1	S
129	81	x						x	2	S
130	82	x						x	3	S
131	83	x						x	4	S
132	84	x					x		5	S
133	85	x				x		x	6	S
134	86	x				x	x		7	S
135	87	x				x	x	x	8	S
136	88	x			x				9	S
137	89	x			x			x	10	S
138	8A	x			x		x		11	S
139	8B	x			x		x	x	12	S
140	8C	x			x	x			13	S
141	8D	x			x	x		x	14	S
142	8E	x			x	x	x		15	S
143	8F	x			x	x	x	x	16	S
144	90	x			x				17	S
145	91	x			x			x	18	S
146	92	x			x			x	19	S
147	93	x			x			x	20	S
148	94	x			x		x		21	S
149	95	x			x	x		x	22	S
150	96	x			x		x	x	23	S
151	97	x			x		x	x	24	S
152	98	x			x	x			25	S
153	99	x			x	x		x	26	S
154	9A	x			x	x		x	27	S
155	9B	x			x	x		x	28	S
156	9C	x			x	x	x		29	S
157	9D	x			x	x	x	x	30	S
158	9E	x			x	x	x	x	31	S
159	9F	x			x	x	x	x	32	S
160	A0	x			x				33	S
161	A1	x			x			x	34	S
162	A2	x			x			x	35	S
163	A3	x			x			x	36	S
164	A4	x			x			x	37	S
165	A5	x			x			x	38	S
166	A6	x			x			x	39	S
167	A7	x			x			x	40	S
168	A8	x			x				41	S
169	A9	x			x			x	42	S
170	AA	x			x			x	43	S
171	AB	x			x			x	44	S
172	AC	x			x			x	45	S
173	AD	x			x			x	46	S
174	AE	x			x			x	47	S
175	AF	x			x			x	48	S
176	B0	x			x				49	S
177	B1	x			x			x	50	S
178	B2	x			x			x	51	S
179	B3	x			x			x	52	S
180	B4	x			x			x	53	S
181	B5	x			x			x	54	S
182	B6	x			x			x	55	S
183	B7	x			x			x	56	S
184	B8	x			x			x	57	S
185	B9	x			x			x	58	S
186	BA	x			x			x	59	S
187	BB	x			x			x	60	S
188	BC	x			x			x	61	S
189	BD	x			x			x	62	S
190	BE	x			x			x	63	S

Tab. 38: Code table 8-bit Scene

Bit no.	7	6	5	4	3	2	1	0		
8-bit value	Hexadecimal	Recall/store	Not defined	Binary number codes	Binary number codes	Binary number codes	Binary number codes	Binary number codes	Scene number	Recall A Store S No reaction –
191	BF	x		x	x		x	x	64	S
192	C0	x	x						-	-
193	C1	x	x						-	-
194	C2	x	x					x	-	-
195	C3	x	x					x	-	-
196	C4	x	x				x		-	-
197	C5	x	x				x		-	-
198	C6	x	x				x	x	-	-
199	C7	x	x				x	x	-	-
200	C8	x	x				x		-	-
201	C9	x	x				x		-	-
202	CA	x	x				x	x	-	-
203	CB	x	x				x	x	-	-
204	CC	x	x				x	x	-	-
205	CD	x	x				x	x	-	-
206	CE	x	x				x	x	-	-
207	CF	x	x				x	x	-	-
208	D0	x	x				x		-	-
209	D1	x	x				x		-	-
210	D2	x	x				x		-	-
211	D3	x	x				x	x	-	-
212	D4	x	x				x		-	-
213	D5	x	x				x		-	-
214	D6	x	x				x	x	-	-
215	D7	x	x				x	x	-	-
216	D8	x	x				x	x	-	-
217	D9	x	x				x	x	-	-
218	DA	x	x				x	x	-	-
219	DB	x	x				x	x	-	-
220	DC	x	x				x	x	-	-
221	DD	x	x				x	x	-	-
222	DE	x	x				x	x	-	-
223	DF	x	x				x	x	-	-
224	E0	x	x				x		-	-
225	E1	x	x				x		-	-
226	E2	x	x				x		-	-
227	E3	x	x				x	x	-	-
228	E4	x	x				x		-	-
229	E5	x	x				x		-	-
230	E6	x	x				x	x	-	-
231	E7	x	x				x	x	-	-
232	E8	x	x				x		-	-
233	E9	x	x				x		-	-
234	EA	x	x				x	x	-	-
235	EB	x	x				x	x	-	-
236	EC	x	x				x	x	-	-
237	ED	x	x				x	x	-	-
238	EE	x	x				x	x	-	-
239	EF	x	x				x	x	-	-
240	FO	x	x				x		-	-
241	F1	x	x				x		-	-
242	F2	x	x				x		-	-
243	F3	x	x				x	x	-	-
244	F4	x	x				x		-	-
245	F5	x	x				x		-	-
246	F6	x	x				x	x	-	-
247	F7	x	x				x	x	-	-
248	F8	x	x				x	x	-	-
249	F9	x	x				x		-	-
250	FA	x	x				x	x	-	-
251	FB	x	x				x	x	-	-
252	FC	x	x				x	x	-	-
253	FD	x	x				x	x	-	-
254	FE	x	x				x	x	-	-
255	FF	x	x				x	x	-	-



---

**ABB STOTZ-KONTAKT GmbH**

Eppelheimer Straße 82

69123 Heidelberg, Germany

Tel.: +49 (0)6221 701 607

Fax: +49 (0)6221 701 724

Email: [knx.marketing@de.abb.com](mailto:knx.marketing@de.abb.com)

**Additional information and regional  
points of contact:**

[www.abb.de/knx](http://www.abb.de/knx)

[www.abb.com/knx](http://www.abb.com/knx)

---

© Copyright 2022 ABB. We reserve the right to make technical changes to the products as well as amendments to the content of this document at any time without advance notice. The agreed properties are definitive for any orders placed. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document. We reserve all rights in this document and in the subject matter and illustrations contained therein. Reproduction, transfer to third parties or processing of the content – including sections thereof – is not permitted without the prior written consent of ABB AG.

